
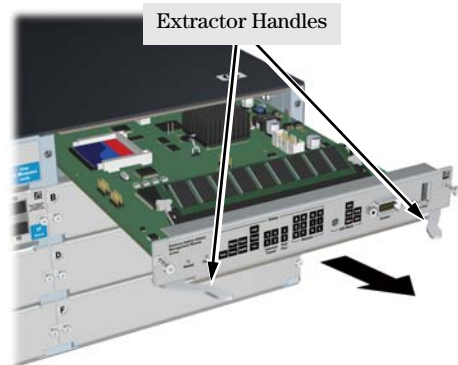


Replacement Management Module Instructions

for the ProCurve Series 5400zl Switches Management Module

The switch does not have to be powered off, however when the management module is removed all ports will lose communication. ProCurve Networking recommends replacing the Management module, flash disk or battery (on the Management module) during scheduled down time.

1. On the module unscrew the retaining screws enough to disconnect them from the threaded holes in the switch.
2. Using the extractor handles, pull the module out from the slot.
3. Remove the flash disk from the failed module and install it into the replacement module.
4. Remove the battery from the failed module and dispose of properly.
5. Install the new battery that came with the replacement module into the replacement module.
6. Install the replacement module into the switch.
7. Use an equal amount of pressure and push both extractor handles closed to completely seat the module.
8. Tighten the retaining screws.

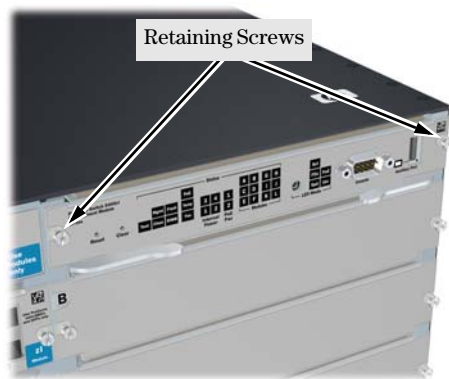

© Copyright 2006 Hewlett-Packard Development Company, LP. All rights reserved. The information contained herein is subject to change without notice.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard.

Technical information in this document is subject to change without notice.



Part Number: 5991-2180
January 2006
Printed in Singapore

