

Numerics

- 1000BaseSx 5-7
- 100BaseFx Ports 5-7
- 9304M Routing Switch 2-8
- 9308M Routing Switch 2-7

A

- Address Assignment
 - AppleTalk 13-1
- Alarm (RMON Group 3) A-3
- Annual Service Contracts 1-1
- AppleTalk
 - address assignment 13-1
 - command line interface 13-5
 - Components Supported 13-3
 - configuring routing 13-5
 - enabling 13-5
 - filtering zones and networks 13-12
 - network components 13-1
 - non-seed router, configuring 13-9
 - overview 13-1
- Assigning
 - interfaces 9-9
 - IP Address 2-11
 - IPX Addresses 12-3
 - password 2-10
 - RIP Filters 12-7
 - SAP Filters 12-10
- Assigning a
 - permanent password B-37
- Assigning Forward Filters 12-5

B

- Boot Command, executable 3-2
- Boot Commands
 - bootp B-41
- Boot Sequence
 - modifying B-21

C

- Cable
 - crossover 2-14
 - length 2-14
 - Straight-through 2-9, 2-14
- Caution, Redundant Power Supply 2-6
- Changing CLI Command Levels B-19
- Clear Commands B-42
- CLI
 - accessing B-18
 - changing command levels B-19
 - Clear Commands B-42
 - command levels B-19
 - command shortcuts B-20
 - CONFIG Commands
 - DVMRP Router Level defined B-12
 - global level defined B-5
 - Interface Level defined B-9
 - IP Tunnel Level defined B-11
 - OSPF Router Level defined B-13
 - PIM Router Level defined B-14
 - RIP Router Level defined B-15
 - VLAN Level defined B-16
 - Copy Commands B-46
 - disable commands B-69, B-99, B-104, B-107, B-114
 - DVMRP Router Level Commands B-12
 - Erase Commands B-47
 - EXEC commands
 - Privileged Level defined B-4
 - User Level defined B-3
 - Global Level Commands B-5
 - hierarchy B-2
 - Interface Level Commands B-9
 - IP Tunnel Level Commands B-11
 - OSPF Router Level Commands B-13
 - PIM Router Level Commands B-14
 - Privileged Level access B-3
 - prompts by level B-18

- Reload Command B-49
- RIP Router Level Commands B-15
- RMON Commands B-71
- Table of Contents B-23
 - All Levels Commands B-34
 - DVMRP Router Level Commands B-30
 - Global Level Commands B-25
 - Interface Level Commands B-28
 - IP Tunnel Level Commands B-30
 - OSPF Router Level Commands B-31
 - PIM Router Level Commands B-31
 - Privileged Level Commands B-23
 - RIP Router Level Commands B-32
 - User Level Commands B-23
 - VLAN Level Commands B-32
- Telnet Command B-51
- User Level command summary B-3
- VLAN Level Commands B-16
- CLI Command Structure B-20
- CLI Commands
 - summary B-22
- Command Line Interface
 - AppleTalk 13-5
- CONFIG Commands B-5
 - Global Level B-53
- CONFIG Interface Commands
 - IP Tunnel Level (summary listing) B-30
- Configuration
 - saving B-21
- Configuration Changes
 - saving B-21
- Configuration Changes, Dynamic B-21
- Configuration File
 - downloading and uploading 3-3
- Configuration, saving changes B-21
- configurations
 - viewing A-10
- Configuring
 - AppleTalk Routing 13-5
 - FSRP 11-1
 - IGMP 10-23
 - IP 8-3
 - IP Multicasting Protocols 10-1
 - IP Tunnel 10-21
 - IPX 12-1
 - non-seed AppleTalk router 13-9
 - OSPF traps B-117
 - Permanent Password B-58
 - Protocol-Based VLANs within Port-Based VLANs 14-20
 - tagged ports B-136
 - untagged ports B-136
- Connections 2-14
- Connectors, Module 2-13
- Console Attachment 2-9
- Console Settings 2-9
- Contracts, Service 1-1
- Conventions
 - manual 1-1

- Cooling 2-4
- Copy Commands B-46

D

- Data Link Support (AppleTalk) 13-4
- Defining
 - Forward Filters 12-5
 - Maximum SAP and RIP Route Entries 12-12
 - RIP Filters 12-7
 - SAP Filters 12-10
- Desktop Installation 2-11
- Diagnostic Error Codes for TFTP Transfers 3-4
- Downloading
 - to a TFTP Server 3-3
 - to a TFTP server 3-1
- DVMRP
 - configuring 10-1
- DVMRP Multicasts
 - initiation on a network 10-10
- Dynamic IPX Configuration 12-2

E

- EMC Regulatory Statements C-8
- Enabling
 - AppleTalk 13-5
 - FSRP on the Router 11-6
 - IPX 12-2
 - PIM on the Router 10-21
- Erase Commands B-47
- Erasing image and configuration files 3-5
- Error Codes for TFTP Transfers 3-4
- Event (RMON Group 4) A-3
- EXEC Commands
 - Privileged Level B-41
 - User Level B-37
- Executable Boot Command 3-2

F

- Filtering
 - AppleTalk Zones and Networks 13-12
- Forward Filters
 - defining and assigning 12-5
- FSRP
 - configuring 11-1
 - enabling on the router 11-6
 - Support on Virtual Interfaces 11-12

G

- Getting Help 1-1
- Grafts to a Multicast Tree 10-4, 10-12
- Grounding ii, 2-3

H

- Help
 - getting 1-1
- History (RMON Group 2) A-2, A-3, A-4
- Hold Downs 8-1
- Hop Count Limit 8-1

- Hot Swap
 - modules 2-5
 - redundant power supply 2-6

I

- IGMP
 - configuring 10-23
- Image (software)
 - downloading and uploading 3-1
- Initiating DVMRP Multicasts on a Network 10-10
- Initiating PIM Multicasts on a Network 10-2
- Installation
 - desktop 2-11
 - location and clearance 2-4
 - precautions 2-3
 - summary of 2-2
- Installing a System 2-2
- Interfaces
 - assigning 9-9
- IP
 - configuring 8-3
- IP Address
 - assigning 2-11
- IP Multicasting Protocols
 - configuring 10-1
- IP Tunnel
 - configuring 10-21
- IPX
 - assigning addresses 12-3
 - configuring 12-1
 - dynamic configuration 12-2
 - enabling 12-2

L

- LAN Connections 2-14
- LED Behavior 2-8

M

- Manual nomenclature 1-1
- Metric (default)
 - modifying for redistribution 9-19
- Modify Boot Sequence B-21
- Modifying
 - Boot Sequence B-21
 - boot sequence B-21
 - default metric for redistribution 9-19
 - OSPF compliance setting 9-23
 - OSPF default port parameters 9-23
 - system level defaults B-80
- Modules
 - installing 2-4
 - removing 2-4
- Mounting
 - warning 2-11
- Multicast Terms 10-1
- Multicast Tree
 - grafts 10-4, 10-12
 - pruning 10-2, 10-10

- Multiple Track Ports for Virtual Interfaces
 - configuring 11-12

N

- Navigating between Command Levels B-19
- Network Components
 - AppleTalk 13-1
- Network Connections, Troubleshooting 2-14
- Network Layer Support (AppleTalk) 13-3
- No Commands B-69, B-99, B-104, B-107, B-114

O

- OSPF
 - modifying port parameters 9-23
 - overview 9-1
 - Parameters 9-6
 - RFC 1583 Compliant 9-4
- Overview of VLANs 14-1

P

- Password 2-10
 - access B-70
 - Assigning a Super User 2-10
 - lost B-38
 - permanent, Assigning B-37
 - Telnet, Setting a B-58
- Password, Lost 2-10
- Permanent Password
 - setting B-58
- Physical Dimensions 5-9
- PIM
 - configuring 10-1
 - enabling on the router 10-21
- PIM DM 10-1
- PIM Multicasts
 - initiating on a network 10-2
- Pinouts
 - serial port 2-9
 - serial port cable 2-9
 - terminal 2-9
- Poison Reverse Updates 8-2
- Policy-Based VLANs 4-5
- Port statistics
 - viewing A-13
- Port Statistics, View of A-13
- Power Cord 2-8
 - caution 2-3, 2-13
- Precautions
 - installation 2-3
- Privileged Level EXEC commands B-4
- Protocol Support 4-6
- Protocol-Based VLANs B-129
- Protocol-Based VLANs within Port-Based VLANs
 - configuring 14-20
- Protocol-independent Multicast Dense Mode 10-1
- Pruning a Multicast Tree 10-2, 10-10

Q

Quality of Service, selectable 4-6

R

Rack Mounting 2-11, 2-12

warning 2-11

Redistribution

modifying default metric 9-19

Redundant Power Supply

Caution 2-2

installing 2-6

removing 2-6

Regulatory Statements C-8

Related Publication 1-1

Reload Command B-49

Reset Command

See Reload B-49

RIP filters

assigning and defining 12-7

RIP route entries

defining maximum 12-12

RMON agent A-1

Routing

AppleTalk VLANs with virtual interfaces 13-16

Routing between VLANs

virtual interfaces 14-22

RPS

See Redundant Power Supply 2-2

S

SAP Filters

assigning and defining 12-10

SAP route entries

defining maximum 12-12

Saving Configuration Changes B-21

Saving image and configuration files 3-5

Seed and Non-Seed Routers (AppleTalk) 13-2

Selectable Quality of Service (QoS) 4-6

Serial Port Cable

pinouts 2-9

Serial Port Pinouts 2-9

Service ii

Service Contracts, Annual 1-1

Session Layer Support (AppleTalk) 13-3

Settings, Terminal 2-9

Show Command Summary B-34

Show Commands

EXEC Level B-38

Software Image

downloading and uploading 3-1

Split Horizons 8-2

Statistics (RMON Group 1) A-1

STP statistics

viewing A-14

Summary of CLI Commands B-22

Super User Password 2-10

Super User Password, Setting B-58

Supported Components

AppleTalk 13-3

System

installation 2-2

unpacking 2-1

System Architecture 5-5

System Information, display of A-8

T

Tagged Ports, Configuring B-136

Telnet B-18, B-51

Temperature 2-3

Terminal Settings 2-9

TFTP Server

downloading and uploading 3-1, 3-3

TFTP Transfers, error codes 3-4

Trace Route A-5

Traps

Configuring OSPF B-117

Troubleshooting Network Connections 2-14

U

Unpacking a System 2-1

Untagged Ports, Configuring B-136

Uploading

to a TFTP server 3-1, 3-3

UTP Crossover Cable 2-14

V

Viewing

Configurations A-10

Port Statistics A-13

STP Statistics A-14

System Information A-8

Virtual Interfaces

configuring multiple track ports 11-12

FSRP support 11-12

routing AppleTalk VLANs 13-16

routing between VLANs 14-22

VLANs

overview 14-1

W

Warning

system placement in rack 2-11

Warranty ii

Weight

warning 2-3, 2-11

Z

Zone Information Protocol (ZIP) 13-3