
Contents

NOTE: This guide contains chapters 1 through 8 of the documentation for your HP 9304M, 9308M, 6208M-SX, or 6308M-SX product. For chapters 9 through 18 and the appendixes, refer to *Book 2: Advanced Configuration and Management Guide*. (Both books are available on the CD shipped with your HP product and are also on the ProCurve website at <http://www.hp.com/go/procurve>; click on **Technical Support**, then **Manual**).

SAFETY AND EMC REGULATORY STATEMENTS	V
SAFETY INFORMATION	V
GROUNDING	V
SERVICING	V
INFORMATIONS CONCERNANT LA SÉCURITÉ	VI
HINWEISE ZUR SICHERHEIT	VII
CONSIDERAZIONI SULLA SICUREZZA	VIII
CONSIDERACIONES SOBRE SEGURIDAD	IX
SAFETY INFORMATION (JAPAN)	X
SAFETY INFORMATION (CHINA)	XI
LASERS	XII
EMC REGULATORY STATEMENTS	XII
U.S.A.	XII
CANADA	XII
AUSTRALIA/NEW ZEALAND	XII
JAPAN	XII
KOREA	XIII
TAIWAN	XIII
GETTING STARTED.....	1-1
INTRODUCTION	1-1
AUDIENCE	1-1
NOMENCLATURE	1-1
TERMINOLOGY	1-2
RELATED PUBLICATIONS	1-2
WHAT'S NEW IN THIS EDITION?	1-3
CHASSIS HARDWARE ENHANCEMENT	1-3
LAYER 3 ENHANCEMENTS	1-3
LAYER 2 ENHANCEMENTS	1-4
SYSTEM-LEVEL ENHANCEMENTS	1-4
SUPPORT AND WARRANTY INFORMATION	1-5

INSTALLATION.....	2-1
UNPACKING A SYSTEM	2-1
PACKAGE CONTENTS	2-1
GENERAL REQUIREMENTS	2-1
INSTALLATION PROCEDURES	2-2
SUMMARY	2-2
INSTALLATION PRECAUTIONS	2-3
PREPARING THE INSTALLATION SITE	2-4
CABLING INFRASTRUCTURE	2-4
INSTALLATION LOCATION	2-4
INSTALLING (OR REMOVING) OPTIONAL MODULES (CHASSIS ONLY)	2-4
INSTALLING MODULES	2-4
REMOVING MODULES	2-5
INSTALLING (OR REMOVING) REDUNDANT POWER SUPPLIES (CHASSIS ONLY)	2-6
DETERMINING POWER SUPPLY STATUS	2-6
INSTALLING POWER SUPPLIES	2-6
REMOVING POWER SUPPLIES	2-7
VERIFYING PROPER OPERATION	2-9
ATTACHING A PC OR TERMINAL	2-10
Attaching a PC or Terminal Using a Serial Port	2-10
Attaching a PC or Terminal Using a Direct LAN Connection	2-10
ASSIGNING A PERMANENT PASSWORD	2-12
HOW TO ASSIGN A PASSWORD	2-13
ASSIGN A PERMANENT IP ADDRESS	2-13
ROUTING SWITCHES	2-13
SWITCHES	2-14
MOUNTING THE DEVICE	2-15
DESKTOP INSTALLATION	2-15
RACK MOUNT INSTALLATION – CHASSIS	2-16
RACK MOUNT INSTALLATION – HP 6208M-SX OR HP 6308M-SX	2-17
CONNECTING POWER TO THE DEVICE	2-17
CONNECTING NETWORK DEVICES	2-18
CONNECTORS	2-18
CONNECTING TO OTHER ROUTERS, SWITCHES, ETHERNET OR FAST ETHERNET HUBS	2-20
CONNECTING TO WORKSTATIONS, SERVERS OR ROUTERS	2-20
TROUBLESHOOTING NETWORK CONNECTIONS	2-20
VERIFYING PROPER CONNECTIONS	2-20
PINGING AN IP ADDRESS	2-20
TRACING A ROUTE	2-21
MANAGING THE DEVICE	2-21
LOGGING ON THROUGH THE CLI	2-21
LOGGING ON THROUGH THE WEB MANAGEMENT INTERFACE	2-23
SECURING ACCESS TO THE DEVICE	2-23
RESTRICTING REMOTE ACCESS TO THE DEVICE TO SPECIFIC IP ADDRESSES	2-25
CONFIGURING THE SNMP COMMUNITY STRINGS	2-26
DISABLING WEB MANAGEMENT	2-28

DISABLING TELNET OR SNMP ACCESS	2-28
SETTING A TELNET PASSWORD	2-29
SETTING THE ENABLE PASSWORDS	2-29
AUGMENTING CLI COMMAND PRIVILEGE LEVELS	2-30
CONFIGURING LOCAL USER ACCOUNTS	2-32
CONFIGURING FOR TACACS/TACACS+ AUTHENTICATION	2-34
CONFIGURING FOR RADIUS AUTHENTICATION	2-39
CONFIGURING AUTHENTICATION-METHOD LISTS	2-41
SWAPPING MODULES (CHASSIS PLATFORMS ONLY)	2-45
NEXT STEPS	2-48

USING REDUNDANT MANAGEMENT MODULES 3-1

CONFIGURATION CONSIDERATIONS	3-1
BORDER GATEWAY PROTOCOL VERSION 4 ROUTES	3-2
TEMPERATURE SENSOR	3-2
SWITCHOVER	3-2
MANAGEMENT SESSIONS	3-2
SYSLOG AND SNMP TRAPS	3-2
MAC ADDRESS CHANGES	3-3
CONFIGURING THE REDUNDANT MANAGEMENT PARAMETERS	3-3
INSTALLING REDUNDANT MANAGEMENT MODULES	3-3
DETERMINING REDUNDANT MANAGEMENT MODULE STATUS	3-7
DISPLAYING SWITCHOVER MESSAGES	3-10
FILE SYNCHRONIZATION BETWEEN THE ACTIVE AND STANDBY REDUNDANT MANAGEMENT MODULES	3-10
ENABLING BOOT FLASH SYNCHRONIZATION	3-12
CHANGING OR DISABLING RUNNING-CONFIG SYNCHRONIZATION	3-12
IMMEDIATELY SYNCHRONIZING BOOT CODE OR THE RUNNING-CONFIG	3-13
SWITCHING OVER TO THE STANDBY REDUNDANT MANAGEMENT MODULE	3-13
TEMPERATURE SENSOR	3-14
DISPLAYING THE TEMPERATURE	3-14
DISPLAYING TEMPERATURE MESSAGES	3-16
CHANGING TEMPERATURE WARNING AND SHUTDOWN LEVELS	3-16
CHANGING THE CHASSIS POLLING INTERVAL	3-17

UPDATING SOFTWARE IMAGES AND CONFIGURATION FILES 4-1

DOWNLOADING AND UPLOADING A SOFTWARE IMAGE ON A TFTP SERVER	4-1
EXECUTABLE BOOT COMMAND	4-2
LOADING AND SAVING CONFIGURATION FILES	4-3
REPLACING THE STARTUP CONFIGURATION WITH THE RUNNING CONFIGURATION	4-3
REPLACING THE RUNNING CONFIGURATION WITH THE STARTUP CONFIGURATION	4-4
COPYING A CONFIGURATION FILE TO OR FROM A TFTP SERVER	4-4
DIAGNOSTIC ERROR CODES AND REMEDIES FOR TFTP TRANSFERS	4-5
SAVING OR ERASING IMAGE AND CONFIGURATION FILES	4-6
SCHEDULING A SYSTEM RELOAD	4-7
RELOADING AT A SPECIFIC TIME	4-7
RELOADING AFTER A SPECIFIC AMOUNT OF TIME	4-7

DISPLAYING THE AMOUNT OF TIME REMAINING BEFORE A SCHEDULED RELOAD	4-8
CANCELING A SCHEDULED RELOAD	4-8
SOFTWARE OVERVIEW	5-1
SOFTWARE FEATURE SUMMARY	5-1
FLASH IMAGES	5-1
DETERMINING THE FLASH VERSION A DEVICE IS RUNNING	5-2
FEATURE LIST	5-2
SHOWING SYSTEM DEFAULTS	5-5
ACCESS AND MANAGEMENT FEATURES	5-6
MANAGEMENT INTERFACES	5-6
MULTIPLE LEVELS OF ACCESS CONTROL	5-8
DYNAMIC CONFIGURATION	5-8
SOFT REBOOT	5-9
SCHEDULED SYSTEM RELOAD	5-9
TELNET	5-9
TRIVIAL FILE TRANSFER PROTOCOL (TFTP)	5-9
SIMPLE NETWORK TIME PROTOCOL (SNTP)	5-9
DOMAIN NAME SERVER (DNS) RESOLVER	5-10
REMOTE MONITORING (RMON) STATISTICS	5-10
SYSLOG LOGGING	5-10
PING AND TRACEROUTE FACILITIES	5-11
PORT MIRRORING	5-11
LAYER 2 SWITCHING FEATURES	5-11
MAC SWITCHING	5-11
STATIC MAC ENTRIES	5-12
SPANNING TREE PROTOCOL (STP)	5-12
TRUNK GROUPS	5-12
PORT-BASED VIRTUAL LANS (VLANs)	5-13
VLAN TAGGING	5-13
MAC FILTERS	5-13
ADDRESS-LOCK FILTERS	5-13
DYNAMIC HOST CONFIGURATION PROTOCOL (DHCP) ASSIST	5-14
IP MULTICAST CONTAINMENT	5-14
LAYER 3 SWITCHING FEATURES	5-14
PROTOCOL-BASED VIRTUAL LANS (VLANs)	5-14
LAYER 3 ROUTING FEATURES	5-15
MULTI-NETTING	5-15
MULTIPLE IP SUB-NETS PER INTERFACE	5-15
MULTIPLE IPX FRAME TYPE SUPPORT PER INTERFACE	5-15
MULTI-PORT SUBNETS (INTEGRATED SWITCH-ROUTING)	5-15
STATIC IP ROUTES, ADDRESS RESOLUTION PROTOCOL (ARP) ENTRIES, AND REVERSE ARP (RARP) ENTRIES	5-16
IP/RIP ROUTING	5-16
IP ACCESS AND QOS FILTERS	5-17

IP ROUTE FILTERS	5-17
IPX ROUTING	5-17
IPX FORWARD FILTERS	5-17
IPX/RIP AND IPX/SAP FILTERS	5-18
APPLETALK ROUTING	5-18
APPLETALK ZONE AND NETWORK FILTERS	5-18
IP MULTICAST ROUTING (PIM AND DVMRP)	5-18
IP/RIP AND IP/OSPF REDISTRIBUTION FILTERS	5-19
USER DATAGRAM PROTOCOL (UDP) HELPER	5-19
TCP/UDP ACCESS POLICIES	5-19
LOAD BALANCING AND REDUNDANCY FEATURES	5-19
SELECTABLE QUALITY OF SERVICE (QoS)	5-19
ROUTER-BASED HEALTH CHECKING	5-20
VIRTUAL ROUTER REDUNDANCY PROTOCOL (VRRP)	5-20
SERVER REDUNDANCY PROTOCOL (SRP)	5-20
HARDWARE OVERVIEW	6-1
CHASSIS DEVICES	6-1
FIXED-PORT SWITCH 6208M-SX AND ROUTING SWITCH 6308M-SX	6-5
SYSTEM ARCHITECTURE	6-5
CHASSIS ARCHITECTURE	6-5
FIXED-PORT ARCHITECTURE	6-6
PHYSICAL VIEW	6-7
SLOT AND PORT NUMBERS	6-8
AC POWER CONNECTOR	6-8
BUFFERING	6-8
FANS	6-9
LEDs	6-9
PORTS	6-10
PROCESSORS	6-10
MODULES	6-11
AC POWER SUPPLY	6-11
STANDARD AND REDUNDANT POWER OPTIONS	6-11
TEMPERATURE SENSOR	6-12
RESET BUTTON	6-12
STANDARDS AND SPECIFICATIONS	6-12
HARDWARE SPECIFICATIONS	6-12
SOFTWARE SPECIFICATIONS	6-14
NETWORK APPLICATIONS.....	7-1
HP PROCURVE 9304M AND 9308M APPLICATIONS	7-1
HP PROCURVE 6308M-SX ROUTING SWITCH APPLICATIONS	7-3
HP PROCURVE 6208M-SX SWITCH APPLICATIONS	7-5

CONFIGURING BASIC FEATURES.....	8-1
USING THE WEB MANAGEMENT INTERFACE FOR BASIC CONFIGURATION CHANGES	8-2
CONFIGURING BASIC SYSTEM PARAMETERS	8-3
ENTERING SYSTEM ADMINISTRATION INFORMATION	8-4
CONFIGURING THE IP ADDRESS INFORMATION	8-4
ENABLING DOMAIN NAME SERVER (DNS) RESOLVER	8-6
CONFIGURING SIMPLE NETWORK MANAGEMENT (SNMP) PARAMETERS	8-8
SPECIFYING A SIMPLE NETWORK TIME PROTOCOL (SNTP) SERVER	8-11
SETTING THE SYSTEM CLOCK	8-13
CONFIGURING THE SYSLOG SERVICE	8-15
CHANGING THE DEFAULT GIGABIT NEGOTIATION MODE	8-20
LIMITING BROADCAST, MULTICAST, OR UNKNOWN-UNICAST RATES	8-21
CONFIGURING BASIC PORT PARAMETERS	8-23
ASSIGNING A PORT NAME	8-25
MODIFYING PORT SPEED	8-26
MODIFYING PORT MODE	8-27
DISABLING OR RE-ENABLING PORT STATUS	8-27
DISABLING OR RE-ENABLING FLOW CONTROL	8-28
CHANGING THE 802.3X GIGABIT NEGOTIATION MODE	8-29
MODIFYING PORT PRIORITY (QoS)	8-29
CONFIGURING BASIC LAYER 2 PARAMETERS	8-30
ENABLING OR DISABLING THE SPANNING TREE PROTOCOL (STP)	8-31
ENABLING OR DISABLING LAYER 2 SWITCHING (ROUTING SWITCHES ONLY)	8-34
CHANGING THE SWITCH AGE TIME	8-35
CONFIGURING STATIC MAC ENTRIES	8-35
ENABLING PORT-BASED VLANs	8-37
CONFIGURING TRUNK GROUPS	8-38
CONFIGURING DHCP ASSIST (SWITCH ONLY)	8-48
DEFINING A DHCP GATEWAY LIST (SWITCH ONLY)	8-52
ENABLING OR DISABLING IP MULTICAST TRAFFIC REDUCTION (SWITCH ONLY)	8-53
DEFINING MAC ADDRESS FILTERS	8-53
DEFINING BROADCAST AND MULTICAST FILTERS	8-57
LOCKING A PORT TO RESTRICT ADDRESSES	8-59
CONFIGURING BASIC LAYER 3 PARAMETERS	8-60
CONFIGURING LAYER 4 QUALITY OF SERVICE PARAMETERS	8-61
APPLYING LAYER 4 QoS PRIORITY ON THE HP 6208M-SX SWITCH	8-61
APPLYING LAYER 4 QoS PRIORITY ON THE HP 9304M, 9308M, OR 6308M-SX ROUTING SWITCH	8-63
MODIFYING SYSTEM PARAMETER DEFAULT SETTINGS	8-69
ASSIGNING A MIRROR PORT AND A MONITOR PORT	8-72