

Numerics

- 10/100
 - mode 8-27
- 1000BaseLx 7-10
- 1000BaseSx 7-10
- 1000BaseT 7-10
- 100BaseFx 7-10
- 100BaseFx Ports 7-10
- 100BaseTx 7-10
- 10BaseT 7-10
- 802.3x Gigabit negotiation 8-29
- 9304M Routing Switch 2-9
- 9308M Routing Switch 2-8

A

- AC power 7-11
 - connector 7-9
- Access
 - CLI 2-21
 - augmenting privilege level 3-12
 - local user account 3-13
 - lost password 2-13
 - RADIUS 3-20
 - SNMP
 - community strings 3-5
 - disabling 3-9
 - TACACS/TACACS+ 3-15
 - Telnet
 - disabling 3-9
 - setting password 3-10
 - Web management interface 3-5, 6-6
 - disabling 3-8
 - disabling password authentication 3-9
- Access levels 2-12
- ACL
 - SNMP access 3-4
 - Telnet access 3-3
 - Web management 3-3
- Address

- IP 2-13

- Age
 - MAC 8-34
- Air Flow 2-16
- Air Flow, Caution 2-3
- Ambient temperature 2-3
- Ampere Ratings 2-3
- Architecture 7-5
- Assigning
 - IP address 2-13, 8-5
 - password 2-12
- Authentication Method
 - values 3-25
- Authentication method
 - defaults 3-1
- Authentication-method list 3-24

B

- Boot
 - software 5-2
- Bridging
 - architecture 7-6
- Broadcast
 - filter 8-55
 - limiting 8-22
- Buffer
 - port 7-9
 - Syslog 8-17, 8-20

C

- Cable
 - length 2-19
 - Straight-through 2-10
 - straight-through 2-20
- Caution, Air Flow 2-3
- Caution, Circuit Overload 2-3
- Caution, grounding 2-3
- Caution, Power Cord 2-3
- Caution, Power Sockets 2-17

- Caution, Powering On 2-17
- Caution, Redundant Power Supply 2-2, 2-7
- Chassis
 - architecture 7-5
 - hardware overview 7-1
 - module 7-1
 - name 8-4
 - poll interval 4-18
 - replacing power supply 2-6
 - slot and port numbers 7-8
 - swapping modules 2-4
- CLI 6-6
 - access 2-21
 - access levels 2-12
 - attaching serial cable 2-10
 - command completion 2-22
 - CONFIG Level 2-12
 - line editing commands 2-22
 - local user account 3-13
 - logging on 2-21
 - privilege level
 - augmenting 3-12
 - Privileged EXEC level 2-12
 - scroll control 2-22
 - securing access 2-13
 - User EXEC level 2-12
- Clock 8-14
- Code
 - downloading 5-1
 - image name 6-1
 - uploading 5-1
 - version 6-2
- Command completion
 - CLI 2-22
- Community string
 - configuring 3-5
 - encryption 3-5, 8-9
- CONFIG Level 2-12
- Configuration
 - displaying 5-4
 - erasing 5-7
 - saving 5-4, 5-7
- Configuring
 - security 3-1
- Connection, Serial 2-1
- Connections 2-20
- Connector
 - console 2-10
 - module 2-18
 - power 7-9
- Console
 - attaching 2-10
- Console Attachment 2-10
- Console Settings 2-10
- Contact information 8-4
- Conventions
 - manual 1-1
- Cooling 2-4
- CPU 7-11

- Ctrl-A 2-22
- Ctrl-B 2-22
- Ctrl-C 2-22
- Ctrl-D 2-22
- Ctrl-E 2-22
- Ctrl-F 2-22
- Ctrl-K 2-22
- Ctrl-L 2-22
- Ctrl-N 2-22
- Ctrl-P 2-23
- Ctrl-R 2-22
- Ctrl-U 2-23
- Ctrl-W 2-23
- Ctrl-X 2-23
- Ctrl-Z 2-23

D

- Default
 - system 6-5, 8-59
- Default gateway 2-15
- Desktop Installation 2-15
- Device location 8-4
- DHCP
 - assist 8-48
- DNS Resolver 6-10, 8-7
- Downloading software 5-1
- Duplex mode 8-27
- Dynamic configuration 6-8

E

- EMC Regulatory Statements xi
- Enable password
 - assigning 2-13
- Enabling
 - STP 8-30
- Encryption
 - password 3-15
 - SNMP community string 3-5, 8-9
- Event
 - Syslog 8-16

F

- Facility
 - Syslog 8-18
- Fan 7-9
- Features 6-2
- Fiber
 - cabling 2-20
- File synchronization
 - redundant management module 4-10
- Filter
 - broadcast 8-55
 - MAC address 8-52
 - lock 8-57
 - multicast 8-55
- Fixed-port
 - architecture 7-6
- Fixed-port device
 - overview 7-5

- Flash code
 - downloading 5-1
 - image name 6-1
 - uploading 5-1
 - version 6-2
- Flow control
 - disabling 8-28
- G**
- Gateway
 - default 2-15
- Getting Help 1-3
- Gigabit
 - 802.3x negotiation 8-29
 - negotiation 8-20
- Global CONFIG Level 2-13
- Grounding ii, 2-3
- H**
- Half-duplex mode 8-27
- Handles, Warning 2-1, 2-3
- Hardware
 - architecture 7-5
 - fan 7-9
 - installation 2-1
 - LEDs 7-9
 - overview 7-1
 - port 7-10
 - port buffer 7-9
 - power 7-11
 - processor 7-11
 - reset button 7-12
 - Temperature sensor 7-12
- Help
 - getting 1-3
- Host name 8-4
- Hot Swap 2-4
 - modules 2-5
 - redundant power supply 2-6
- I**
- IEEE tagging 8-36
- Image
 - downloading 5-1
 - name 6-1
 - uploading 5-1
 - version 6-2
- Installation
 - desktop 2-15
 - hardware 2-1
 - location and clearance 2-4
 - precautions 2-3
 - rack
 - chassis 2-16
 - fixed-port device 2-17
 - summary of 2-2
- Installing a System 2-2
- Interface
 - number 7-8
- Internet Explorer version required 2-24
- IP
 - routing architecture 7-6
- IP ACL 3-3
 - securing access 3-2
 - SNMP access 3-4
 - Telnet access 3-3
 - Web management 3-3
- IP Address
 - assigning 2-1
- IP address
 - assigning 2-13, 8-5
 - security 3-4
- IP multicast
 - traffic reduction 8-51
- IPX
 - routing architecture 7-6
- L**
- LAN Connections 2-20
- Lasers
 - IEC compliance x
- Layer 2
 - age time 8-34
 - architecture 7-6
 - configuring basic parameters 8-30
 - disabling 8-33
 - MAC address filter 8-52
 - MAC switching 6-11
- Layer 3
 - architecture 7-6
 - configuring basic parameters 8-58
- LED Behavior 2-9
- LEDs 7-9
 - redundant management module 4-7
- Lifting, warning 2-1
- Line editing commands 2-22
- Load sharing
 - trunk group 8-40
- Local user account 3-13
- Lock
 - MAC address 8-57
- Logging on
 - CLI 2-21
 - Web management interface 2-23
- M**
- MAC
 - address filter 8-52
 - address lock 8-57
 - static entries 8-34
 - switching 6-11
- Management module
 - redundant 4-1
- Manual nomenclature 1-1
- Mask, Network 2-1
- Memory
 - port buffer 7-9
- Message

- TFTP error 5-6

- Mirror

- port 8-61

- Mode

- port 8-27

- Module 7-1

- connectors 2-18

- installing 2-4

- management

- redundant 4-1

- redundant management 4-1

- configuring 4-3

- default active module 4-5

- file synchronization 4-10

- status 4-7

- TFTP 4-7

- removing 2-4

- Monitor

- port 8-61

- Mounting

- air flow 2-16

- warning 2-15

- Multicast

- filter 8-55

- limiting 8-22

- traffic reduction 8-51

- Multi-netting 6-15

N

- Name

- port 8-25

- software image file 6-1

- Netscape version required 2-24

- Network

- connection 2-18

- network connections

- troubleshooting 2-20

- Network Mask 2-1

O

- Operating temperature 2-3

P

- Package contents 2-1

- Password 2-12, 3-1

- assigning 2-13

- encryption 3-15

- lost

- accessing the device 2-13

- Telnet 3-1, 3-10

- Web management interface

- disabling 3-9

- Password, Lost 2-13

- PC

- attaching 2-10

- Pin assignments

- serial port 2-10

- Ping 6-11

- Pinouts

- serial port 2-11, 2-12

- Poll interval 4-18

- Port

- buffer 7-9

- configuring basic parameters 8-23

- disabling 8-27

- flow control 8-28

- hardware 7-10

- IEEE tagging 8-36

- MAC address lock 8-57

- mirroring 8-61

- mode 8-27

- monitoring 8-61

- name 8-25

- number 7-8

- port-based VLAN 8-36

- speed 8-26

- STP parameters 8-31

- trunk group 8-38

- displaying 8-46

- Port-configuration privilege level 3-12

- Power

- AC 7-11

- connector 7-9

- Power Cord 2-9

- caution 2-3, 2-17

- Power Supply

- See Redundant Power Supply. 2-7

- Power supply

- replacing 2-6

- Precautions

- installation 2-3

- Privilege level

- augmenting 3-12

- Privileged EXEC Level 2-13

- Privileged EXEC level 2-12

- Processor 7-11

- Prompt

- customizing 2-11

- Proxy problem

- Web management access 2-23

R

- Rack installation

- chassis 2-16

- fixed-port device 2-17

- Rack Mounting 2-3, 2-16

- warning 2-3, 2-15

- Rack, Loading 2-3

- RADIUS 3-1, 3-20

- limits 3-18, 3-20, 3-25

- Read-only community string 6-6

- Read-write community string 6-6

- no default 3-5

- Redundant link

- trunk group 8-38

- Redundant management module 4-1

- configuring 4-3

- default active module 4-5

- file synchronization 4-10
- status 4-7
- TFTP 4-7
- Redundant power 7-12
- Redundant Power Supply
 - Caution 2-2
 - installing 2-6
 - removing 2-7
- Regulatory Statements xi
- Reload 6-9
 - scheduled 5-8
- Reset button 7-12
- RMON 6-10
- Routing
 - architecture 7-6
 - enabling 8-58
- RPS
 - See Redundant Power Supply 2-2
- Running-config file 5-4

S

- Scheduled reload 5-8
- Scroll control 2-22
- Security 3-1
 - assigning Enable password 2-13
 - Authentication-method list 3-24
 - IP ACL 3-2
 - IP address 3-4
 - local user account 3-13
 - MAC address lock 8-57
 - RADIUS 3-20
 - SNMP
 - IP ACL 3-4
 - TACACS/TACACS+ 3-15
 - Telnet
 - IP ACL 3-3
 - Web management interface
 - IP ACL 3-3
- security
 - Telnet 3-3
- Serial cable 2-10
- Serial Connection 2-1
- Serial Port Pinouts 2-11, 2-12
- Service ii
- Settings, Terminal 2-10
- Shock Hazard, Warning 2-18
- Slot Cover Plates, Air Flow 2-3
- Slot number 7-8
- SNMP
 - community string 3-1
 - configuring 3-5
 - encryption 3-5, 8-9
 - read-only 6-6
 - read-write 6-6
 - configuring 8-9
 - disabling 3-9
 - security
 - IP ACL 3-4
 - Syslog 6-10, 8-16
- trap
 - disabling 8-11
 - trap receiver 8-9
 - trap source 8-10
- SNMPv2c 6-10
- SNTP 6-9
 - server 8-13
- Soft reboot 6-9
- Software
 - defaults 6-5
 - downloading 5-1
 - features 6-2
 - image name 6-1
 - overview 6-1
 - scheduled reload 5-8
 - synchronization
 - redundant management module 4-10
 - uploading 5-1
 - version 6-2
- Speed
 - port 8-26
- Stackable
 - port numbers 7-8
- Startup-config file
 - erasing 5-7
 - loading 5-4
 - saving 5-4, 5-7
- Static MAC entries 8-34
- STP
 - bridge and port parameters 8-31
 - enabling or disabling 8-30
- Super User 2-12
- Swapping modules 2-4
- Switch
 - age time 8-34
 - architecture 7-6
 - configuring basic Layer 2 parameters 8-30
 - disabling 8-33
 - Layer 2 6-11
- Switchover
 - redundant management module 4-2
 - Syslog messages 4-10
- Syslog 6-10, 8-16
 - buffer 8-17, 8-20
 - changing facility 8-18
 - disabling message level 8-17
 - redundant management switchover 4-10
 - server 8-17
 - temperature 4-17
- System
 - configuring basic parameters 8-3
 - defaults 8-59
 - installation 2-2
 - name 8-4
 - scheduled reload 5-8
 - time 6-9
 - unpacking 2-1

T

- TACACS/TACACS+ 3-1, 3-15
- TACACS/TACACS+ limits 3-18, 3-25
- Telnet 6-9
 - disabling 3-9
 - local user account 3-13
 - password 3-10
 - security
 - IP ACL 3-3
- Temperature 2-3
 - displaying 4-15
 - poll interval 4-18
 - sensor 4-2, 4-15, 7-12
 - changing warning and shutdown levels 4-17
 - Syslog 4-17
- Terminal Settings 2-10
- TFTP 6-9
 - error message 5-6
 - software 5-1
- Time 6-9
 - SNTP server 8-13
 - system clock 8-14
- Traceroute 6-11
- Trap 6-10
 - disabling 8-11
 - receiver 8-9
 - source 8-10
 - Syslog 8-16
- Troubleshooting network connections 2-20
- Trunk group 8-38
 - displaying 8-46
 - load sharing 8-40

U

- Unknown-unicast rate
 - limiting 8-22
- Unpacking a System 2-1
- Uploading software 5-1
- User account 3-1
- User EXEC level 2-12
- UTP
 - cabling 2-20

V

- Version
 - software image file 6-2
- VLAN
 - IEEE tagging 8-36
 - port-based 8-36

W

- Warning
 - handles 2-1, 2-3
 - rack or cabinet secured 2-3
 - system placement in rack 2-15
 - weight 2-1, 2-3
- Warning, Electrical Shock Hazard, Warning 2-18
- Warranty ii

Web management interface 6-6

- access 3-5
 - disabling 3-8
 - disabling password authentication 3-9
- local user account 3-13
- logging on 2-23
- password 2-23
- privilege levels 3-12
- proxy problem 2-23
- read-write session 3-5
- security
 - IP ACL 3-3
- user name 2-23
- using 2-23

Weight

- warning 2-3, 2-15, 2-18