

Contents

SAFETY AND EMC REGULATORY STATEMENTS	V
SAFETY INFORMATION	V
GROUNDING	V
SERVICING	V
INFORMATIONS CONCERNANT LA SÉCURITÉ	VI
HINWEISE ZUR SICHERHEIT	VI
CONSIDERAZIONI SULLA SICUREZZA	VII
CONSIDERACIONES SOBRE SEGURIDAD	VIII
SAFETY INFORMATION (JAPAN)	IX
SAFETY INFORMATION (CHINA)	X
LASERS	X
EMC REGULATORY STATEMENTS	XI
U.S.A.	XI
CANADA	XI
AUSTRALIA/NEW ZEALAND	XI
JAPAN	XI
KOREA	XI
TAIWAN	XI
GETTING STARTED.....	1-1
INTRODUCTION	1-1
AUDIENCE	1-1
NOMENCLATURE	1-1
TERMINOLOGY	1-2
RELATED PUBLICATIONS	1-2
WHAT'S NEW IN THIS EDITION?	1-3
CHASSIS HARDWARE ENHANCEMENT	1-3
LAYER 3 ENHANCEMENTS	1-3
LAYER 2 ENHANCEMENTS	1-5
SYSTEM-LEVEL ENHANCEMENTS	1-5
SUPPORT AND WARRANTY INFORMATION	1-6

INSTALLATION.....	2-1
UNPACKING A SYSTEM	2-1
PACKAGE CONTENTS	2-1
GENERAL REQUIREMENTS	2-1
INSTALLATION PROCEDURES	2-2
SUMMARY	2-2
INSTALLATION PRECAUTIONS	2-3
PREPARING THE INSTALLATION SITE	2-4
CABLING INFRASTRUCTURE	2-4
INSTALLATION LOCATION	2-4
INSTALLING (OR REMOVING) OPTIONAL MODULES (CHASSIS DEVICES ONLY)	2-4
INSTALLING MODULES	2-4
REMOVING MODULES	2-5
INSTALLING (OR REMOVING) REDUNDANT POWER SUPPLIES (CHASSIS DEVICES ONLY)	2-6
DETERMINING POWER SUPPLY STATUS	2-6
INSTALLING POWER SUPPLIES	2-6
REMOVING POWER SUPPLIES	2-7
VERIFYING PROPER OPERATION	2-9
ATTACHING A PC OR TERMINAL	2-10
ATTACHING A PC OR TERMINAL USING A SERIAL PORT	2-10
ATTACHING A PC OR TERMINAL USING A DIRECT LAN CONNECTION	2-10
ASSIGNING A PERMANENT PASSWORD	2-12
HOW TO ASSIGN A PASSWORD	2-13
ASSIGN A PERMANENT IP ADDRESS	2-13
ROUTING SWITCHES	2-13
SWITCHES	2-14
MOUNTING THE DEVICE	2-15
DESKTOP INSTALLATION	2-15
RACK MOUNT INSTALLATION – CHASSIS DEVICES	2-16
RACK MOUNT INSTALLATION – HP 6208M-SX OR HP 6308M-SX	2-17
CONNECTING POWER TO THE DEVICE	2-17
CONNECTING NETWORK DEVICES	2-18
CONNECTORS	2-18
CONNECTING TO OTHER ROUTERS, SWITCHES, ETHERNET OR FAST ETHERNET HUBS	2-20
CONNECTING TO WORKSTATIONS, SERVERS OR ROUTERS	2-20
TROUBLESHOOTING NETWORK CONNECTIONS	2-20
VERIFYING PROPER CONNECTIONS	2-20
PINGING AN IP ADDRESS	2-20
TRACING A ROUTE	2-21
MANAGING THE DEVICE	2-21
LOGGING ON THROUGH THE CLI	2-21
LOGGING ON THROUGH THE WEB MANAGEMENT INTERFACE	2-23
SWAPPING MODULES (CHASSIS DEVICES ONLY)	2-25
NEXT STEPS	2-29

SECURING ACCESS.....	3-1
RESTRICTING REMOTE ACCESS TO THE DEVICE USING ACCESS CONTROL LISTS	3-2
CONTROLLING TELNET ACCESS	3-3
CONTROLLING WEB ACCESS	3-3
CONTROLLING SNMP ACCESS	3-4
RESTRICTING REMOTE ACCESS TO THE DEVICE TO SPECIFIC IP ADDRESSES	3-4
CONFIGURING THE SNMP COMMUNITY STRINGS	3-5
ENCRYPTION	3-5
ADDING AN SNMP COMMUNITY STRING	3-6
DISPLAYING THE SNMP COMMUNITY STRINGS	3-6
DISABLING WEB MANAGEMENT	3-8
DISABLING PASSWORD AUTHENTICATION ON THE WEB MANAGEMENT INTERFACE	3-9
DISABLING TELNET OR SNMP ACCESS	3-9
DISABLING TELNET ACCESS	3-9
DISABLING SNMP ACCESS	3-10
SETTING A TELNET PASSWORD	3-10
SETTING THE ENABLE PASSWORDS	3-11
AUGMENTING CLI COMMAND PRIVILEGE LEVELS	3-12
CONFIGURING LOCAL USER ACCOUNTS	3-13
CONFIGURING A USER ACCOUNT	3-13
PASSWORD ENCRYPTION	3-15
CONFIGURING FOR TACACS/TACACS+ AUTHENTICATION	3-15
HOW TACACS+ DIFFERS FROM TACACS	3-15
CONFIGURATION CONSIDERATIONS	3-16
CONFIGURING THE SWITCH OR ROUTING SWITCH FOR TACACS/TACACS+ AUTHENTICATION	3-16
CONFIGURING FOR RADIUS AUTHENTICATION	3-20
IMPLEMENTATION NOTES	3-20
BASIC CONFIGURATION STEPS	3-20
CONFIGURING THE AUTHENTICATION-METHOD LISTS	3-23
CONFIGURING AUTHENTICATION-METHOD LISTS	3-24
CLI ACCESS	3-24
WEB MANAGEMENT ACCESS	3-24
AUTHENTICATION ALGORITHM	3-24
USING REDUNDANT MANAGEMENT MODULES	4-1
CONFIGURATION CONSIDERATIONS	4-1
TEMPERATURE SENSOR	4-2
SWITCHOVER	4-2
MANAGEMENT SESSIONS	4-2
SYSLOG AND SNMP TRAPS	4-2
MAC ADDRESS CHANGES	4-3
CONFIGURING THE REDUNDANT MANAGEMENT PARAMETERS	4-3
INSTALLING REDUNDANT MANAGEMENT MODULES	4-3
DETERMINING REDUNDANT MANAGEMENT MODULE STATUS	4-7
DISPLAYING SWITCHOVER MESSAGES	4-10

FILE SYNCHRONIZATION BETWEEN THE ACTIVE AND STANDBY REDUNDANT MANAGEMENT MODULES	4-10
ENABLING BOOT FLASH SYNCHRONIZATION	4-11
CHANGING OR DISABLING RUNNING-CONFIG SYNCHRONIZATION	4-12
IMMEDIATELY SYNCHRONIZING BOOT CODE OR THE RUNNING-CONFIG	4-13
SWITCHING OVER TO THE STANDBY REDUNDANT MANAGEMENT MODULE	4-14
TEMPERATURE SENSOR	4-15
DISPLAYING THE TEMPERATURE	4-15
DISPLAYING TEMPERATURE MESSAGES	4-17
CHANGING TEMPERATURE WARNING AND SHUTDOWN LEVELS	4-17
CHANGING THE CHASSIS POLLING INTERVAL	4-18

UPDATING SOFTWARE IMAGES AND CONFIGURATION FILES 5-1

DOWNLOADING AND UPLOADING A SOFTWARE IMAGE ON A TFTP SERVER	5-1
EXECUTABLE BOOT COMMAND	5-2
LOADING AND SAVING CONFIGURATION FILES	5-4
REPLACING THE STARTUP CONFIGURATION WITH THE RUNNING CONFIGURATION	5-4
REPLACING THE RUNNING CONFIGURATION WITH THE STARTUP CONFIGURATION	5-4
LOGGING CHANGES TO THE STARTUP-CONFIG FILE	5-5
COPYING A CONFIGURATION FILE TO OR FROM A TFTP SERVER	5-5
DIAGNOSTIC ERROR CODES AND REMEDIES FOR TFTP TRANSFERS	5-6
SAVING OR ERASING IMAGE AND CONFIGURATION FILES	5-7
SCHEDULING A SYSTEM RELOAD	5-8
RELOADING AT A SPECIFIC TIME	5-8
RELOADING AFTER A SPECIFIC AMOUNT OF TIME	5-8
DISPLAYING THE AMOUNT OF TIME REMAINING BEFORE A SCHEDULED RELOAD	5-9
CANCELING A SCHEDULED RELOAD	5-9

SOFTWARE OVERVIEW 6-1

SOFTWARE FEATURE SUMMARY	6-1
FLASH IMAGES	6-1
DETERMINING THE FLASH VERSION A DEVICE IS RUNNING	6-2
FEATURE LIST	6-2
SHOWING SYSTEM DEFAULTS	6-5
ACCESS AND MANAGEMENT FEATURES	6-6
MANAGEMENT INTERFACES	6-6
MULTIPLE LEVELS OF ACCESS CONTROL	6-8
DYNAMIC CONFIGURATION	6-8
SOFT REBOOT	6-9
SCHEDULED SYSTEM RELOAD	6-9
TELNET	6-9
TRIVIAL FILE TRANSFER PROTOCOL (TFTP)	6-9
SIMPLE NETWORK TIME PROTOCOL (SNTP)	6-9
DOMAIN NAME SERVER (DNS) RESOLVER	6-10
SNMPV2C SUPPORT	6-10
REMOTE MONITORING (RMON) STATISTICS	6-10

SYSLOG LOGGING	6-10
PING AND TRACEROUTE FACILITIES	6-11
PORT MIRRORING	6-11
LAYER 2 SWITCHING FEATURES	6-11
MAC SWITCHING	6-11
STATIC MAC ENTRIES	6-12
SPANNING TREE PROTOCOL (STP)	6-12
TRUNK GROUPS	6-12
PORT-BASED VIRTUAL LANS (VLANs)	6-13
VLAN TAGGING	6-13
MAC FILTERS	6-13
ADDRESS-LOCK FILTERS	6-13
DYNAMIC HOST CONFIGURATION PROTOCOL (DHCP) ASSIST	6-14
IP MULTICAST CONTAINMENT	6-14
LAYER 3 SWITCHING FEATURES	6-14
PROTOCOL-BASED VIRTUAL LANS (VLANs)	6-14
LAYER 3 ROUTING FEATURES	6-15
MULTI-NETTING	6-15
MULTIPLE IP SUB-NETS PER INTERFACE	6-15
MULTIPLE IPX FRAME TYPE SUPPORT PER INTERFACE	6-15
MULTI-PORT SUBNETS (INTEGRATED SWITCH-ROUTING)	6-15
STATIC IP ROUTES, ADDRESS RESOLUTION PROTOCOL (ARP) ENTRIES, AND REVERSE ARP (RARP) ENTRIES	6-16
IP/RIP ROUTING	6-16
IP ACCESS AND QOS FILTERS	6-17
IP ROUTE FILTERS	6-17
IPX ROUTING	6-17
IPX FORWARD FILTERS	6-18
IPX/RIP AND IPX/SAP FILTERS	6-18
APPLETALK ROUTING	6-18
APPLETALK ZONE AND NETWORK FILTERS	6-18
IP MULTICAST ROUTING (PIM AND DVMRP)	6-18
IP/RIP AND IP/OSPF REDISTRIBUTION FILTERS	6-19
USER DATAGRAM PROTOCOL (UDP) HELPER	6-19
TCP/UDP ACCESS POLICIES	6-19
LOAD BALANCING AND REDUNDANCY FEATURES	6-20
SELECTABLE QUALITY OF SERVICE (QoS)	6-20
ROUTER-BASED HEALTH CHECKING	6-20
VIRTUAL ROUTER REDUNDANCY PROTOCOL (VRRP)	6-20
SERVER REDUNDANCY PROTOCOL (SRP)	6-21
HARDWARE OVERVIEW	7-1
CHASSIS DEVICES	7-1
FIXED-PORT SWITCH HP 6208M-SX AND ROUTING SWITCH HP 6308M-SX	7-5
SYSTEM ARCHITECTURE	7-5
CHASSIS ARCHITECTURE	7-5
FIXED-PORT ARCHITECTURE	7-6

PHYSICAL VIEW	7-7
SLOT AND PORT NUMBERS	7-8
AC POWER CONNECTOR	7-9
BUFFERING	7-9
FANS	7-9
LEDs	7-9
PORTS	7-10
PROCESSORS	7-11
MODULES	7-11
AC POWER SUPPLY	7-11
STANDARD AND REDUNDANT POWER OPTIONS	7-12
TEMPERATURE SENSOR	7-12
RESET BUTTON	7-12

CONFIGURING BASIC FEATURES..... 8-1

USING THE WEB MANAGEMENT INTERFACE FOR BASIC CONFIGURATION CHANGES	8-2
CONFIGURING BASIC SYSTEM PARAMETERS	8-3
ENTERING SYSTEM ADMINISTRATION INFORMATION	8-4
CONFIGURING THE IP ADDRESS INFORMATION	8-5
ENABLING DOMAIN NAME SERVER (DNS) RESOLVER	8-7
CONFIGURING SIMPLE NETWORK MANAGEMENT (SNMP) PARAMETERS	8-9
SPECIFYING A SIMPLE NETWORK TIME PROTOCOL (SNTP) SERVER	8-13
SETTING THE SYSTEM CLOCK	8-14
CONFIGURING THE SYSLOG SERVICE	8-16
CHANGING THE DEFAULT GIGABIT NEGOTIATION MODE	8-20
LIMITING BROADCAST, MULTICAST, OR UNKNOWN-UNICAST RATES	8-22
CONFIGURING BASIC PORT PARAMETERS	8-23
ASSIGNING A PORT NAME	8-25
MODIFYING PORT SPEED	8-26
MODIFYING PORT MODE	8-27
DISABLING OR RE-ENABLING A PORT	8-27
DISABLING OR RE-ENABLING FLOW CONTROL	8-28
CHANGING THE 802.3X GIGABIT NEGOTIATION MODE	8-29
MODIFYING PORT PRIORITY (QOS)	8-29
CONFIGURING BASIC LAYER 2 PARAMETERS	8-30
ENABLING OR DISABLING THE SPANNING TREE PROTOCOL (STP)	8-30
ENABLING OR DISABLING LAYER 2 SWITCHING (ROUTING SWITCHES ONLY)	8-33
CHANGING THE MAC AGE TIME	8-34
CONFIGURING STATIC MAC ENTRIES	8-34
ENABLING PORT-BASED VLANs	8-36
CONFIGURING TRUNK GROUPS	8-38
CONFIGURING DHCP ASSIST (SWITCH ONLY)	8-48
ENABLING OR DISABLING IP MULTICAST TRAFFIC REDUCTION (SWITCH ONLY)	8-51
DEFINING MAC ADDRESS FILTERS	8-52
DEFINING BROADCAST AND MULTICAST FILTERS	8-55
LOCKING A PORT TO RESTRICT ADDRESSES	8-57

CONFIGURING BASIC LAYER 3 PARAMETERS	8-58
DISPLAYING AND MODIFYING SYSTEM PARAMETER DEFAULT SETTINGS	8-59
ASSIGNING A MIRROR PORT AND A MONITOR PORT	8-61

