

Contents

GETTING STARTED.....	1-1
INTRODUCTION	1-1
AUDIENCE	1-1
NOMENCLATURE	1-1
TERMINOLOGY	1-2
RELATED PUBLICATIONS	1-2
WHAT'S NEW IN THIS EDITION?	1-3
CHASSIS HARDWARE ENHANCEMENT	1-3
LAYER 3 ENHANCEMENTS	1-3
LAYER 2 ENHANCEMENTS	1-5
SYSTEM-LEVEL ENHANCEMENTS	1-5
SUPPORT AND WARRANTY INFORMATION	1-6
QUALITY OF SERVICE (QoS).....	2-1
THE QUEUES	2-1
AUTOMATIC QUEUE MAPPING FOR IP TYPE OF SERVICE (TOS) VALUES	2-2
QUEUEING METHODS	2-3
SELECTING THE QUEUEING METHOD	2-3
CONFIGURING THE QUEUES	2-4
DISPLAYING THE QoS PROFILE CONFIGURATION	2-10
ASSIGNING QoS PRIORITIES TO TRAFFIC	2-11
CHANGING A PORT'S PRIORITY	2-11
CHANGING A LAYER 2 PORT-BASED VLAN'S PRIORITY	2-12
REASSIGNING 802.1P PRIORITIES TO DIFFERENT QUEUES	2-14
ASSIGNING STATIC MAC ENTRIES TO PRIORITY QUEUES	2-16
ASSIGNING IP AND LAYER 4 SESSIONS TO PRIORITY QUEUES	2-17
ASSIGNING APPLE TALK SOCKETS TO PRIORITY QUEUES	2-25
CONFIGURING A UTILIZATION LIST FOR AN UPLINK PORT	2-26
DISPLAYING UTILIZATION PERCENTAGES FOR AN UPLINK	2-28

USING ACCESS CONTROL LISTS (ACLs)	3-1
OVERVIEW	3-1
ACL IDS AND ENTRIES	3-2
DEFAULT ACL ACTION	3-2
CONTROLLING MANAGEMENT ACCESS TO THE DEVICE	3-2
ACL LOGGING	3-2
DISABLING OR RE-ENABLING ACCESS CONTROL LISTS (ACLs)	3-3
ENABLING ACL MODE	3-3
DISABLING ACL MODE	3-4
CONFIGURING STANDARD ACLS	3-5
STANDARD ACL SYNTAX	3-5
CONFIGURING EXTENDED ACLS	3-6
EXTENDED ACL SYNTAX	3-8
CONFIGURING NAMED ACLS	3-12
MODIFYING ACLS	3-13
DISPLAYING ACLS	3-15
DISPLAYING THE LOG ENTRIES	3-15
SPANNING TREE PROTOCOL (STP)	4-1
FAST PORT SPAN	4-1
DISABLING AND RE-ENABLING FAST PORT SPAN	4-2
EXCLUDING SPECIFIC PORTS FROM FAST PORT SPAN	4-3
FAST UPLINK SPAN	4-3
FAST UPLINK SPAN RULES FOR TRUNK GROUPS	4-4
CONFIGURING A FAST UPLINK PORT GROUP	4-4
SINGLE SPANNING TREE	4-5
STP DEFAULTS	4-5
SINGLE STP AND EXISTING PORT-BASED VLANs	4-5
SPANNING TREE PARAMETERS	4-6
ENABLING SINGLE STP	4-6
CONFIGURING IP AND IP/RIP	5-1
OVERVIEW OF IP/RIP	5-1
IP/RIP FEATURES	5-2
ICMP HOST UNREACHABLE MESSAGE FOR UNDELIVERABLE ARPs	5-3
CONFIGURING IP AND IP/RIP	5-3
DYNAMIC IP/RIP CONFIGURATION	5-3
ENABLING IP/RIP	5-4
ASSIGNING IP ADDRESSES	5-4
MODIFYING GLOBAL IP AND IP/RIP PARAMETERS (OPTIONAL)	5-6
DEFINING STATIC IP ROUTES	5-14
DEFINING A DEFAULT NETWORK ROUTE	5-18
ASSIGNING STATIC ARP ENTRIES (OPTIONAL)	5-20
ASSIGNING STATIC RARP ENTRIES (OPTIONAL)	5-20
ASSIGNING IP AND IP/RIP FILTERS	5-21
DEFINING IP ACCESS POLICIES	5-22

APPLYING IP ACCESS POLICIES TO PORTS	5-27
DEFINING IP/RIP ROUTE FILTERS	5-29
APPLYING IP/RIP ROUTE FILTERS TO PORTS	5-30
DEFINING IP/RIP NEIGHBOR FILTERS	5-31
DEFINING REDISTRIBUTION FILTERS	5-32
MODIFY IP AND IP/RIP INTERFACE PARAMETERS (OPTIONAL)	5-34
MODIFYING IP INTERFACE PARAMETERS	5-35
IP/RIP INTERFACE PARAMETERS	5-37
MODIFY GLOBAL IP/RIP PARAMETERS	5-38
ENABLING OR DISABLING REDISTRIBUTION	5-39
MODIFYING THE REDISTRIBUTION GLOBAL DEFAULT METRIC	5-39
MODIFYING THE DEFAULT ADMINISTRATIVE DISTANCE	5-40
ENABLING IP/RIP DEFAULT ROUTE LEARNING AND ADVERTISING	5-41
CONFIGURING UDP HELPER (OPTIONAL)	5-41
DISPLAYING IP AND RIP INFORMATION	5-43
DISPLAYING GLOBAL IP CONFIGURATION INFORMATION	5-43
DISPLAYING IP INTERFACE INFORMATION	5-46
DISPLAYING THE ARP CACHE	5-49
DISPLAYING THE IP HOST CACHE	5-50
DISPLAYING THE IP FORWARDING CACHE	5-53
DISPLAYING THE IP ROUTE TABLE	5-53
DISPLAYING IP TRAFFIC STATISTICS	5-56
DISPLAYING RIP FILTERS	5-62
CLEARING IP ROUTES	5-64

CONFIGURING OSPF 6-1

OVERVIEW OF OSPF	6-1
DESIGNATED ROUTERS IN MULTI-ACCESS NETWORKS	6-3
DESIGNATED ROUTER ELECTION	6-3
OSPF RFC 1583 AND 2178 COMPLIANCE	6-4
DYNAMIC OSPF ACTIVATION AND CONFIGURATION	6-5
CONFIGURING OSPF	6-5
CONFIGURATION RULES	6-5
OSPF PARAMETERS	6-6
ENABLE OSPF ON THE ROUTING SWITCH	6-7
ASSIGN OSPF AREAS	6-7
ASSIGNING AN AREA RANGE (OPTIONAL)	6-13
ASSIGNING INTERFACES TO AN AREA	6-14
MODIFY INTERFACE DEFAULTS	6-16
BLOCK FLOODING OF OUTBOUND LSAS ON SPECIFIC OSPF INTERFACES	6-18
ASSIGN VIRTUAL LINKS	6-18
MODIFY VIRTUAL LINK PARAMETERS	6-21
DEFINE REDISTRIBUTION FILTERS	6-22
MODIFY DEFAULT METRIC FOR REDISTRIBUTION	6-25
ENABLE ROUTE REDISTRIBUTION	6-26
DISABLE OR RE-ENABLE LOAD SHARING	6-28

CONFIGURE EXTERNAL ROUTE SUMMARIZATION	6-31
CONFIGURE DEFAULT ROUTE ORIGINATION	6-32
MODIFY SPF TIMERS	6-33
MODIFY REDISTRIBUTION METRIC TYPE	6-33
MODIFY THE MAXIMUM NUMBER OF ROUTES	6-34
MODIFY LSDB LIMITS	6-34
MODIFY EXIT OVERFLOW INTERVAL	6-35
MODIFY ADMINISTRATIVE DISTANCE	6-36
MODIFY OSPF TRAPS GENERATED	6-36
MODIFY OSPF STANDARD COMPLIANCE SETTING	6-38
DISPLAYING OSPF INFORMATION	6-38
DISPLAYING GENERAL OSPF CONFIGURATION INFORMATION	6-38
DISPLAYING OSPF AREA INFORMATION	6-40
DISPLAYING OSPF NEIGHBOR INFORMATION	6-41
DISPLAYING OSPF INTERFACE INFORMATION	6-42
DISPLAYING OSPF ROUTE INFORMATION	6-43
DISPLAYING OSPF EXTERNAL LINK STATE INFORMATION	6-44
DISPLAYING OSPF LINK STATE INFORMATION	6-46
DISPLAYING THE DATA IN AN LSA	6-46
DISPLAYING OSPF VIRTUAL NEIGHBOR INFORMATION	6-47
DISPLAYING OSPF VIRTUAL LINK INFORMATION	6-47
DISPLAYING OSPF ABR AND ASBR INFORMATION	6-48
DISPLAYING OSPF TRAP STATUS	6-48

CONFIGURING IP MULTICAST PROTOCOLS..... 7-1

OVERVIEW OF IP MULTICASTING	7-1
MULTICAST TERMS	7-1
CHANGING GLOBAL IP MULTICAST PARAMETERS	7-2
MODIFYING IGMP QUERY INTERVAL PERIOD	7-2
MODIFYING IGMP MEMBERSHIP TIME	7-3
MODIFYING IGMP MAXIMUM RESPONSE TIME	7-3
DISABLING IGMP QUERIES ON INDIVIDUAL PORTS	7-3
PIM DENSE OVERVIEW	7-4
INITIATING PIM MULTICASTS ON A NETWORK	7-4
PRUNING A MULTICAST TREE	7-4
GRAFTS TO A MULTICAST TREE	7-6
CONFIGURING PIM	7-7
ENABLING PIM ON THE ROUTING SWITCH AND AN INTERFACE	7-7
MODIFYING PIM GLOBAL PARAMETERS	7-8
MODIFYING PIM INTERFACE PARAMETERS	7-11
PIM SPARSE OVERVIEW	7-12
PIM SPARSE ROUTER TYPES	7-13
RP PATHS AND SPT PATHS	7-13
CONFIGURING PIM SPARSE	7-14
LIMITATIONS IN THIS RELEASE	7-14
CONFIGURING GLOBAL PARAMETERS	7-14

CONFIGURING PIM INTERFACE PARAMETERS	7-15
CONFIGURING PIM SPARSE GLOBAL PARAMETERS	7-15
STATICALLY SPECIFYING THE RP	7-16
CHANGING THE SHORTEST PATH TREE (SPT) THRESHOLD	7-17
CHANGING THE PIM JOIN AND PRUNE MESSAGE INTERVAL	7-18
DISPLAYING PIM SPARSE CONFIGURATION INFORMATION AND STATISTICS	7-18
DVMRP OVERVIEW	7-30
INITIATING DVMRP MULTICASTS ON A NETWORK	7-30
PRUNING A MULTICAST TREE	7-31
GRAFTS TO A MULTICAST TREE	7-32
CONFIGURING DVMRP	7-32
ENABLING DVMRP ON THE ROUTING SWITCH AND INTERFACE	7-32
MODIFYING DVMRP GLOBAL PARAMETERS	7-34
MODIFYING DVMRP INTERFACE PARAMETERS	7-38
CONFIGURING AN IP TUNNEL	7-41
CONFIGURING A STATIC MULTICAST ROUTE	7-42
TRACING A MULTICAST ROUTE	7-44
DISPLAYING ANOTHER MULTICAST ROUTER'S MULTICAST CONFIGURATION	7-45
CONFIGURING BGP4	8-1
OVERVIEW OF BGP4	8-1
RELATIONSHIP BETWEEN THE BGP4 ROUTE TABLE AND THE IP ROUTE TABLE	8-2
HOW BGP4 SELECTS A PATH FOR A ROUTE	8-3
BGP4 MESSAGE TYPES	8-4
BASIC CONFIGURATION AND ACTIVATION FOR BGP4	8-5
BGP4 PARAMETERS	8-6
WHEN PARAMETER CHANGES TAKE EFFECT	8-8
MEMORY CONSIDERATIONS	8-10
CONFIGURING BGP4	8-10
BASIC CONFIGURATION TASKS	8-11
ENABLING BGP4 ON THE ROUTING SWITCH	8-11
CHANGING THE ROUTER ID	8-12
SETTING THE LOCAL AS NUMBER	8-12
ADDING A LOOPBACK INTERFACE	8-13
ADDING BGP4 NEIGHBORS	8-14
OPTIONAL CONFIGURATION TASKS	8-20
CHANGING THE KEEP ALIVE TIME AND HOLD TIME	8-20
ENABLING FAST EXTERNAL FALLOVER	8-20
CHANGING THE MAXIMUM NUMBER OF NEIGHBORS	8-21
CHANGING THE MAXIMUM NUMBER OF ROUTES	8-22
CHANGING THE MAXIMUM NUMBER OF ROUTE-ATTRIBUTE ENTRIES	8-23
CHANGING THE MAXIMUM NUMBER OF PATHS FOR BGP4 LOAD SHARING	8-24
SPECIFYING A LIST OF NETWORKS TO ADVERTISE	8-25
CHANGING THE DEFAULT LOCAL PREFERENCE	8-26
ADVERTISING THE DEFAULT INFORMATION ORIGINATE	8-27
CHANGING THE DEFAULT MED (METRIC) USED FOR ROUTE REDISTRIBUTION	8-27

CHANGING ADMINISTRATIVE DISTANCES	8-28
CONFIGURING THE ROUTING SWITCH TO ALWAYS COMPARE MULTI-EXIT DISCRIMINATORS (MEDS)	8-29
SYNCHRONIZING ROUTES	8-30
AUTOMATICALLY SUMMARIZING SUBNET ROUTES INTO CLASS A, B, OR C NETWORKS	8-30
CONFIGURING ROUTE REFLECTION PARAMETERS	8-31
CONFIGURING CONFEDERATIONS	8-33
AGGREGATING ROUTES ADVERTISED TO BGP4 NEIGHBORS	8-35
MODIFYING REDISTRIBUTION PARAMETERS	8-37
FILTERING SPECIFIC IP ADDRESSES	8-40
FILTERING AS-PATHS	8-41
FILTERING COMMUNITIES	8-47
DEFINING IP PREFIX LISTS	8-50
DEFINING NEIGHBOR DISTRIBUTE LISTS	8-53
DEFINING ROUTE MAPS	8-55
USING A TABLE MAP TO SET THE TAG VALUE	8-63
CONFIGURING ROUTE FLAP DAMPENING	8-64
GLOBALLY CONFIGURING ROUTE FLAP DAMPENING	8-65
USING A ROUTE MAP TO CONFIGURE ROUTE FLAP DAMPENING FOR SPECIFIC ROUTES	8-66
USING A ROUTE MAP TO CONFIGURE ROUTE FLAP DAMPENING FOR A SPECIFIC NEIGHBOR	8-71
REMOVING ROUTE DAMPENING FROM A ROUTE	8-73
DISPLAYING AND CLEARING ROUTE FLAP DAMPENING STATISTICS	8-74
DISPLAYING BGP4 INFORMATION	8-76
DISPLAYING SUMMARY BGP4 INFORMATION	8-76
DISPLAYING BGP4 NEIGHBOR INFORMATION	8-79
DISPLAYING THE BGP4 ROUTE TABLE	8-87
DISPLAYING BGP4 ROUTE-ATTRIBUTE ENTRIES	8-90
DISPLAYING THE ROUTES BGP4 HAS PLACED IN THE IP ROUTE TABLE	8-92
DISPLAYING ROUTE FLAP DAMPENING STATISTICS	8-92
CLEARING TRAFFIC COUNTERS	8-94
CLEARING ROUTE FLAP DAMPENING STATISTICS	8-94
CLOSING OR RESETTING SESSIONS WITH NEIGHBORS	8-95
REMOVING ROUTE FLAP DAMPENING	8-95
CLEARING DIAGNOSTIC BUFFERS	8-96
CONFIGURING VRRP	9-1
OVERVIEW OF VIRTUAL ROUTER REDUNDANCY PROTOCOL (VRRP)	9-2
VIRTUAL ROUTER ID (VRID)	9-3
VIRTUAL ROUTER MAC ADDRESS	9-3
VIRTUAL ROUTER IP ADDRESS	9-4
MASTER NEGOTIATION	9-4
ADVERTISEMENT MESSAGES	9-4
TRACK PORTS AND TRACK PRIORITY	9-5
SUPPRESSION OF RIP ADVERTISEMENTS FOR BACKED UP INTERFACES	9-5
AUTHENTICATION	9-5
INDEPENDENT OPERATION OF VRRP ALONGSIDE RIP, OSPF, AND BGP4	9-6
DYNAMIC VRRP CONFIGURATION	9-6

DIFFERENCES BETWEEN VRRP AND SRP	9-6
CONFIGURING VRRP	9-6
CONFIGURATION RULES FOR VRRP	9-7
ENABLING VRRP	9-7
CONFIGURING A VIRTUAL ROUTER	9-8
MODIFYING VRRP PARAMETERS	9-12
FORCING A MASTER ROUTER TO ABDICATE TO A STANDBY ROUTER	9-16
DISPLAYING VRRP CONFIGURATION INFORMATION AND STATISTICS	9-17
DISPLAYING CONFIGURATION INFORMATION	9-17
DISPLAYING VRRP STATISTICS	9-17
CLEARING VRRP STATISTICS	9-18

CONFIGURING SRP..... 10-1

OVERVIEW OF STANDBY ROUTER PROTOCOL (SRP)	10-2
SRP SUPPORT ON VIRTUAL INTERFACES	10-3
ACTIVE AND STANDBY ROUTERS	10-3
TRACK PORTS	10-3
INDEPENDENT OPERATION OF RIP AND OSPF	10-6
DYNAMIC SRP CONFIGURATION	10-6
DIFFERENCES BETWEEN SRP AND VRRP	10-7
CONFIGURING SRP	10-7
CONFIGURATION RULES FOR SRP	10-8
ENABLE SRP ON THE ROUTING SWITCH	10-8
ASSIGN VIRTUAL ROUTER IP ADDRESSES	10-9
ASSIGN THE TRACK PORT(S)	10-10
ASSIGNING THE ACTIVE ROUTER	10-10
MODIFY PORT PARAMETERS (OPTIONAL)	10-11
CONFIGURING SRP ON VIRTUAL INTERFACES	10-14

CONFIGURING IPX 11-1

OVERVIEW OF IPX	11-1
MULTIPLE IPX FRAME TYPE SUPPORT PER INTERFACE	11-1
CONFIGURING IPX	11-1
DYNAMIC IPX CONFIGURATION	11-2
ENABLE IPX	11-2
ENABLE NETBIOS	11-3
ASSIGN IPX NETWORK NUMBER, FRAME TYPE, ENABLE NETBIOS ON AN INTERFACE	11-3
DEFINE AND ASSIGN A FORWARD FILTER AND GROUP	11-5
DEFINE AND ASSIGN AN IPX/RIP FILTER AND GROUP	11-7
CONFIGURING IPX SAP ACCESS CONTROL LISTS (ACLs)	11-9
ENABLE ROUND-ROBIN GNS REPLIES	11-10
FILTER GNS REPLIES	11-10
DISABLE GNS REPLIES	11-11
MODIFY MAXIMUM SAP AND RIP ROUTE ENTRIES	11-11
MODIFY RIP AND SAP HOP COUNT INCREMENT	11-12
MODIFY THE RIP ADVERTISEMENT PACKET SIZE	11-13

MODIFY THE SAP ADVERTISEMENT PACKET SIZE	11-13
MODIFY THE RIP ADVERTISEMENT INTERVAL	11-14
MODIFY THE SAP ADVERTISEMENT INTERVAL	11-14
MODIFY THE AGE TIMER FOR LEARNED IPX ROUTES	11-15
MODIFY THE AGE TIMER FOR LEARNED SAP ENTRIES	11-15
DISPLAYING IPX CONFIGURATION INFORMATION AND STATISTICS	11-16
DISPLAYING GLOBAL IPX CONFIGURATION INFORMATION	11-16
DISPLAYING IPX INTERFACE INFORMATION	11-17
DISPLAYING THE IPX FORWARDING CACHE	11-19
DISPLAYING THE IPX ROUTE TABLE	11-20
DISPLAYING THE IPX SERVER TABLE	11-21
DISPLAYING IPX TRAFFIC STATISTICS	11-22

CONFIGURING APPLE TALK..... 12-1

OVERVIEW OF APPLE TALK	12-1
ADDRESS ASSIGNMENT	12-1
NETWORK COMPONENTS	12-1
ZONE FILTERING	12-2
NETWORK FILTERING	12-3
SEED AND NON-SEED ROUTERS	12-3
APPLE TALK COMPONENTS SUPPORTED ON THE HP 9304M, HP 9308M, AND HP 6208M-SX ROUTING	
SWITCHES	12-3
SESSION LAYER SUPPORT	12-3
TRANSPORT LAYER SUPPORT	12-3
NETWORK LAYER SUPPORT	12-4
DATA LINK SUPPORT	12-4
DYNAMIC APPLE TALK ACTIVATION AND CONFIGURATION	12-4
CONFIGURING APPLE TALK ROUTING	12-4
ENABLE APPLE TALK	12-4
CONFIGURING A SEED APPLE TALK ROUTER	12-5
CONFIGURING A NON-SEED APPLE TALK ROUTER	12-7
ENABLING APPLE TALK ROUTING AT THE GLOBAL (SYSTEM) LEVEL	12-7
ENABLE APPLE TALK ROUTING ON AN INTERFACE	12-8
MODIFYING APPLE TALK INTERFACE CONFIGURATIONS	12-9
FILTERING APPLE TALK ZONES AND NETWORKS	12-10
DEFINING ZONE FILTERS	12-10
DEFINE ADDITIONAL ZONE FILTERS	12-12
NETWORK FILTERING	12-13
ROUTING BETWEEN APPLE TALK VLANs USING VIRTUAL INTERFACES	12-13
MODIFYING APPLE TALK GLOBAL PARAMETERS	12-16
APPLE TALK ARP AGE	12-17
APPLE TALK ARP RETRANSMIT COUNT	12-17
APPLE TALK ARP RETRANSMIT INTERVAL	12-18
APPLE TALK GLEAN PACKETS	12-18
APPLE TALK QOS SOCKET	12-19
APPLE TALK RTMP UPDATE INTERVAL	12-19

APPLETALK ZIP QUERY INTERVAL	12-19
DISPLAYING APPLETALK INFORMATION	12-20
CLEARING APPLETALK INFORMATION	12-21

CONFIGURING VLANS 13-1

OVERVIEW	13-1
TYPES OF VLANS	13-1
DEFAULT VLAN	13-5
802.1P TAGGING	13-5
SPANNING TREE PROTOCOL (STP)	13-7
VIRTUAL INTERFACES	13-8
DYNAMIC, STATIC, AND EXCLUDED PORT MEMBERSHIP	13-9
TRUNK GROUP PORTS AND VLAN MEMBERSHIP	13-11
SUMMARY OF VLAN CONFIGURATION RULES	13-11
ROUTING BETWEEN VLANS (ROUTING SWITCHES ONLY)	13-12
VIRTUAL INTERFACES (ROUTING SWITCHES ONLY)	13-12
BRIDGING AND ROUTING THE SAME PROTOCOL SIMULTANEOUSLY ON THE SAME DEVICE (ROUTING SWITCHES ONLY)	13-12
ROUTING BETWEEN VLANS USING VIRTUAL INTERFACES (ROUTING SWITCHES ONLY)	13-12
ASSIGNING A DIFFERENT VLAN ID TO THE DEFAULT VLAN	13-13
ASSIGNING TRUNK GROUP PORTS	13-13
CONFIGURING PORT-BASED VLANS	13-13
MODIFYING A PORT-BASED VLAN	13-17
CONFIGURING IP SUB-NET, IPX NETWORK AND PROTOCOL-BASED VLANS	13-20
ROUTING BETWEEN VLANS USING VIRTUAL INTERFACES (ROUTING SWITCHES ONLY)	13-21
CONFIGURING APPLETALK CABLE VLANS	13-29
CONFIGURATION GUIDELINES	13-29
CONFIGURATION EXAMPLE	13-30
CONFIGURING PROTOCOL VLANs WITH DYNAMIC PORTS	13-32
AGING OF DYNAMIC PORTS	13-32
CONFIGURATION GUIDELINES	13-33
CONFIGURING AN IP, IPX, OR APPLETALK PROTOCOL VLAN WITH DYNAMIC PORTS	13-33
CONFIGURING AN IP SUB-NET VLAN WITH DYNAMIC PORTS	13-33
CONFIGURING AN IPX NETWORK VLAN WITH DYNAMIC PORTS	13-34
CONFIGURING THE SAME IP SUB-NET ADDRESS ON MULTIPLE PORT-BASED VLANs	13-35
CONFIGURING VLANs USING THE WEB MANAGEMENT INTERFACE	13-38
CONFIGURING A PORT-BASED VLAN	13-38
CONFIGURING A PROTOCOL-BASED VLAN	13-39
CONFIGURING AN IP SUB-NET VLAN	13-41
CONFIGURING AN IPX NETWORK VLAN	13-42
CONFIGURING AN APPLETALK CABLE VLAN	13-43
DISPLAYING VLAN INFORMATION	13-45
DISPLAYING SYSTEM-WIDE VLAN INFORMATION	13-45
DISPLAYING VLAN INFORMATION FOR SPECIFIC PORTS	13-46

ROUTE HEALTH INJECTION..... 14-1

CONFIGURATION EXAMPLE	14-1
HTTP HEALTH CHECK ALGORITHM	14-3
CONFIGURATION CONSIDERATIONS	14-4
CLI SYNTAX	14-4
GLOBAL CONFIG LEVEL	14-4
REAL SERVER LEVEL	14-4
INTERFACE LEVEL	14-5
CONFIGURING THE HTTP HEALTH CHECK ON THE ROUTING SWITCH	14-5
CLI COMMANDS FOR 6308M-SX R1	14-5
CLI COMMANDS FOR 9308M R2	14-6
CLI COMMANDS FOR 6308M-SX R3	14-7
DISPLAYING SERVER AND APPLICATION PORT INFORMATION	14-7
DISPLAYING SERVER INFORMATION	14-7
DISPLAYING KEEPALIVE INFORMATION	14-8
NETWORK MONITORING	A-1
RMON SUPPORT	A-1
STATISTICS (RMON GROUP 1)	A-1
HISTORY (RMON GROUP 2)	A-2
ALARM (RMON GROUP 3)	A-3
EVENT (RMON GROUP 9)	A-3
CHANGING THE WEB MANAGEMENT POLLING INTERVAL	A-3
VIEWING SYSTEM INFORMATION	A-3
VIEWING THE CONFIGURATION INFORMATION	A-4
VIEWING PORT STATISTICS	A-4
VIEWING STP STATISTICS	A-5
CLEARING STATISTICS	A-5
POLICIES AND FILTERS	B-1
SCOPE	B-2
DEFAULT FILTER ACTIONS	B-3
POLICY AND FILTER PRECEDENCE	B-4
QoS	B-4
PRECEDENCE AMONG FILTERS ON DIFFERENT LAYERS	B-4
PRECEDENCE AMONG FILTERS ON THE SAME LAYER	B-4
POLICIES	B-5
QUALITY-OF-SERVICE POLICIES	B-5
LAYER 3 POLICIES	B-6
LAYER 4 POLICIES	B-9
FILTERS	B-11
LAYER 2 FILTERS	B-12
LAYER 3 FILTERS	B-16
LAYER 4 FILTERS	B-28