

GETTING STARTED	1-1
INTRODUCTION	1-1
AUDIENCE	1-1
NOMENCLATURE	1-1
RELATED PUBLICATIONS	1-2
SUPPORT AND WARRANTY INFORMATION	1-2
USING THE COMMAND LINE INTERFACE	2-1
EXEC COMMANDS	2-2
PRIVILEGED LEVEL	2-2
CONFIG COMMANDS	2-3
GLOBAL LEVEL	2-3
IP TUNNEL LEVEL (ROUTING SWITCHES ONLY)	2-3
BROADCAST FILTER LEVEL	2-3
MULTICAST FILTER LEVEL	2-3
BGP LEVEL (ROUTING SWITCHES ONLY)	2-3
ROUTER DVMRP LEVEL (ROUTING SWITCHES ONLY)	2-3
ROUTER OSPF LEVEL (ROUTING SWITCHES ONLY)	2-3
ROUTER PIM LEVEL (ROUTING SWITCH ONLY)	2-3
ROUTER RIP LEVEL (ROUTING SWITCH ONLY)	2-3
REAL SERVER LEVEL (ROUTING SWITCH ONLY)	2-3
APPLICATION PORT LEVEL (ROUTING SWITCH ONLY)	2-4
ROUTE MAP LEVEL (ROUTING SWITCH ONLY)	2-4
ROUTER VRRP LEVEL (ROUTING SWITCH ONLY)	2-4
VLAN LEVEL	2-4
ACCESSING THE CLI	2-4
NAVIGATING AMONG COMMAND LEVELS	2-5
CLI COMMAND STRUCTURE	2-5
SYNTAX SHORTCUTS	2-6
SAVING CONFIGURATION CHANGES	2-6

COMMAND LIST	3-1
COMPLETE COMMAND LIST	3-1
COMMANDS LISTED BY CLI LEVEL	3-16
EXEC LEVEL	3-16
PRIVILEGED LEVEL	3-16
CONFIG COMMANDS	3-18
USER EXEC COMMANDS.....	4-1
PRIVILEGED EXEC COMMANDS	5-1
GLOBAL CONFIG COMMANDS	6-1
INTERFACE COMMANDS	7-1
IP TUNNEL COMMANDS.....	8-1
RIP COMMANDS	9-1
BROADCAST AND MULTICAST FILTER COMMANDS	10-1
BROADCAST FILTER COMMANDS	10-1
MULTICAST FILTER COMMANDS	10-3
DVMRP COMMANDS	11-1
PIM COMMANDS.....	12-1
OSPF COMMANDS	13-1
BGP4 COMMANDS	14-1
ROUTE MAP COMMANDS.....	15-1
VRRP COMMANDS	16-1
VLAN COMMANDS	17-1
REAL SERVER COMMANDS	18-1
APPLICATION PORT COMMANDS.....	19-1
SHOW COMMANDS.....	20-1