
Read Me First

for ProCurve Manager v.2.1, Identity Driven Manager 2.0, Mobility Manager 1.0

To install PCM, PCM+, IDM, or Mobility, simply insert the product disc into the CD ROM or DVD drive on the computer you will use as your network management station. The program will auto install. If, for whatever reason, the auto install does not work, run the **install.exe** program from the CD.

Before you Install

Please Refer To The PCM 2.1 Release Notes For The Latest Information. Release Notes can be accessed from the HP ProCurve Website at:

www.hp.com/rnd/support/manuals/ProCurve-Manager.htm

Upgrading PCM 1.6 or 2.0 to PCM 2.1

You must have version 1.6 or 2.0 of PCM+ installed prior to upgrading your installation to PCM+ 2.1.

- If you are upgrading ProCurve Manager 1.6, back up the database file: **\PNM\server\db\solid.db** before beginning the installation wizard.
- If you are upgrading ProCurve Manager 2.0, back up the database file: **\PNM\server\mysql** directory before beginning the installation wizard. This will allow you to restore your data if the existing database is lost or corrupted during database migration.

NOTE: Once you install PCM or PCM+ Version 2.1 you can not revert to the previously installed version. If you are uncertain if you want to upgrade to the 2.1 Version, it is best to install it on a system that does not have any earlier versions of PCM or PCM+ installed.

Minimum system requirements

- Processor: 2.0 GHz Intel® Pentium® or equivalent
- Memory: 1 GB RAM
- Disk Space: 1 GB free hard disk space

Recommended system requirements

- Processor: 3.0 GHz Intel® Pentium® or equivalent
- Memory: 2 GB RAM
- Disk Space: 2 GB free hard disk space

Additional processing power and hard disk space may be needed for extensive traffic monitoring and for managing larger networks.

Upgrading IDM 1.0 to IDM 2.0

If IDM 1.0 is currently installed, you must install IDM 2.0. This is required to support changes made in the underlying PCM and IDM databases.

Additional requirements for IDM

- HP ProCurve Manager Plus software must be installed for IDM to operate. The IDM software cannot be installed as a separate component.
- An additional 500 MB free hard disk space is required for IDM.
- Implementation of Microsoft's Internet Authentication Service on Windows 2003 Server (Enterprise or Standard Edition) or implementation of Funk's Steel Belted Radius. The IDM agent will be installed on this system.
- Implementation of an access control method, using either MAC-auth, Web-auth, or an 802.1x supplicant application.



© 2004, 2005 Hewlett-Packard
Development Company, LP. The
information contained herein is
subject to change without notice.

November, 2005
Printed in Singapore
Part Number: 5991-2190

