

Read Me First

for the ProCurve 620 External Power Supplies

Contents

Before You Begin Using Your ProCurve External Power Supplies	page 1
How to Connect Your Devices	page 1
ProCurve Networking Support Services	page 2
About Your ProCurve 620 External Power Supplies Manual Set	page 2

Before You Begin Using Your ProCurve External Power Supplies

Check to ensure you are using the correct software version with your switch.

Update your ProCurve 2900 or 3500yl-PWR switch Software

You may need to update the software in your switch before you are able to use the complete capabilities of your new power supply. The minimum software version for the ProCurve 2900 switches is T.11.10 or greater and for the 3500yl-PWR switches is K.11.60 or greater.

To access the latest software updates, go to the ProCurve Web site at www.procurve.com, then click on **Software updates** to go to the “ProCurve Networking software updates” page. Under **Latest software** click on **Switches** to go to the page that has the free download for your switch.

To Determine the Current Software Version in Your Switch. Use any of the following methods to view the software version:

- Start a console session with the switch. In the console login screen (the first screen displayed), the **Firmware revision** line under the switch name shows the software version.
- If you already have a console session going, at the prompt enter the **show version** command. The resulting display lists the current software version.
- In the web browser interface, click on the **Identity** tab. The current software version is listed as the **revision** number in the **Version** line.

Compare the software version that is available on the web site with the version that is currently installed on your switch.

How to Connect Your Devices

To properly use the capabilities of your ProCurve External Power Supplies reference the *ProCurve 620 External Power Supplies Installation and Getting Started Guide*.

For a discussion of how to plan and implement your PoE deployment reference the *Power over Ethernet (PoE) for zl and yl Products, Planning and Implementation Guide*.

ProCurve Networking Support Services

ProCurve offers a wide variety of onsite and offsite support services for all ProCurve networking products. For a list of services available for these ProCurve products, visit

www.hp.com/go/procurveservices

About Your ProCurve External Power Supplies Manual Set

The device manual set includes the following:

Document	Available on the ProCurve Web site	Shipped With the Switch
<i>Read Me First</i> (this document) ¹	Yes	Hardcopy
<i>ProCurve 620 External Power Supplies Installation and Getting Started Guide</i> ¹	Yes	Hardcopy
<i>ProCurve PoE Planning and Implementation Guide</i> ^{1,2}	Yes	Hardcopy

¹The latest edition is always available in PDF format and downloadable at www.procurve.com.

²This manual explains using the ProCurve 620 External Power Supplies in Power over Ethernet (PoE) configurations with ProCurve products that provide PoE.

