

---

# Contents

## Product Documentation

About Your Switch Manual Set .....	xxiii
Feature Index .....	xxiv

## 1 Getting Started

Contents .....	1-1
Introduction .....	1-2
Conventions .....	1-3
Feature Descriptions by Model .....	1-3
Command Syntax Statements .....	1-3
Command Prompts .....	1-4
Screen Simulations .....	1-4
Port Identity Examples .....	1-4
Keys .....	1-5
Sources for More Information .....	1-5
Getting Documentation From the Web .....	1-6
Online Help .....	1-8
Need Only a Quick Start? .....	1-9
IP Addressing .....	1-9
To Set Up and Install the Switch in Your Network .....	1-9

## 2 Static Virtual LANs (VLANs)

Contents .....	2-1
Overview .....	2-3
Introduction .....	2-4
General VLAN Operation .....	2-4
Types of Static VLANs Available in the Switch .....	2-5
Port-Based VLANs .....	2-5

Protocol-Based VLANs .....	2-5
Designated VLANs .....	2-5
<b>Terminology .....</b>	<b>2-6</b>
<b>Static VLAN Operation .....</b>	<b>2-7</b>
VLAN Environments .....	2-8
VLAN Operation .....	2-9
Routing Options for VLANs .....	2-10
Overlapping (Tagged) VLANs .....	2-10
Per-Port Static VLAN Configuration Options .....	2-12
<b>VLAN Operating Rules .....</b>	<b>2-14</b>
<b>General Steps for Using VLANs .....</b>	<b>2-17</b>
<b>Multiple VLAN Considerations .....</b>	<b>2-18</b>
Single Forwarding Database Operation .....	2-19
Example of an Unsupported Configuration and How To Correct It .....	2-20
Multiple Forwarding Database Operation .....	2-21
<b>Configuring VLANs .....</b>	<b>2-22</b>
Menu: Configuring Port-Based VLAN Parameters .....	2-22
To Change VLAN Support Settings .....	2-23
Adding or Editing VLAN Names .....	2-25
Adding or Changing a VLAN Port Assignment .....	2-26
CLI: Configuring Port-Based and Protocol-Based VLAN Parameters .....	2-28
Web: Viewing and Configuring VLAN Parameters .....	2-39
<b>802.1Q VLAN Tagging .....</b>	<b>2-40</b>
<b>Special VLAN Types .....</b>	<b>2-45</b>
VLAN Support and the Default VLAN .....	2-45
The Primary VLAN .....	2-45
The Secure Management VLAN .....	2-46
Preparation .....	2-48
Configuration .....	2-49
Deleting the Management VLAN .....	2-50
Operating Notes for Management VLANs .....	2-50
Voice VLANs .....	2-51
Operating Rules for Voice VLANs .....	2-51

Components of Voice VLAN Operation .....	2-52
Voice VLAN QoS Prioritizing (Optional) .....	2-52
Voice VLAN Access Security .....	2-53
<b>Effect of VLANs on Other Switch Features .....</b>	<b>2-53</b>
Spanning Tree Operation with VLANs .....	2-53
IP Interfaces .....	2-54
VLAN MAC Address .....	2-54
Port Trunks .....	2-54
Port Monitoring .....	2-54
Jumbo Packet Support on the Series 3400cl and Series 6400cl Switches .....	2-55
<b>VLAN Restrictions .....</b>	<b>2-55</b>

### **3 GVRP**

<b>Contents .....</b>	<b>3-1</b>
<b>Overview .....</b>	<b>3-2</b>
<b>Introduction .....</b>	<b>3-3</b>
<b>General Operation .....</b>	<b>3-4</b>
<b>Per-Port Options for Handling GVRP “Unknown VLANs” .....</b>	<b>3-7</b>
<b>Per-Port Options for Dynamic VLAN Advertising and Joining .....</b>	<b>3-9</b>
<b>GVRP and VLAN Access Control .....</b>	<b>3-11</b>
Port-Leave From a Dynamic VLAN .....	3-11
<b>Planning for GVRP Operation .....</b>	<b>3-12</b>
<b>Configuring GVRP On a Switch .....</b>	<b>3-13</b>
Menu: Viewing and Configuring GVRP .....	3-13
CLI: Viewing and Configuring GVRP .....	3-14
Web: Viewing and Configuring GVRP .....	3-18
<b>GVRP Operating Notes .....</b>	<b>3-18</b>

## **4 Multimedia Traffic Control with IP Multicast (IGMP)**

<b>Contents</b> .....	4-1
<b>Overview</b> .....	4-2
<b>IGMP General Operation and Features</b> .....	4-3
IGMP Terms .....	4-4
IGMP Operating Features .....	4-5
Basic Operation .....	4-5
Enhancements .....	4-5
<b>CLI: Configuring and Displaying IGMP</b> .....	4-6
<b>How IGMP Operates</b> .....	4-11
Operation With or Without IP Addressing .....	4-12
Automatic Fast-Leave IGMP .....	4-13
Configuring Fast-Leave IGMP .....	4-16
Forced Fast-Leave IGMP .....	4-16
Configuring Delayed Group Flush .....	4-17
<b>Using the Switch as Querier</b> .....	4-18
<b>Excluding Well-Known or Reserved</b>	
<b>Multicast Addresses from IP Multicast Filtering</b> .....	4-19
Number of IP Multicast Addresses Allowed .....	4-20

## **5 PIM-DM (Dense Mode) on the 5300xl Switches**

<b>Contents</b> .....	5-1
<b>Overview</b> .....	5-2
<b>Introduction</b> .....	5-3
<b>Feature Overview</b> .....	5-4
<b>PIM-DM Operation</b> .....	5-4
Multicast Flow Management .....	5-7
General Configuration Elements .....	5-9
<b>Terminology</b> .....	5-9
<b>PIM-DM Operating Rules</b> .....	5-10

<b>Configuring PIM-DM on the Series 5300xl Switches</b> .....	5-11
PIM Global Configuration Context .....	5-12
PIM VLAN (Interface) Configuration Context .....	5-15
<b>Displaying PIM Data and Configuration Settings on the Series 5300xl Switches</b> .....	5-22
Displaying PIM Route Data .....	5-23
Displaying PIM Status .....	5-27
<b>Operating Notes</b> .....	5-34
<b>Troubleshooting</b> .....	5-36
<b>Messages Related to PIM Operation</b> .....	5-37
<b>Applicable RFCs</b> .....	5-40
<b>Exceptions to Support for RFC 2932 - Multicast Routing MIB</b> ..	5-41

## 6 Spanning-Tree Operation

<b>Contents</b> .....	6-1
<b>Overview</b> .....	6-3
<b>The RSTP (802.1w) and STP (802.1D) Spanning Tree Options (5300xl, 3400/6400cl switches)</b> .....	6-7
RSTP (802.1w) .....	6-7
STP (802.1D) .....	6-8
How STP and RSTP Operate on the 5300xl, 3400cl and 6400cl Switches .....	6-8
<b>Configuring Rapid Reconfiguration Spanning Tree (RSTP)</b> .....	6-11
Overview .....	6-11
Transitioning from STP to RSTP .....	6-12
Configuring RSTP .....	6-13
Optimizing the RSTP Configuration .....	6-13
CLI: Configuring RSTP .....	6-14
Menu: Configuring RSTP .....	6-20
<b>802.1D Spanning-Tree Protocol (STP) on 5300xl, 3400cl and 6400cl Switches</b> .....	6-22
Menu: Configuring 802.1D STP .....	6-22
CLI: Configuring 802.1D STP .....	6-25
STP Fast Mode .....	6-29

Fast-Uplink Spanning Tree Protocol (STP) .....	6-30
Terminology .....	6-32
Operating Rules for Fast Uplink .....	6-33
Menu: Viewing and Configuring Fast-Uplink STP .....	6-35
CLI: Viewing and Configuring Fast-Uplink STP .....	6-40
Operating Notes .....	6-43
<b>802.1s Multiple Spanning Tree Protocol (MSTP) .....</b>	<b>6-45</b>
MSTP Structure .....	6-46
How MSTP Operates .....	6-49
MST Regions .....	6-49
Regions, Legacy STP and RSTP Switches, and the Common Spanning Tree (CST) .....	6-51
MSTP Operation with 802.1Q VLANs .....	6-51
Terminology .....	6-52
Operating Rules .....	6-53
Transitioning from STP or RSTP to MSTP .....	6-55
Tips for Planning an MSTP Application .....	6-56
Steps for Configuring MSTP .....	6-57
Configuring MSTP Operation Mode and Global Parameters .....	6-59
Configuring Basic Port Connectivity Parameters .....	6-63
Configuring MST Instance Parameters .....	6-66
Configuring MST Instance Per-Port Parameters .....	6-69
Enabling or Disabling Spanning Tree Operation .....	6-72
Enabling an Entire MST Region at Once or Exchanging One Region Configuration for Another .....	6-72
Displaying MSTP Statistics and Configuration .....	6-74
Displaying MSTP Statistics .....	6-74
Displaying the MSTP Configuration .....	6-77
Operating Notes .....	6-81
Troubleshooting .....	6-81

## 7 Switch Meshing

<b>Contents</b> .....	7-1
<b>Introduction</b> .....	7-2
<b>Switch Meshing Fundamentals</b> .....	7-4
Terminology .....	7-4
Operating Rules .....	7-5
Using a Heterogeneous Switch Mesh .....	7-8
Bringing Up a Switch Mesh Domain: .....	7-10
Further Operating Information .....	7-10
<b>Configuring Switch Meshing</b> .....	7-11
Preparation .....	7-11
Menu: To Configure Switch Meshing .....	7-11
CLI: To View and Configure Switch Meshing .....	7-13
Viewing Switch Mesh Status .....	7-14
CLI: Configuring Switch Meshing .....	7-17
<b>Operating Notes for Switch Meshing</b> .....	7-18
Flooded Traffic .....	7-18
Unicast Packets with Unknown Destinations .....	7-19
Spanning Tree Operation with Switch Meshing .....	7-20
Filtering/Security in Meshed Switches .....	7-22
IP Multicast (IGMP) in Meshed Switches .....	7-22
Static VLANs .....	7-23
Dynamic VLANs .....	7-24
Jumbo Packets (3400cl and 6400cl Switches Only) .....	7-24
<b>Mesh Design Optimization</b> .....	7-24
Other Requirements and Restrictions .....	7-26

## 8 Quality of Service (QoS): Managing Bandwidth More Effectively

<b>Contents</b> .....	8-1
<b>Introduction</b> .....	8-3
Terminology .....	8-6
Overview .....	8-7
Classifiers for Prioritizing Outbound Packets .....	8-10

5300xl and 4200vl Packet Classifiers and Evaluation Order . . .	8-10
3400cl/6400cl Packet Classifiers and Evaluation Order . . . . .	8-11
<b>Preparation for Configuring QoS . . . . .</b>	<b>8-14</b>
Steps for Configuring QoS on the Switch . . . . .	8-14
Planning QoS for the Series 3400cl/6400cl Switches . . . . .	8-16
Prioritizing and Monitoring QoS, ACL, and Rate	
Limiting Feature Usage on the 3400cl/6400cl Switches . . . . .	8-16
QoS Resource Usage and Monitoring on	
3400cl/6400cl Switches . . . . .	8-17
Managing QoS Resource Consumption on the	
3400cl/6400cl Switches . . . . .	8-18
Troubleshooting a Shortage of Per-Port Rule Resources on the	
3400cl/6400cl Switches . . . . .	8-19
Examples of QoS Resource Usage on 3400cl/6400cl Switches .	8-20
<b>Using QoS Classifiers To Configure</b>	
<b>Quality of Service for Outbound Traffic . . . . .</b>	<b>8-23</b>
Viewing the QoS Configuration . . . . .	8-23
No Override . . . . .	8-24
QoS UDP/TCP Priority . . . . .	8-25
Assigning an 802.1p Priority Based on TCP or	
UDP Port Number . . . . .	8-26
Assigning a DSCP Policy Based on TCP or UDP Port Number .	8-27
QoS IP-Device Priority . . . . .	8-31
Assigning a Priority Based on IP Address . . . . .	8-32
Assigning a DSCP Policy Based on IP Address . . . . .	8-33
QoS IP Type-of-Service (ToS) Policy and Priority . . . . .	8-37
Assigning an 802.1p Priority to IPv4 Packets on the	
Basis of the ToS Precedence Bits . . . . .	8-38
Assigning an 802.1p Priority to IPv4 Packets on the	
Basis of Incoming DSCP . . . . .	8-39
Assigning a DSCP Policy on the Basis of the DSCP in	
IPv4 Packets Received from Upstream Devices . . . . .	8-43
Details of QoS IP Type-of-Service . . . . .	8-47
QoS Layer-3 Protocol Priority (5300xl and 4200vl Switches Only) . .	8-50
Assigning a Priority Based on Layer-3 Protocol . . . . .	8-50
QoS VLAN-ID (VID) Priority . . . . .	8-52
Assigning a Priority Based on VLAN-ID . . . . .	8-52



Assigning a DSCP Policy Based on VLAN-ID (VID) . . . . .	8-54
QoS Source-Port Priority . . . . .	8-58
Assigning a Priority Based on Source-Port . . . . .	8-58
Assigning a DSCP Policy Based on the Source-Port . . . . .	8-60
Differentiated Services Codepoint (DSCP) Mapping . . . . .	8-64
Default Priority Settings for Selected Codepoints . . . . .	8-65
Quickly Listing Non-Default Codepoint Settings . . . . .	8-66
Note On Changing a Priority Setting . . . . .	8-67
Example of Changing the Priority Setting on a Policy When One or More Classifiers Are Currently Using the Policy .	8-68
<b>IP Multicast (IGMP) Interaction with QoS . . . . .</b>	<b>8-71</b>
<b>QoS Messages in the CLI . . . . .</b>	<b>8-72</b>
<b>QoS Operating Notes and Restrictions . . . . .</b>	<b>8-73</b>

## **9 Access Control Lists (ACLs) for the Series 5300xl Switches**

<b>Contents . . . . .</b>	<b>9-1</b>
<b>Introduction . . . . .</b>	<b>9-3</b>
<b>Terminology . . . . .</b>	<b>9-5</b>
<b>Overview . . . . .</b>	<b>9-8</b>
Types of IP ACLs . . . . .	9-8
ACL Inbound and Outbound Application Points . . . . .	9-8
Features Common to All per-VLAN ACLs . . . . .	9-10
General Steps for Planning and Configuring ACLs . . . . .	9-10
<b>ACL Operation . . . . .</b>	<b>9-12</b>
Introduction . . . . .	9-12
The Packet-Filtering Process . . . . .	9-13
<b>Planning an ACL Application . . . . .</b>	<b>9-16</b>
Traffic Management and Improved Network Performance . . . . .	9-16
Security . . . . .	9-17
Guidelines for Planning the Structure of an ACL . . . . .	9-18
ACL Configuration and Operating Rules . . . . .	9-18
How an ACE Uses a Mask To Screen Packets for Matches . . . . .	9-20

What Is the Difference Between Network (or Subnet) Masks and the Masks Used with ACLs? .....	9-20
Rules for Defining a Match Between a Packet and an Access Control Entry (ACE) .....	9-21
<b>Configuring and Assigning an ACL .....</b>	<b>9-25</b>
Overview .....	9-25
General Steps for Implementing ACLs .....	9-25
Types of ACLs .....	9-26
ACL Configuration Structure .....	9-26
Standard ACL Structure .....	9-27
Extended ACL Configuration Structure .....	9-28
ACL Configuration Factors .....	9-29
The Sequence of Entries in an ACL Is Significant .....	9-29
In Any ACL, There Will Always Be a Match .....	9-31
A Configured ACL Has No Effect Until You Apply It to an Interface .....	9-31
You Can Assign an ACL Name or Number to a VLAN Even if the ACL Does Not Yet Exist in the Switch's Configuration ..	9-31
Using the CLI To Create an ACL .....	9-31
General ACE Rules .....	9-32
Using CIDR Notation To Enter the ACL Mask .....	9-32
Configuring and Assigning a Numbered, Standard ACL .....	9-33
Configuring and Assigning a Numbered, Extended ACL .....	9-38
Configuring a Named ACL .....	9-44
Enabling or Disabling ACL Filtering on a VLAN .....	9-46
<b>Deleting an ACL from the Switch .....</b>	<b>9-47</b>
<b>Displaying ACL Data .....</b>	<b>9-48</b>
Display an ACL Summary .....	9-48
Display the Content of All ACLs on the Switch .....	9-49
Display the ACL Assignments for a VLAN .....	9-50
Displaying the Content of a Specific ACL .....	9-50
Display All ACLs and Their Assignments in the Switch Startup-Config File and Running-Config File .....	9-52
<b>Editing ACLs and Creating an ACL Offline .....</b>	<b>9-53</b>
Using the CLI To Edit ACLs .....	9-53
General Editing Rules .....	9-53

Deleting Any ACE from an ACL .....	9-54
Working Offline To Create or Edit an ACL .....	9-55
Creating an ACL Offline .....	9-56
<b>Enable ACL “Deny” Logging</b> .....	9-59
Requirements for Using ACL Logging .....	9-59
ACL Logging Operation .....	9-59
Enabling ACL Logging on the Switch .....	9-60
Operating Notes for ACL Logging .....	9-62
<b>General ACL Operating Notes</b> .....	9-63

## 10 Access Control Lists (ACLs) for the Series 3400cl and Series 6400cl Switches

<b>Contents</b> .....	10-1
<b>Introduction</b> .....	10-4
ACL Applications on Series 3400cl and 6400cl Switches .....	10-4
General Application Options .....	10-4
<b>Terminology</b> .....	10-7
<b>Overview</b> .....	10-10
Types of IP ACLs .....	10-10
ACL Inbound Application Points .....	10-10
Features Common to All ACLs .....	10-11
General Steps for Planning and Configuring ACLs .....	10-12
<b>ACL Operation</b> .....	10-13
Introduction .....	10-13
The Packet-Filtering Process .....	10-14
<b>Planning an ACL Application on a Series 3400cl or Series 6400cl Switch</b> .....	10-17
Switch Resource Usage .....	10-17
Prioritizing and Monitoring ACL, IGMP, QoS, and Rate Limiting Feature Usage .....	10-18
ACL Resource Usage and Monitoring .....	10-18
Standard ACLs: .....	10-19
Extended ACLs: .....	10-20
Managing ACL Resource Consumption .....	10-22

Oversubscribing Available Resources . . . . .	10-22
Troubleshooting a Shortage of Per-Port Resources . . . . .	10-23
Example of ACL Resource Usage . . . . .	10-25
Viewing the Current Per-Port Rule and Mask Usage . . . . .	10-25
Traffic Management and Improved Network Performance . . . . .	10-28
Security . . . . .	10-28
Guidelines for Planning the Structure of an ACL . . . . .	10-29
ACL Configuration and Operating Rules . . . . .	10-30
How an ACE Uses a Mask To Screen Packets for Matches . . . . .	10-32
What Is the Difference Between Network (or Subnet)	
Masks and the Masks Used with ACLs? . . . . .	10-32
Rules for Defining a Match Between a Packet and an	
Access Control Entry (ACE) . . . . .	10-33
<b>Configuring and Assigning an ACL . . . . .</b>	<b>10-38</b>
Overview . . . . .	10-38
General Steps for Implementing ACLs . . . . .	10-38
Types of ACLs . . . . .	10-38
ACL Configuration Structure . . . . .	10-39
Standard ACL Structure . . . . .	10-40
Extended ACL Configuration Structure . . . . .	10-40
ACL Configuration Factors . . . . .	10-42
ACL Resource Consumption . . . . .	10-42
The Sequence of Entries in an ACL Is Significant . . . . .	10-42
In Any ACL, There Will Always Be a Match . . . . .	10-44
A Configured ACL Has No Effect Until You	
Apply It to an Interface . . . . .	10-44
Using the CLI To Create an ACL . . . . .	10-44
General ACE Rules . . . . .	10-44
Using CIDR Notation To Enter the ACL Mask . . . . .	10-45
Configuring and Assigning a Numbered, Standard ACL . . . . .	10-47
Configuring and Assigning a Numbered, Extended ACL . . . . .	10-52
Configuring a Named ACL . . . . .	10-58
Enabling or Disabling ACL Filtering on an Interface . . . . .	10-61
<b>Deleting an ACL from the Switch . . . . .</b>	<b>10-62</b>
<b>Displaying ACL Data . . . . .</b>	<b>10-62</b>

Display an ACL Summary .....	10-63
Display the Content of All ACLs on the Switch .....	10-63
Display the ACL Assignments for an Interface .....	10-64
Displaying the Content of a Specific ACL .....	10-65
Displaying the Current Per-Port ACL Resources .....	10-67
Display All ACLs and Their Assignments in the Switch Startup-Config File and Running-Config File .....	10-68
<b>Editing ACLs and Creating an ACL Offline .....</b>	<b>10-69</b>
Using the CLI To Edit ACLs .....	10-69
General Editing Rules .....	10-70
Deleting Any ACE from an ACL .....	10-70
Working Offline To Create or Edit an ACL .....	10-72
Creating an ACL Offline .....	10-72
<b>Enable ACL “Deny” Logging .....</b>	<b>10-75</b>
Requirements for Using ACL Logging .....	10-76
ACL Logging Operation .....	10-76
Enabling ACL Logging on the Switch .....	10-77
Operating Notes for ACL Logging .....	10-79
<b>General ACL Operating Notes .....</b>	<b>10-80</b>

## 11 IP Routing Features

<b>Contents .....</b>	<b>11-1</b>
<b>Overview of IP Routing .....</b>	<b>11-6</b>
IP Interfaces .....	11-7
IP Tables and Caches .....	11-7
ARP Cache Table .....	11-8
IP Route Table .....	11-8
IP Forwarding Cache .....	11-9
IP Route Exchange Protocols .....	11-10
IP Global Parameters for Routing Switches .....	11-10
IP Interface Parameters for Routing Switches .....	11-12
<b>Configuring IP Parameters for Routing Switches .....</b>	<b>11-13</b>
Configuring IP Addresses .....	11-13
Changing the Router ID .....	11-13

Configuring ARP Parameters .....	11-14
How ARP Works .....	11-14
Enabling Proxy ARP .....	11-16
Configuring Forwarding Parameters .....	11-16
Changing the TTL Threshold .....	11-17
Enabling Forwarding of Directed Broadcasts .....	11-17
Configuring ICMP .....	11-18
Disabling ICMP Messages .....	11-18
Disabling Replies to Broadcast Ping Requests .....	11-18
Disabling ICMP Destination Unreachable Messages .....	11-19
Disabling ICMP Redirects .....	11-20
<b>Configuring Static IP Routes</b> .....	11-20
Static Route Types .....	11-20
Static IP Route Parameters .....	11-21
Static Route States Follow Port States .....	11-21
Configuring a Static IP Route .....	11-22
Configuring the Default Route .....	11-23
Configuring a “Null” Route .....	11-23
<b>Configuring RIP</b> .....	11-24
Overview of RIP .....	11-24
RIP Parameters and Defaults .....	11-25
RIP Global Parameters .....	11-25
RIP Interface Parameters .....	11-25
Configuring RIP Parameters .....	11-26
Enabling RIP .....	11-26
Changing the RIP Type on a VLAN Interface .....	11-27
Changing the Cost of Routes Learned on a VLAN Interface ...	11-27
Configuring RIP Redistribution .....	11-28
Define RIP Redistribution Filters .....	11-28
Modify Default Metric for Redistribution .....	11-29
Enable RIP Route Redistribution .....	11-29
Changing the Route Loop Prevention Method .....	11-30
Displaying RIP Information .....	11-31
Displaying General RIP Information .....	11-31
Displaying RIP Interface Information .....	11-33

Displaying RIP Peer Information . . . . .	11-34
Displaying RIP Redistribution Information . . . . .	11-36
Displaying RIP Redistribution Filter (restrict) Information . . .	11-36
<b>Configuring OSPF . . . . .</b>	<b>11-37</b>
Overview of OSPF . . . . .	11-37
Designated Routers in Multi-Access Networks . . . . .	11-38
Designated Router Election . . . . .	11-38
OSPF RFC 1583 and 2328 Compliance . . . . .	11-39
Reduction of Equivalent AS External LSAs . . . . .	11-39
Dynamic OSPF Activation and Configuration . . . . .	11-41
Configuring OSPF . . . . .	11-41
Configuration Rules . . . . .	11-42
OSPF Parameters . . . . .	11-42
Enabling OSPF . . . . .	11-43
Assigning OSPF Areas . . . . .	11-43
Assigning an Area Range (optional) . . . . .	11-45
Assigning VLANs to an Area . . . . .	11-46
Modifying Interface Defaults . . . . .	11-46
OSPF Interface Parameters . . . . .	11-46
Assigning Virtual Links . . . . .	11-48
Modifying Virtual Link Parameters . . . . .	11-50
Virtual Link Parameter Descriptions . . . . .	11-50
Defining Redistribution Filters . . . . .	11-51
Modifying Default Metric for Redistribution . . . . .	11-52
Enabling Route Redistribution . . . . .	11-53
Modifying Redistribution Metric Type . . . . .	11-53
Administrative Distance . . . . .	11-53
Modifying OSPF Traps Generated . . . . .	11-54
Modifying OSPF Standard Compliance Setting . . . . .	11-55
Displaying OSPF Information . . . . .	11-56
Displaying General OSPF Configuration Information . . . . .	11-56
Displaying OSPF Area Information . . . . .	11-58
Displaying OSPF External Link State Information . . . . .	11-59
Displaying OSPF Interface Information . . . . .	11-60

Displaying OSPF Interface Information for a Specific VLAN or IP Address .....	11-62
Displaying OSPF Link State Information .....	11-63
Displaying OSPF Neighbor Information .....	11-65
Displaying OSFPPF Redistribution Information .....	11-67
Displaying OSFPPF Redistribution Filter (restrict) Information .....	11-67
Displaying OSPF Virtual Neighbor Information .....	11-68
Displaying OSPF Virtual Link Information .....	11-69
Displaying OSPF Route Information .....	11-71
OSPF Equal-Cost Multipath (ECMP) for Different Subnets Available Through the Same Next-Hop Routes .....	11-73
Displaying the Current IP Load-Sharing Configuration .....	11-74
<b>Configuring IRDP .....</b>	<b>11-76</b>
Enabling IRDP Globally .....	11-77
Enabling IRDP on an Individual VLAN Interface .....	11-77
Displaying IRDP Information .....	11-78
<b>Configuring DHCP Relay .....</b>	<b>11-79</b>
Overview .....	11-79
DHCP Option 82 .....	11-79
Introduction .....	11-79
Option 82 Server Support .....	11-81
Terminology .....	11-81
General DHCP Option 82 Requirements and Operation .....	11-82
Option 82 Field Content .....	11-83
Forwarding Policies .....	11-86
Multiple Option 82 Relay Agents in a Client Request Path .....	11-87
Validation of Server Response Packets .....	11-88
Multinetted VLANs .....	11-90
Configuring Option 82 Operation on the Routing Switch .....	11-91
Operating Notes .....	11-92
DHCP Packet Forwarding .....	11-94
Unicast Forwarding .....	11-94
Broadcast Forwarding .....	11-94
Minimum Requirements for DHCP Relay Operation .....	11-94
Enabling DHCP Relay .....	11-94



Configuring a Helper Address .....	11-95
Viewing the Current DHCP Relay Configuration .....	11-95
<b>UDP Broadcast Forwarding on 5300xl, 4200vl and 3400cl Switches .....</b>	<b>11-97</b>
Overview .....	11-97
Subnet Masking for UDP Forwarding Addresses .....	11-98
Configuring and Enabling UDP Broadcast Forwarding .....	11-99
Globally Enabling UDP Broadcast Forwarding .....	11-99
Configuring UDP Broadcast Forwarding on Individual VLANs .....	11-99
Displaying the Current IP Forward-Protocol Configuration .....	11-101
Operating Notes for UDP Broadcast Forwarding .....	11-102
Messages Related to UDP Broadcast Forwarding .....	11-102
<b>Configuring Static Network Address Translation (NAT) for Intranet Applications on the 5300xl Switches .....</b>	<b>11-103</b>
Static NAT Operating Rules .....	11-104
Configuring Static NAT .....	11-104
Displaying Static NAT Statistics and Configuration .....	11-106
Static NAT Operating Notes .....	11-106

## **12 Router Redundancy Using XRRP**

<b>Contents .....</b>	<b>12-1</b>
<b>Introduction to XRRP .....</b>	<b>12-3</b>
<b>Terminology .....</b>	<b>12-3</b>
<b>Overview of XRRP Operation .....</b>	<b>12-5</b>
XRRP During Normal Router Operation .....	12-6
XRRP Fail-Over Operation .....	12-7
Single VLAN Operation .....	12-7
Multiple VLAN Operation .....	12-8
XRRP Infinite Fail-Back for the 5300xl Switches .....	12-11
Introduction .....	12-11
Overview of Infinite Fail-Back Operation .....	12-11
Causes of Fail-Over and Fail-Back .....	12-12
Fail-Over Operation with Infinite Fail-Back Enabled .....	12-13
Router Operation in the Fail-Over Mode .....	12-13

Router Operation in the Infinite Fail-Back Mode . . . . .	12-14
Enabling Infinite Fail-Back in a Protection Domain . . . . .	12-15
Initiating a Fail-Back When Infinite Fail-Back Is Enabled . . . .	12-15
Displaying the Infinite Fail-Back Configuration . . . . .	12-16
XRRP Failback Log Messages . . . . .	12-16
XRRP Operating Notes . . . . .	12-17
<b>Configuring XRRP . . . . .</b>	<b>12-20</b>
Customizing the XRRP Configuration . . . . .	12-20
Enabling and Disabling XRRP . . . . .	12-23
Configuration Rules . . . . .	12-24
Configuration Examples . . . . .	12-25
Configuration for Figure 12-2 – Single VLAN Example . . . . .	12-25
Configuration for Figure 12-4 – Multiple VLANs . . . . .	12-26
<b>Displaying XRRP Data . . . . .</b>	<b>12-27</b>
<b>Comparison Between XRRP and VRRP . . . . .</b>	<b>12-31</b>
<b>Messages Related to XRRP Operation . . . . .</b>	<b>12-32</b>

## 13 Stack Management for the Series 3400cl, 6400cl, and 4200vl Switches

<b>Contents . . . . .</b>	<b>13-1</b>
<b>Introduction to Stack Management on Series 3400cl, 6400cl and 4200vl Switches . . . . .</b>	<b>13-3</b>
Stacking Support on ProCurve Switches . . . . .	13-3
Components of ProCurve Stack Management . . . . .	13-5
General Stacking Operation . . . . .	13-5
Operating Rules for Stacking . . . . .	13-7
General Rules . . . . .	13-7
Specific Rules . . . . .	13-8
<b>Configuring Stack Management . . . . .</b>	<b>13-9</b>
Overview of Configuring and Bringing Up a Stack . . . . .	13-9
General Steps for Creating a Stack . . . . .	13-11
Using the Menu Interface To View Stack Status and Configure Stacking . . . . .	13-13

Using the Menu Interface To View and Configure a Commander Switch .....	13-13
Using the Menu To Manage a Candidate Switch .....	13-15
Using the Commander To Manage The Stack .....	13-17
Using the Commander To Access Member Switches for Configuration Changes and Monitoring Traffic .....	13-23
Converting a Commander or Member to a Member of Another Stack .....	13-24
Monitoring Stack Status .....	13-25
Using the CLI To View Stack Status and Configure Stacking .....	13-29
Using the CLI To View Stack Status .....	13-31
Using the CLI To Configure a Commander Switch .....	13-33
Adding to a Stack or Moving Switches Between Stacks .....	13-35
Using the CLI To Remove a Member from a Stack .....	13-40
Using the CLI To Access Member Switches for Configuration Changes and Traffic Monitoring .....	13-42
SNMP Community Operation in a Stack .....	13-43
Using the CLI To Disable or Re-Enable Stacking .....	13-44
Transmission Interval .....	13-44
Stacking Operation with Multiple VLANs Configured .....	13-44
Status Messages .....	13-45

## Index

*—This page unused intentionally—*