
Contents

Product Documentation

About Your Switch Manual Set	xix
Feature Index	xx

1 Getting Started

Contents	1-1
Introduction	1-2
Conventions	1-2
Feature Descriptions by Model	1-2
Command Syntax Statements	1-3
Command Prompts	1-3
Screen Simulations	1-4
Port Identity Examples	1-4
Keys	1-4
Sources for More Information	1-4
Getting Documentation From the Web	1-6
Online Help	1-7
Need Only a Quick Start?	1-8
IP Addressing	1-8
To Set Up and Install the Switch in Your Network	1-9

2 Selecting a Management Interface

Contents	2-1
Overview	2-2
Understanding Management Interfaces	2-2
Advantages of Using the Menu Interface	2-3

Advantages of Using the CLI	2-4
General Benefits	2-4
Information on Using the CLI	2-5
Advantages of Using the Web Browser Interface	2-5
Advantages of Using ProCurve Manager or ProCurve Manager Plus	2-7

3 Using the Menu Interface

Contents	3-1
Overview	3-2
Starting and Ending a Menu Session	3-3
How To Start a Menu Interface Session	3-4
How To End a Menu Session and Exit from the Console	3-5
Main Menu Features	3-7
Screen Structure and Navigation	3-9
Rebooting the Switch	3-12
Menu Features List	3-14
Where To Go From Here	3-15

4 Using the Command Line Interface (CLI)

Contents	4-1
Overview	4-2
Accessing the CLI	4-2
Using the CLI	4-2
Privilege Levels at Logon	4-3
Privilege Level Operation	4-4
Operator Privileges	4-4
Manager Privileges	4-5
How To Move Between Levels	4-7
Listing Commands and Command Options	4-8
Listing Commands Available at Any Privilege Level	4-8
Listing Command Options	4-10

Displaying CLI “Help”	4-11
Configuration Commands and the Context Configuration Modes ..	4-12
Configuring Custom Login Banners for the Console and Web Browser Interfaces	4-15
Banner Operation with Telnet, Serial, or SSHv2 Access	4-16
Banner Operation with Web Browser Access	4-16
Configuring and Displaying a Non-Default Banner	4-16
Example of Configuring and Displaying a Banner	4-17
Operating Notes	4-19
CLI Control and Editing	4-21

5 Using the Web Browser Interface

Contents	5-1
Overview	5-2
General Features	5-3
Starting an Web Browser Interface Session with the Switch	5-4
Using a Standalone Web Browser in a PC or UNIX Workstation	5-4
Using ProCurve Manager (PCM) or ProCurve Manager Plus (PCM+)	5-5
Tasks for Your First Web Browser Interface Session	5-7
Viewing the “First Time Install” Window	5-7
Security: Creating Usernames and Passwords in the Browser Interface	5-8
Entering a User Name and Password	5-10
Using a User Name	5-10
If You Lose the Password	5-10
Online Help for the Web Browser Interface	5-11
Support/Mgmt URLs Feature	5-12
Support URL	5-13
Help and the Management Server URL	5-13
Using the PCM Server for Switch Web Help	5-14
Status Reporting Features	5-16
The Overview Window	5-16
The Port Utilization and Status Displays	5-17

Port Utilization	5-17
Port Status	5-19
The Alert Log	5-20
Sorting the Alert Log Entries	5-20
Alert Types and Detailed Views	5-21
The Status Bar	5-22
Setting Fault Detection Policy	5-24

6 Switch Memory and Configuration

Contents	6-1
Overview	6-3
Overview of Configuration File Management	6-3
Using the CLI To Implement Configuration Changes	6-6
Using the Menu and Web Browser Interfaces To Implement Configuration Changes	6-9
Menu: Implementing Configuration Changes	6-9
Using Save and Cancel in the Menu Interface	6-10
Rebooting from the Menu Interface	6-11
Web: Implementing Configuration Changes	6-12
Using Primary and Secondary Flash Image Options	6-13
Displaying the Current Flash Image Data	6-13
Switch Software Downloads	6-15
Local Switch Software Replacement and Removal	6-16
Rebooting the Switch	6-18
Operating Notes	6-21
Multiple Configuration Files on 5300xl and 4200vl Switches . . .	6-22
General Operation	6-24
Transitioning to Multiple Configuration Files	6-26
Listing and Displaying Startup-Config Files	6-27
Viewing the Startup-Config File Status with Multiple Configuration Enabled	6-27
Displaying the Content of A Specific Startup-Config File	6-29
Changing or Overriding the Reboot Configuration Policy	6-29
Managing Startup-Config Files in the Switch	6-31

Renaming an Existing Startup-Config File	6-32
Creating a New Startup-Config File	6-32
Erasing a Startup-Config File	6-34
Using the Clear + Reset Button Combination To Reset the Switch to Its Default Configuration	6-35
Transferring Startup-Config Files To or From a Remote Server	6-37
TFTP: Copying a Configuration File to a Remote Host	6-37
TFTP: Copying a Configuration File from a Remote Host	6-37
Xmodem: Copying a Configuration File to a Serially Connected Host	6-38
Xmodem: Copying a Configuration from a Serially Connected Host	6-38
Operating Notes for Multiple Configuration Files	6-39

7 Interface Access and System Information

Contents	7-1
Overview	7-2
Interface Access: Console/Serial Link, Web, and Inbound Telnet .	7-3
Menu: Modifying the Interface Access	7-4
CLI: Modifying the Interface Access	7-5
Denying Interface Access by Terminating Remote Management Sessions	7-8
System Information	7-9
Menu: Viewing and Configuring System Information	7-10
CLI: Viewing and Configuring System Information	7-11
Web: Configuring System Parameters	7-14

8 Configuring IP Addressing

Contents	8-1
Overview	8-2
IP Configuration	8-2
Just Want a Quick Start with IP Addressing?	8-3
IP Addressing with Multiple VLANs	8-4
Menu: Configuring IP Address, Gateway, and Time-To-Live (TTL) . .	8-5

CLI: Configuring IP Address, Gateway, and Time-To-Live (TTL)	8-6
Web: Configuring IP Addressing	8-10
How IP Addressing Affects Switch Operation	8-11
DHCP/Bootp Operation	8-12
Network Preparations for Configuring DHCP/Bootp	8-14
IP Preserve: Retaining VLAN-1 IP Addressing Across	
Configuration File Downloads	8-15
Operating Rules for IP Preserve	8-16
Enabling IP Preserve	8-16

9 Time Protocols

Contents	9-1
Overview	9-2
TimeP Time Synchronization	9-2
SNTP Time Synchronization	9-3
Selecting a Time Synchronization Protocol or Turning Off Time	
Protocol Operation	9-3
General Steps for Running a Time Protocol on the Switch:	9-3
Disabling Time Synchronization	9-4
SNTP: Viewing, Selecting, and Configuring	9-5
Menu: Viewing and Configuring SNTP	9-6
CLI: Viewing and Configuring SNTP	9-8
Viewing the Current SNTP Configuration	9-9
Configuring (Enabling or Disabling) the SNTP Mode	9-10
TimeP: Viewing, Selecting, and Configuring	9-16
Menu: Viewing and Configuring TimeP	9-17
CLI: Viewing and Configuring TimeP	9-18
Viewing the Current TimeP Configuration	9-19
Configuring (Enabling or Disabling) the TimeP Mode	9-20
SNTP Unicast Time Polling with Multiple SNTP Servers	9-25
Address Prioritization	9-25
Displaying All SNTP Server Addresses Configured on the Switch . .	9-26
Adding and Deleting SNTP Server Addresses	9-26

Menu: Operation with Multiple SNMP Server Addresses Configured	9-28
SNMP Messages in the Event Log	9-28

10 Port Status and Basic Configuration

Contents	10-1
Overview	10-2
Viewing Port Status and Configuring Port Parameters	10-2
Menu: Port Configuration	10-6
CLI: Viewing Port Status and Configuring Port Parameters	10-8
Using the CLI To Enable or Disable Ports and Configure Port Mode	10-9
Enabling or Disabling Flow Control	10-11
Configuring a Broadcast Limit on the Switch	10-14
Configuring Auto-MDIX	10-15
Web: Viewing Port Status and Configuring Port Parameters	10-18
Using Friendly (Optional) Port Names	10-18
Configuring and Operating Rules for Friendly Port Names	10-19
Configuring Friendly Port Names	10-19
Displaying Friendly Port Names with Other Port Data	10-21

11 Power Over Ethernet (PoE) Operation for the Series 5300xl Switches

Contents	11-1
PoE Operation on the Series 5300xl Switches	11-2
Introduction	11-2
PoE Terminology	11-3
Overview of Operation	11-4
Related Publications	11-4
General PoE Operation	11-5
Configuration Options	11-5
PD Support	11-6
Power Priority Operation	11-8

Configuring PoE Operation	11-10
Changing the PoE Port Priority Level	11-10
Disabling or Re-Enabling PoE Port Operation	11-11
Changing the Threshold for Generating a Power Notice	11-11
Configuring Optional PoE Port Identifiers	11-12
Viewing PoE Configuration and Status	11-15
Displaying the Switch’s Global PoE Power Status	11-15
Displaying an Overview of PoE Status on All Ports	11-16
Displaying the PoE Status on Specific Ports	11-17
Planning and Implementing a PoE Configuration	11-19
Assigning PoE Ports to VLANs	11-19
Applying Security Features to PoE Configurations	11-20
Assigning Priority Policies to PoE Traffic	11-20
Calculating the Maximum Load for an xl PoE Module	11-21
PoE Operating Notes	11-23
PoE Event Log Messages	11-23
“Informational” PoE Event-Log Messages	11-23
“Warning” PoE Event-Log Messages	11-25

12 Access Controller xl Module for the Series 5300xl Switches

Contents	12-1
Introduction	12-3
General Operation	12-3
Related Publications	12-3
Terminology	12-4
Access Controller xl Module Overview	12-5
Module Operation	12-5
Using 5300xl Features with the Access Controller xl Module ...	12-7
Routing Infrastructure Support	12-10
Using 5300xl Switch Network Address Translation with the ACM	12-11
The Role of VLANs	12-12
Client VLANs	12-12
Static VLAN Features Supported on Client VLANs	12-13

General Operating Rules	12-14
Configuring the ACM on the Network	12-14
Configuring the Access Controller x1 Module	12-16
Configuring Downlink Client Ports	12-16
Changing the VLAN-Base	12-18
Configuring Client VLANs	12-19
Configuring Uplink Network Ports	12-19
Configuring the Uplink VLAN	12-19
ACM Configuration Commands Summary and Syntax	12-20
Configuration Context Command Syntax	12-20
Access Controller Context Command Syntax	12-22
Displaying Access Controller x1 Status from the 5300x1 CLI ...	12-24
ACM Display Commands Summary and Syntax	12-24
Configuration Context Command Syntax	12-25
Access Controller Context Command Syntax	12-26
Managing the ACM	12-27
Using the ACM's Extended CLI	12-27
Downloading New Software to the Module	12-30
Resetting the Module to Factory Defaults	12-30
Operating Notes	12-31
BIOS POST Event Log Messages	12-32

13 Port Trunking

Contents	13-1
Overview	13-2
Port Trunk Features and Operation	13-4
Trunk Configuration Methods	13-5
Menu: Viewing and Configuring a Static Trunk Group	13-9
CLI: Viewing and Configuring Port Trunk Groups	13-11
Using the CLI To View Port Trunks	13-11
Using the CLI To Configure a Static or Dynamic Trunk Group ...	13-14
Web: Viewing Existing Port Trunk Groups	13-17

Trunk Group Operation Using LACP	13-18
Default Port Operation	13-20
LACP Notes and Restrictions	13-21
Trunk Group Operation Using the “Trunk” Option	13-24
How the Switch Lists Trunk Data	13-25
Outbound Traffic Distribution Across Trunked Links	13-25

14 Port Traffic Controls

Contents	14-1
Overview	14-3
All-Traffic Rate-Limiting for the 5300xl, 3400cl and 6400cl Switches	14-4
Introduction	14-4
Rate-Limiting Operation	14-5
Configuring Inbound Rate-Limiting	14-5
Displaying the Current Rate-Limit Configuration	14-6
Operating Notes for Rate-Limiting	14-7
ICMP Rate-Limiting	14-10
Terminology	14-10
Effect of ICMP Rate-Limiting	14-10
Operating Notes for ICMP Rate-Limiting	14-17
Guaranteed Minimum Bandwidth (GMB) on the Series 5300xl Switches	14-21
Introduction	14-21
Terminology	14-21
GMB Operation	14-21
Configuring Guaranteed Minimum Bandwidth for Outbound Traffic	14-23
Displaying the Current Guaranteed Minimum Bandwidth Configuration	14-25
GMB Operating Notes	14-26
Jumbo Packets on the Series 3400cl and Series 6400cl Switches	14-27
Terminology	14-27
Operating Rules	14-28

Configuring Jumbo Packet Operation	14-29
Overview	14-29
Viewing the Current Jumbo Configuration	14-29
Enabling or Disabling Jumbo Traffic on a VLAN	14-31
Operating Notes for Jumbo Traffic-Handling	14-32
Troubleshooting	14-34

15 Configuring for Network Management Applications

Contents	15-1
Using SNMP Tools To Manage the Switch	15-3
Overview	15-3
SNMP Management Features	15-4
Configuring for SNMP Access to the Switch	15-4
Configuring for SNMP Version 3 Access to the Switch	15-5
SNMP Version 3 Commands	15-6
Enabling SNMPv3	15-7
SNMPv3 Users	15-7
Group Access Levels	15-10
SNMPv3 Communities	15-11
Menu: Viewing and Configuring non-SNMP version 3 Communities	15-13
CLI: Viewing and Configuring SNMP Community Names	15-14
SNMPv3 Notification and Traps	15-16
SNMPv1 and SNMPv2c Trap Features	15-19
CLI: Configuring and Displaying Trap Receivers	15-19
Using the CLI To Enable Authentication Traps	15-22
Advanced Management: RMON	15-22
LLDP (Link-Layer Discovery Protocol)	15-24
Terminology	15-25
General LLDP Operation	15-27
LLDP-MED	15-27
Packet Boundaries in a Network Topology	15-27
Configuration Options	15-28
Options for Reading LLDP Information Collected by the Switch ..	15-30
LLDP and LLDP-MED Standards Compatibility	15-31

LLDP Operating Rules	15-31
LLDP Data Management on the Series 3400cl and 6400cl Switches	15-32
LLDP Neighbor Data	15-32
Configuring LLDP Operation	15-33
Viewing the Current Configuration	15-34
Configuring Global LLDP Packet Controls	15-37
Configuring SNMP Notification Support	15-41
Changing the Minimum Interval for Successive Data Change Notifications for the Same Neighbor	15-42
Configuring Per-Port Transmit and Receive Modes	15-42
Configuring Basic LLDP Per-Port Advertisement Content	15-43
Configuring Support for Port Speed and Duplex Advertisements on the 5300xl and 4200vl Switches	15-46
LLDP-MED (Media-Endpoint-Discovery) for the 5300xl and 4200vl Switches	15-47
LLDP-MED Topology Change Notification	15-50
LLDP-MED Fast Start Control	15-51
Advertising Device Capability, Network Policy, PoE Status and Location Data	15-52
Configuring Location Data for LLDP-MED Devices	15-56
Displaying Advertisement Data	15-62
Displaying Switch Information Available for Outbound Advertisements	15-63
Displaying LLDP Statistics	15-68
LLDP Operating Notes	15-70
LLDP and CDP Data Management	15-72
LLDP and CDP Neighbor Data	15-72
CDP Operation and Commands	15-74

A File Transfers

Contents	A-1
Overview	A-3
Downloading Switch Software	A-3
General Software Download Rules	A-4
Using TFTP To Download Switch Software from a Server	A-4

Menu: TFTP Download from a Server to Primary Flash	A-5
CLI: TFTP Download from a Server to Flash	A-6
Using Secure Copy and SFTP	A-8
How It Works	A-9
The SCP/SFTP Process	A-10
Disable TFTP and Auto-TFTP for Enhanced Security	A-10
Command Options	A-13
Authentication	A-14
SCP/SFTP Operating Notes	A-14
Using Xmodem to Download Switch Software From a PC or UNIX Workstation	A-16
Menu: Xmodem Download to Primary Flash	A-16
CLI: Xmodem Download from a PC or UNIX Workstation to Primary or Secondary Flash	A-17
Switch-to-Switch Download	A-18
Menu: Switch-to-Switch Download to Primary Flash	A-18
CLI: Switch-To-Switch Downloads	A-19
Using PCM+ to Update Switch Software	A-21
Troubleshooting TFTP Downloads	A-21
Transferring Switch Configurations and ACL Command Files . .	A-23
TFTP: Copying a Configuration from a Remote Host	A-23
TFTP: Copying a Configuration File to a Remote Host	A-24
TFTP: Uploading an ACL Command File from a TFTP Server	A-24
Xmodem: Copying a Configuration File from the Switch to a Serially Connected PC or UNIX Workstation	A-27
Xmodem: Copying a Configuration File from a Serially Connected PC or UNIX Workstation	A-27
Copying Diagnostic Data to a Remote Host, PC, or UNIX Workstation	A-29
Copying Command Output to a Destination Device	A-29
Copying Event Log Output to a Destination Device	A-30
Copying Crash Data Content to a Destination Device	A-30
Copying Crash Log Data Content to a Destination Device	A-31

B Monitoring and Analyzing Switch Operation

Contents	B-1
Overview	B-3
Status and Counters Data	B-4
Menu Access To Status and Counters	B-5
General System Information	B-5
Menu Access	B-5
CLI Access	B-6
Switch Management Address Information	B-6
Menu Access	B-6
CLI Access	B-7
Module Information	B-8
Menu: Displaying Port Status	B-8
CLI Access	B-8
Port Status	B-9
Menu: Displaying Port Status	B-9
CLI Access	B-9
Web Access	B-9
Viewing Port and Trunk Group Statistics and Flow Control Status	B-10
Menu Access to Port and Trunk Statistics	B-11
CLI Access To Port and Trunk Group Statistics	B-12
Web Browser Access To View Port and Trunk Group Statistics	B-12
Viewing the Switch's MAC Address Tables	B-13
Menu Access to the MAC Address Views and Searches	B-13
CLI Access for MAC Address Views and Searches	B-16
Spanning Tree Protocol (STP) Information	B-17
Menu Access to STP Data	B-17
CLI Access to STP Data	B-18
Internet Group Management Protocol (IGMP) Status	B-19
VLAN Information	B-20
Web Browser Interface Status Information	B-22

Interface Monitoring Features	B-23
Menu: Configuring Port and Static Trunk Monitoring	B-24
CLI: Configuring Port, Mesh, and Static Trunk Monitoring	B-26
Web: Configuring Port Monitoring	B-29

C Troubleshooting

Contents	C-1
Overview	C-3
Troubleshooting Approaches	C-4
Browser or Telnet Access Problems	C-5
Unusual Network Activity	C-7
General Problems	C-7
802.1Q Prioritization Problems	C-8
ACL Problems	C-8
IGMP-Related Problems	C-13
LACP-Related Problems	C-13
Mesh-Related Problems	C-14
Port-Based Access Control (802.1x)-Related Problems	C-15
QoS-Related Problems	C-18
Radius-Related Problems	C-18
Spanning-Tree Protocol (STP) and Fast-Uplink Problems	C-19
SSH-Related Problems	C-20
TACACS-Related Problems	C-22
TimeP, SNTP, or Gateway Problems	C-24
VLAN-Related Problems	C-24
Using the Event Log To Identify Problem Sources	C-27
Menu: Entering and Navigating in the Event Log	C-29
CLI: Listing Events	C-30
Reducing Duplicate Event Log and SNMP Trap Messages	C-31
Debug and Syslog Messaging Operation	C-34
Debug Command Operation	C-35
Debug Types	C-36
Debug Destinations	C-38
Syslog Operation	C-39

Viewing the Debug Configuration	C-40
Steps for Configuring Debug and Syslog Messaging	C-40
Operating Notes for Debug and Syslog	C-44
Diagnostic Tools	C-45
Port Auto-Negotiation	C-45
Ping and Link Tests	C-45
Web: Executing Ping or Link Tests	C-47
CLI: Ping or Link Tests	C-48
Displaying the Configuration File	C-50
CLI: Viewing the Configuration File	C-50
Web: Viewing the Configuration File	C-50
Listing Switch Configuration and Operation Details	C-50
CLI Administrative and Troubleshooting Commands	C-52
Traceroute Command	C-53
Restoring the Factory-Default Configuration	C-57
CLI: Resetting to the Factory-Default Configuration	C-57
Clear/Reset: Resetting to the Factory-Default Configuration .	C-57
Restoring a Flash Image	C-58

D MAC Address Management

Contents	D-1
Overview	D-2
Determining MAC Addresses	D-3
Menu: Viewing the Switch's MAC Addresses	D-4
CLI: Viewing the Port and VLAN MAC Addresses	D-5
Viewing the MAC Addresses of Connected Devices	D-8

E Daylight Savings Time on ProCurve Switches

Index