

# Index

## Symbols

=> prompt ... C-58

## Numerics

802.1x

LLDP blocked ... 15-32

802.1X effect, LLDP ... 15-71

## A

access

manager ... 15-12

operator ... 15-12

Access Contrtroller Module

5300xl features not supported ... 12-8

access control server ... 12-4

Access Controller Module

BIOS POST event log messages ... 12-32

configuring client VLANs ... 12-19

configuring on network ... 12-14

configuring uplink ports ... 12-19

displaying status ... 12-24

downloading software ... 12-30

features of ... 12-7

general operation ... 12-3

managing ... 12-27

module operation ... 12-5

network address translation ... 12-11

operating rules ... 12-14

overview ... 12-5

resetting to factory defaults ... 12-30

routing support ... 12-10

uplink ports ... 12-6

VLAN base ... 12-18

VLANs ... 12-12

ACL

debug ... C-34, C-36

*See also* debug command.

gateway fails ... C-11

troubleshooting ... C-8

ACL resources ... 14-5

ACM, *see* Access Controller Module

Actions line ... 3-9, 3-10, 3-11

location on screen ... 3-9

address table, port ... B-13

address, network manager ... 15-4, 15-5

advertise location ... 15-48

alert log ... 5-20

alert types ... 5-21

disabling ... 5-25

setting the sensitivity level ... 5-24

sorting the entries ... 5-20

arp age, default ... 8-7

asterisk ... 3-10, 3-13, 6-27

asterisk, in traceroute ... C-55

authentication trap ... 15-19, 15-22

*See also* SNMP.

authentication trap, configuring ... 15-22

authorized IP managers

SNMP, blocking ... 15-3

auto MDI/MDI-X configuration, display ... 10-16

auto MDI/MDI-X operation ... 10-15, 10-16

auto MDI/MDI-X port mode, display ... 10-16

auto negotiation ... 10-4

Auto-10 ... 13-4, 13-7, 13-18

autonegotiate ... 15-48

## B

bandwidth

displaying utilization ... 5-17

BIOS POST messages ... 12-32

boot

*See also* reboot.

boot command ... 6-4, 6-18

boot ROM console ... A-4

boot ROM mode ... C-58

boot, from primary flash ... 6-19

Bootp ... 8-2, 8-12

Bootp table file ... 8-14

Bootptab file ... 8-13

effect of no reply ... C-7

operation ... 8-13

*See also* DHCP.

using with Unix systems ... 8-13

Bootp/DHCP differences ... 8-13

Bootp/DHCP, LLDP ... 15-44

broadcast limit ... 10-5, 10-14

broadcast storm ... 13-3, C-20

broadcast traffic, IPX ... 10-5, 10-14

browser interface

*See* web browser interface.

## C

### CDP

configuration, viewing ... 15-75

data collection ... 15-73

default CDP operation ... 15-73

disabled ... 15-73

general operation ... 15-74

LLDP neighbor data ... 15-72

mappings to LLDP data fields ... 15-73

neighbor devices ... 15-73

on individual ports ... 15-77

read-only operation ... 15-72, 15-74

Clear + Reset button combination ... 6-35

Clear button ... 5-10

restoring factory default configuration ... C-58

### CLI

context level ... 10-10

moving to or from the menu ... 4-7

client traffic ... 12-11

client VLANs ... 12-12

command line interface

*See* CLI.

communities, SNMP ... 15-13

viewing and configuring with the CLI ... 15-14

viewing and configuring with the menu ... 15-13

conceptual view ... 12-5

configuration ... 3-7

Bootp ... 8-13

comparing startup to running ... 6-6

console ... 7-3

copying ... A-23

download ... A-4

factory default ... 6-9, 8-2

IP ... 8-2

network monitoring ... B-23

permanent ... 6-7

permanent change defined ... 6-5

port ... 10-1

port trunk group ... 13-1

port, duplex ... 10-9

port, speed ... 10-9

quick ... 3-8

reboot to activate ... 3-13

restoring factory defaults ... C-57

saving from menu interface ... 3-10

serial link ... 7-3

SNMP ... 15-4, 15-5, 15-11

SNMP communities ... 15-13, 15-14

startup ... 3-10

system ... 7-9

Telnet access configuration ... 7-3

transferring ... A-23

trap receivers ... 15-19

viewing ... 6-6

web browser access ... 7-3

configuration file

browsing for troubleshooting ... C-50

multiple

configuration file, multiple

after first E.09.xx reboot ... 6-26

applicable software release ... 6-22, 6-23

applicable switch models ... 6-22

applications ... 6-23

asterisk ... 6-27

backupConfig ... 6-24

change policy ... 6-29

Clear + Reset button combination ... 6-35

copy from tftp host ... 6-37

copy to tftp host ... 6-37

create new file ... 6-25, 6-32, 6-33

current file in use ... 6-27

default reboot from primary ... 6-30

effect of E.09.xx download ... 6-28

erasing ... 6-34

factory default, E.09.xx installed ... 6-28

memory assignments ... 6-26

memory slot ... 6-24, 6-27, 6-30

minconfig ... 6-30, 6-34

newconfig ... 6-30

oldConfig ... 6-26, 6-28

override reboot policy ... 6-29

policy, override ... 6-31

power cycle ... 6-30

pre E.09.xx in one flash ... 6-26

primary boot path ... 6-27

reboot policy options ... 6-24

reboot policy, override ... 6-29

reboot process ... 6-25

reload ... 6-31

rename config file ... 6-32

reset ... 6-30

- running-config file ... 6-25
- running-config file operation ... 6-24
- secondary boot path ... 6-27
- sftp/scp transfer ... 6-39
- show config file content ... 6-29
- show multiple files ... 6-27
- slot 1, use ... 6-39
- startup-config ... 6-24
- startup-config file ... 6-25
- transition to multiple files ... 6-26
- Unable to copy ... 6-32
- workingConfig ... 6-24, 6-26, 6-28
- xmodem from host ... 6-38
- xmodem to host ... 6-38
- configuring uplink VLAN ... 12-19
- console ... C-7
  - configuring ... 7-3
  - ending a session ... 3-5
  - features ... 2-3
  - Main menu ... 3-7
  - navigation ... 3-9, 3-10
  - operation ... 3-10
  - starting a session ... 3-4
  - status and counters access ... 3-7
  - troubleshooting access problems ... C-5
- context level
  - global config ... 8-10
- copy
  - multiple config file, tftp ... 6-37
- CPU utilization ... B-6

## D

- date format ... C-27
- date, configure ... 7-13
- debug
  - overview ... C-34
  - session options ... C-34
- debug command
  - "debug" severity and Syslog servers ... C-38, C-44
  - configuring messaging ... C-40
  - destinations ... C-34, C-38
  - event ... C-36
  - event log ... C-34, C-44
  - operating notes ... C-44
  - OSPF ... C-37
  - RIP ... C-37
  - session configuration ... C-38

- show debug ... C-40
- structure ... C-34
- syntax ... C-36
- debug logging, LLDP ... 15-30
- default gateway ... 8-3
- default trunk type ... 13-10
- default VLAN ... 12-12
- Device Passwords Window ... 5-8
- DHCP ... 8-12
  - address problems ... C-7
  - effect of no reply ... C-7
  - manual gateway precedence ... 8-12
- DHCP/Bootp differences ... 8-13
- DHCP/Bootp process ... 8-12
- DHCP/Bootp, LLDP ... 15-44
- diagnostics tools ... C-45
  - browsing the configuration file ... C-50
  - ping and link tests ... C-45
- display commands
  - show commands ... 12-24
- displaying duplex information ... 15-64
- DNS name ... 5-4
- Domain Name Server ... 5-4
- downlink ports ... 12-6
- download ... A-4
  - See also* switch software.
  - switch-to-switch ... A-18
  - troubleshooting ... A-21
  - Xmodem ... A-16
- download software ... A-18
- download, TFTP ... A-4, A-5
- duplex advertisements ... 15-46
- duplicate MAC address
  - See* MAC address.
- Dyn1
  - See* LACP.

## E

- edge ports ... 14-4
- Emergency Location Id Number ... 15-57
- Emergency Location Identification Number ... 15-25
- ending a console session ... 3-5
- event log ... 3-7, C-27
  - navigation ... C-29
  - severity level ... C-27
  - use during troubleshooting ... C-27
  - with debug ... C-34, C-44

excessive packets ... 14-34

## F

factory default configuration

restoring ... 6-9, C-57

failure, switch software download ... A-22

fault detection ... 5-8

fault detection policy ... 5-8, 5-24

fault detection policy, setting ... 5-24

fault detection window ... 5-24

fault-tolerance ... 13-5

filter, source-port ... 14-33

firmware version ... B-6

flash memory ... 3-10, 6-3

flow control

constraints ... 10-5, 10-11

global ... 10-10, 10-11

global requirement ... 10-5, 10-10

jumbo packets ... 14-28, 14-32

per-port ... 10-5, 10-10, 10-11

flow control, effect on rate-limiting ... 14-7, 14-18

flow control, status ... B-10

flow control, terminal ... 7-3

format, date ... C-27

format, time ... C-27

friendly port names

*See* port names, friendly.

## G

gateway ... 8-3, 8-5, 8-12

routing fails ... C-11

gateway (IP) address ... 8-4, 8-6

gateway, manual config priority ... 8-12

gateway, on primary VLAN ... 8-4

giant packets ... 14-34

global config level ... 8-10

GMB

*See* guaranteed minimum bandwidth.

guaranteed minimum bandwidth

apportioning unallocated bandwidth ... 14-23

configuration ... 14-23

described ... 14-21

displaying configuration ... 14-6

displaying current configuration ... 14-25

granularity of bandwidth settings ... 14-26

operating notes ... 14-26

operation ... 14-21

outbound queue priority ... 14-22

starving queues ... 14-23

## H

Help ... 3-11, 5-13

Help line, about ... 3-9

Help line, location on screens ... 3-9

help, online inoperable ... 5-13

hop, router ... 8-10

HP Auto-MDIX feature ... 10-15

## I

IEEE 802.1AB/D9 ... 15-26

IEEE 802.1d ... C-19

IEEE 802.3ab ... 10-4

IEEE P802.1AB/D9 ... 15-31

IGMP

host not receiving ... C-13

not working ... C-13

statistics ... B-19

inactivity timeout ... 7-4

Inbound Telnet Enabled parameter ... C-6

Inconsistent value ... 15-40

installing ... 12-6

invalid input ... 4-12

IP ... 8-7

CLI access ... 8-6

configuration ... 8-2

DHCP/Bootp ... 8-2

duplicate address ... C-7

duplicate address, DHCP network ... C-7

effect when address not used ... 8-11

features available with and without ... 8-11

gateway ... 8-3

gateway (IP) address ... 8-4

menu access ... 8-5

multiple addresses in VLAN ... 8-3, 8-8

subnet ... 8-3, 8-8

subnet mask ... 8-2, 8-6

time server address ... 9-10, 9-19

Time-To-Live ... 8-7, 8-10

TTL ... 8-7, 8-10

using for web browser interface ... 5-4

web access ... 8-10

IP address

- for SNMP management ... 15-3
- multiple in a VLAN ... 8-8
- removing or replacing ... 8-10

IP preserve

- DHCP server ... 8-16
- overview ... 8-15
- rules, operating ... 8-16
- summary of effect ... 8-18

IPX

- network number ... B-7

IPX broadcast traffic ... 10-5, 10-14

## J

Java ... 5-4, 5-5

jumbo packets

- configuration ... 14-29
- excessive inbound ... 14-32
- flow control ... 14-28, 14-32
- GVRP operation ... 14-28
- management VLAN ... 14-32
- maximum size ... 14-27
- meshing ... 14-28
- MTU ... 14-27
- port adds and moves ... 14-28
- port speed ... 14-28
- security concerns ... 14-33
- standard MTU ... 14-27
- switch mesh domain ... 14-34
- through non-jumbo ports ... 14-33
- traffic sources ... 14-28
- troubleshooting ... 14-34
- VLAN tag ... 14-27
- voice VLAN ... 14-32

## K

key components ... 12-5

kill command ... 7-8

## L

LACP

- 802.1x, not allowed ... 13-21
- active ... 13-15
- CLI access ... 13-11
- default port operation ... 13-20
- described ... 13-6, 13-18
- Dyn1 ... 13-7

- dynamic ... 13-19
- enabling dynamic trunk ... 13-15
- full-duplex required ... 13-4, 13-18
- IGMP ... 13-23
- monitoring static trunk ... B-23
- no half-duplex ... 13-23
- operation not allowed ... C-13
- overview of port mode settings ... 13-5
- passive ... 13-15
- removing port from active trunk ... 13-16
- restrictions ... 13-21
- standby link ... 13-19
- status, terms ... 13-21
- STP ... 13-23
- trunk limit ... 13-19
- VLANs ... 13-23
- with 802.1x ... 13-21
- with port security ... 13-22

learning bridge ... 8-2

limit, broadcast ... 10-14

link speed, port trunk ... 13-3

link test ... C-46

- for troubleshooting ... C-45

link, serial ... 7-3

LLDP

- 802.1D-compliant switch ... 15-71
- 802.1x blocking ... 15-32
- 802.1X effect ... 15-71
- active port ... 15-25
- adjacent device ... 15-25
- advertisement ... 15-25
- advertisement content ... 15-43
- advertisement data ... 15-62
- advertisement, mandatory data ... 15-43
- advertisement, optional data ... 15-44
- advertisements, delay interval ... 15-39
- CDP neighbor data ... 15-72
- chassis ID ... 15-43
- chassis type ... 15-43
- clear statistics counters ... 15-68
- comparison with CDP data fields ... 15-73
- configuration options ... 15-28
- configuring optional data ... 15-44
- data options ... 15-29
- data read options ... 15-30
- data unit ... 15-26
- debug logging ... 15-30
- default ... 15-73

- default configuration ... 15-33
- DHCP/Bootp operation ... 15-32
- disable, per-port ... 15-42
- display neighbor data ... 15-65
- ELIN ... 15-25
- enable/disable, global ... 15-37
- features ... 15-24
- general operation ... 15-27
- global counters ... 15-68
- holdtime multiplier ... 15-39
- hub, packet-forwarding ... 15-28
- IEEE 802.1AB/D9 ... 15-26
- IEEE P802.1AB/D9 ... 15-31
- Inconsistent value ... 15-40
- information options ... 15-29
- invalid frames ... 15-69
- IP address advertisement ... 15-31
- IP address subelement ... 15-43
- IP address, advertisement ... 15-71
- IP address, DHCP/Bootp ... 15-44
- IP address, options ... 15-43
- IP address, version advertised ... 15-43
- Link-Layer Discovery Protocol ... 15-24
- LLDP-aware ... 15-26
- LLDPDU ... 15-26
- mandatory TLVs ... 15-71
- MIB ... 15-27, 15-31
- neighbor ... 15-26
- neighbor data remaining ... 15-71
- neighbor data, displaying ... 15-65
- neighbor statistics ... 15-68
- neighbor, maximum ... 15-70
- on 3400/6400cl switches ... 15-32
- operating rules ... 15-31
- operation ... 15-27
- optional data, configuring ... 15-45
- outbound packet options ... 15-29
- packet boundaries ... 15-27
- packet dropped ... 15-28
- packet time-to-live ... 15-30
- packet-forwarding ... 15-27, 15-71
- packets not forwarded ... 15-26
- per-port counters ... 15-69
- port description ... 15-44
- port ID ... 15-43
- port speed ... 15-46
- port trunks ... 15-31
- port type ... 15-43
- refresh interval ... 15-38
- reinitialization delay ... 15-40
- remote management address ... 15-30
- remote manager address ... 15-43
- reset counters ... 15-68
- rxonly ... 15-42
- setmib, delay interval ... 15-39
- setmib, reinit delay ... 15-41
- show advertisement data ... 15-62
- show commands ... 15-34, 15-36
- show outbound advertisement ... 15-63
- SNMP notification ... 15-29
- SNMP traps ... 15-29
- spanning-tree blocking ... 15-32
- standards compatibility ... 15-31
- statistics ... 15-68
- statistics, displaying ... 15-68
- system capabilities ... 15-44
- system description ... 15-44
- system name ... 15-44
- terminology ... 15-25
- time-to-live ... 15-28, 15-38
- TLV ... 15-27
- transmission frequency ... 15-28
- transmission interval, change ... 15-38
- transmit and receive ... 15-28
- transmit/receive modes ... 15-28
- transmit/receive modes, per-port ... 15-42
- trap notice interval ... 15-42
- trap notification ... 15-41
- trap receiver, data change notice ... 15-41
- TTL ... 15-28, 15-30
- txonly ... 15-42
- VLAN, untagged ... 15-71
- walkmib ... 15-31
- LLDPDU ... 15-26
- LLDP-MED
  - displaying speed ... 15-64
  - ELIN ... 15-57
  - enable or disable ... 15-28
  - endpoint support ... 15-48
  - fast start control ... 15-51
  - location data ... 15-56
  - medTlvenable ... 15-53
  - Neighbors MIB ... 15-65
  - topology change notification ... 15-50
  - Voice over IP ... 15-47
- load balancing

*See port trunk.*  
logging, command ... C-36  
logical port ... 13-8  
loop, network ... 13-3  
lost password ... 5-10

## M

MAC address ... 8-13, B-6, D-2  
  displaying detected devices ... D-8  
  duplicate ... C-20, C-25  
  learned ... B-13  
  per slot ... D-5  
  per-slot or per-port ... D-5  
  port ... D-2, D-4  
  same MAC, multiple VLANs ... D-6  
  switch ... D-2  
  VLAN ... D-2, D-5  
  walkmib ... D-5  
management  
  interfaces described ... 2-2  
  server URL ... 5-12, 5-13  
  server URL default ... 5-13  
management VLAN  
  *See VLAN.*  
manager access ... 15-12  
manager password ... 5-8, 5-10  
Manual, IP address ... 8-6  
MDI/MDI-X configuration, display ... 10-16  
MDI/MDI-X operation ... 10-15  
MDI/MDI-X port mode, display ... 10-16  
media type, port trunk ... 13-3  
memory  
  flash ... 3-10, 6-3  
  startup configuration ... 3-10  
menu interface  
  configuration changes, saving ... 3-10  
  moving to or from the CLI ... 4-7  
mesh  
  jumbo packets ... 14-34  
  monitoring ... B-23  
meshed ports, monitoring ... B-23  
MIB ... 15-4  
MIB listing ... 15-4  
MIB, HP proprietary ... 15-4  
MIB, standard ... 15-4  
mirroring  
  *See port monitoring.*

MLTS ... 15-26  
monitoring  
  *See port monitoring.*  
monitoring meshed ports ... B-23  
monitoring traffic ... B-23  
monitoring, port ... B-23  
Multiline Telephone system ... 15-26  
multinetting ... 8-3, 8-8  
  *See also ACLs.*  
multinetting, limit ... 8-8  
multiple configuration file  
  *See configuration file, multiple.*  
multiple forwarding database ... B-7, B-16  
multiple VLAN ... 15-3  
multi-port bridge ... 8-2

## N

NANP ... 15-26  
navigation, console interface ... 3-9, 3-10  
navigation, event log ... C-29  
network management functions ... 15-5, 15-13  
network manager address ... 15-4, 15-5  
network monitoring  
  traffic overload ... B-23  
Network Monitoring Port screen ... B-23  
network slow ... C-7  
North American Numbering Plan ... 15-26

## O

online help ... 5-13  
online help location ... 5-13  
operating system  
  *See switch software.*  
operation not allowed, LACP ... C-13  
operator access ... 15-12  
operator password ... 5-8, 5-10  
OS  
  *See switch software.*  
  version ... A-19  
OSPF  
  debug command ... C-37  
out-of-band ... 2-4

## P

password ... 5-8, 5-10  
  creating ... 5-8

- delete ... 3-7, 5-10
- if you lose the password ... 5-10
- lost ... 5-10
- manager ... 5-8
- operator ... 5-8
- set ... 3-7
- setting ... 5-9
- using to access browser and console ... 5-10
- PCM/PCM+
  - starting web browser ... 5-4
- PD ... 15-26
- ping test ... C-46
  - for troubleshooting ... C-45
- PoE ... 15-47
  - 802.3af ... 11-6
  - 802.3af standard ... 11-4
  - advertisements ... 15-56
  - cable ... 11-4
  - cabling, Cat-5 ... 11-4
  - configuration ... 11-10
  - configuration planning ... 11-19
  - disabling a port ... 11-23
  - EPS, defined ... 11-3
  - event log messages ... 11-23
  - initial software release ... 11-2
  - insufficient power ... 11-6
  - maximum load calculation ... 11-21
  - messages ... 11-23
  - minimum power requirement ... 11-6, 11-7
  - MPS, defined ... 11-3
  - non-PoE device support ... 11-6
  - oversubscribed ... 11-3
  - PD, defined ... 11-3
  - pin pairs ... 11-4
  - port identifiers ... 11-12
  - power allocation ... 11-7
  - power supplies ... 11-2
  - priority class, defined ... 11-3
  - priority policies ... 11-20
  - priority, port ... 11-6, 11-8
  - PSE, defined ... 11-3
  - related publications ... 11-4
  - RPS, defined ... 11-3
  - security ... 11-20
  - setmib ... 11-12
  - status ... 15-52
  - supported switches ... 11-2
  - terminology ... 11-3
  - threshold, power ... 11-5, 11-11
  - unnneeded power ... 11-6
  - viewing status ... 11-15
  - VLAN assignments ... 11-19
  - wire pairs, cable ... 11-4
- Port
  - duplex, view ... 10-8
  - speed, view ... 10-8
- port
  - address table ... B-13
  - auto negotiation ... 10-4
  - broadcast limit ... 10-14
  - CLI access ... 10-8
  - context level ... 10-10
  - counters ... B-10
  - counters, reset ... B-10
  - fiber-optic ... 10-5
  - MAC address ... D-4, D-5
  - menu access ... 10-6
  - monitoring ... B-23
  - monitoring, static LACP trunk ... B-23
  - monitoring, VLAN ... B-23
  - speed change, transceiver ... 10-4
  - traffic patterns ... B-10
  - trunk
    - See* port trunk.
    - utilization ... 5-17
    - web browser interface ... 5-17
    - web browser access ... 10-18
- Port Configuration ... 10-1, 13-1
- port names, friendly
  - configuring ... 10-19
  - displaying ... 10-21
  - summary ... 10-18
- port security
  - port trunk restriction ... 13-3
  - trunk restriction ... 13-8
- port trunk ... 13-2
  - See also* LACP.
  - bandwidth capacity ... 13-2
  - caution ... 13-3, 13-9, 13-17
  - CLI access ... 13-11
  - default trunk type ... 13-10
  - enabling dynamic LACP ... 13-15
  - IGMP ... 13-8
  - limit ... 13-2
  - limit, combined ... 13-19



- link requirements ... 13-3
- logical port ... 13-8
- media requirements ... 13-7
- media type ... 13-3
- menu access to static trunk ... 13-9
- monitor port restrictions ... 13-8
- monitoring ... B-23
- nonconsecutive ports ... 13-2
- port security restriction ... 13-8
- removing port from static trunk ... 13-15
- requirements ... 13-7
- SA/DA ... 13-25
- spanning tree protocol ... 13-8
- static trunk ... 13-7
- static trunk, overview ... 13-5
- static/dynamic limit ... 13-19
- STP ... 13-8
- STP operation ... 13-7
- traffic distribution ... 13-7
- Trk1 ... 13-7
- trunk (non-protocol) option ... 13-6
- trunk option described ... 13-24
- types ... 13-6
- VLAN ... 13-8
- VLAN operation ... 13-7
- web browser access ... 13-17
- port trunk group
  - interface access ... 13-1
- port, active ... 15-25
- port-based access control
  - event log ... C-15
  - LACP not allowed ... 13-21
  - rules of operation ... 12-14, 12-31
  - troubleshooting ... C-15
- power interruption, effect on event log ... C-27
- power-over-ethernet
  - See* PoE.
- Power-Sourcing Equipment ... 15-27
- Procurve
  - support URL ... 5-13
- prompt, => ... C-58
- PSAP ... 15-27
- PSE ... 15-27
- Public Safety Answering Point ... 15-27
- public SNMP community ... 15-5, 15-13

## Q

- QoS resources ... 14-5
- quick configuration ... 3-8
- quick start ... 1-8, 8-3

## R

- RADIUS, web browser access ... 5-8
- rate-limiting
  - caution ... 14-4
  - configuration ... 14-5, 14-14
  - displaying configuration ... 14-6, 14-14
  - edge ports ... 14-4
  - effect of flow control ... 14-7, 14-18
  - effect on port trunks ... 14-9
  - exceeding configured rate ... 14-5, 14-9, 14-13, 14-18
  - intended use ... 14-4
  - note on testing ... 14-8, 14-17
  - operating notes ... 14-7, 14-18
  - operation ... 14-5, 14-12
  - optimum packet size ... 14-9, 14-19
  - per-port only ... 14-4
  - purpose ... 14-4
  - resource consumption ... 14-5
  - security ... 14-5, 14-13
  - traffic filters ... 14-9, 14-19
- reboot ... 3-8, 3-10, 3-12
  - See also* boot.
- reboot time ... 6-18
- reboot, actions causing ... 6-4
- rebooting the switch
- reconfigure ... 3-10
- reload ... 6-4, 6-18, 6-20
- remote session, terminate ... 7-8
- reset ... 3-12, 6-11
- Reset button ... 6-4
  - restoring factory default configuration ... C-58
- reset port counters ... B-10
- resetting the switch
  - factory default reset ... C-57
- restricted write access ... 15-12
- RFC
  - See* MIB.
- RFC 1493 ... 15-4
- RFC 1515 ... 15-4
- RFC 2922 ... 15-31
- RFC2737 ... 15-31

- RFC2863 ... 15-31
- RIP
  - debug command ... C-37
- RIP broadcast traffic, broadcast traffic, RIP ... 10-5, 10-14
- RMON ... 15-4
- RMON groups supported ... 15-22
- router
  - gateway ... 8-6
- router, hop ... 8-10
- routing
  - gateway fails ... C-11
  - OSPF debug ... C-37
  - RIP debug ... C-37
  - traceroute ... C-53
- RS-232 ... 2-4
- running-config, viewing ... 6-6
  - See also* configuration.

## S

- SCP/SFTP
  - session limit ... A-15
- secure copy
  - See* SCP/SFTP.
- secure FTP
  - See* SCP/SFTP.
- security ... 5-11, 7-3
  - username and password ... 5-8
  - web browser access, RADIUS ... 5-8
- Self Test LED
  - behavior during factory default reset ... C-58
- serial number ... B-6
- setmib ... 11-12
- setmib, delay interval ... 15-39
- setmib, reinit delay ... 15-41
- setting fault detection policy ... 5-24
- setup screen ... 1-8, 8-3
- severity code, event log ... C-27
- sftp/scp, multiple config file ... 6-39
- show management ... 8-7, 9-10, 9-19
- show tech ... C-50
- slow network ... C-7
- SNMP ... 15-3
  - CLI commands ... 15-12
  - communities ... 15-4, 15-5, 15-12, 15-13
  - Communities screen ... 15-11
  - configure ... 15-4, 15-5

- IP ... 15-3
- notification, LLDP
  - SNMP notification ... 15-29
- public community ... 15-5, 15-13
- setmib ... 11-12
- thresholds ... 15-19
- traps ... 15-4, 15-19
- traps, well-known ... 15-19
- walkmib ... D-5, D-6
- SNMP communities
  - configuring with the CLI ... 15-14
  - configuring with the menu ... 15-13
- SNMP trap, LLDP ... 15-41
- SNMPv3
  - "public" community access caution ... 15-6
  - access ... 15-5
  - assigning users to groups ... 15-7
  - communities ... 15-11
  - enable command ... 15-7
  - enabling ... 15-6
  - group access levels ... 15-10, 15-11
  - groups ... 15-9
  - network management problems with snmpv3
    - only ... 15-6
  - notification ... 15-16
  - restricted-access option ... 15-6
  - set up ... 15-5
  - traps ... 15-16
  - users ... 15-5
- SNTp
  - broadcast mode ... 9-3, 9-11
  - broadcast mode, requirement ... 9-3
  - configuration ... 9-5
  - disabling ... 9-12
  - enabling and disabling ... 9-10
  - event log messages ... 9-28
  - manual config priority ... 8-12
  - menu interface operation ... 9-28
  - operating modes ... 9-3
  - poll interval ... 9-13
  - See also* TimeP.
  - selecting ... 9-3
  - show management ... 9-10
  - unicast mode ... 9-3, 9-11
  - unicast time polling ... 9-25
  - unicast, address priority ... 9-25
  - unicast, deleting addresses ... 9-27
  - unicast, replacing servers ... 9-27

- viewing ... 9-5, 9-9
  - software
    - See* switch software.
  - software image
    - See* switch software.
  - software version ... B-6
  - sorting alert log entries ... 5-20
  - source-port filter ... 14-33
  - spanning tree
    - fast-uplink, troubleshooting ... C-20
    - global information ... B-17
    - information screen ... B-17
    - problems related to ... C-20
    - show tech, copy output ... C-51
    - statistics ... B-17
    - using with port trunking ... 13-8
  - special ports used ... 12-7
  - specific VID ... 12-19
  - SSH
    - TACACS exclusion ... A-14
    - troubleshooting ... C-20
  - stack management
    - See* stacking.
  - stacking ... 3-5, 3-6, 3-12, 3-14
  - standard MIB ... 15-4
  - starting a console session ... 3-4
  - startup-config, viewing ... 6-6
    - See also* configuration.
  - statistics ... 3-7, B-4
  - statistics, clear counters ... 3-12, 6-11
  - status and counters
    - access from console ... 3-7
  - status and counters menu ... B-5
  - status overview screen ... 5-6
  - subnet ... 8-3, 8-8
  - subnet mask ... 8-4, 8-6
    - See also* IP.
  - support
    - URL ... 5-12
    - URL Window ... 5-12
  - switch console
    - See* console.
  - switch setup menu ... 3-8
  - switch software
    - download using TFTP ... A-4
    - download, failure indication ... A-22
    - download, switch-to-switch ... A-18
    - download, troubleshooting ... A-21
    - download, using TFTP ... A-4
    - software image ... A-3
    - version ... A-6, A-17
  - Syslog
    - configure server IP ... C-36
    - configuring messaging ... C-40
    - facility, user ... C-44
    - logging command ... C-36, C-38
    - operating notes ... C-44
    - operation ... C-39
    - See also* debug command.
    - servers ... C-34
    - severity, "debug" ... C-38, C-44
  - system configuration screen ... 7-9
  - System Name parameter ... 7-10
- ## T
- TACACS
    - SSH exclusion ... A-14
  - Telnet ... 3-4
    - terminate session, kill command ... 7-8
  - Telnet, enable/disable ... 7-4
  - Telnet, outbound ... 7-6
  - Telnet, problem ... C-6
  - terminal access, lose connectivity ... 7-6
  - terminal type ... 7-3
  - terminate remote session ... 7-8
  - TFTP
    - download ... A-5
    - threshold setting ... 15-5, 15-13
    - thresholds, SNMP ... 15-19
    - time format ... C-27
    - time protocol
      - selecting ... 9-3
    - time server ... 8-2
    - time zone ... 7-10, 7-13
    - time, configure ... 7-13
  - TimeP ... 8-3, 8-5
    - assignment methods ... 9-2
    - disabling ... 9-23
    - enabling and disabling ... 9-20
    - manual config priority ... 8-12
    - poll interval ... 9-23
    - selecting ... 9-3
    - server address listing ... 9-10, 9-19
    - show management ... 9-19
    - viewing and configuring, menu ... 9-17

- viewing, CLI ... 9-19
- timesync, disabling ... 9-23
- Time-To-Live ... 8-3, 8-5, 8-6, 8-10
  - See also* TTL.
- time-to-live, LLDP ... 15-28
- Time-To-Live, on primary VLAN ... 8-4
- TLV ... 15-27
- TLVs, mandatory ... 15-71
- top talker ... 13-26
- traceroute
  - asterisk ... C-55
  - blocked route ... C-56
  - fails ... C-54
- traffic monitoring ... 15-5, 15-13
- traffic, monitoring ... B-23
- traffic, port ... B-10
- transceiver, fiber-optic ... 10-5
- transceiver, speed change ... 10-4
- trap ... 5-25
  - authentication ... 15-19
  - authentication trap ... 15-22
  - CLI access ... 15-19
  - event levels ... 15-21
  - limit ... 15-19
  - receiver ... 15-19
  - SNMP ... 15-19
- trap notification ... 15-41
- trap receiver ... 15-4, 15-5
  - configuring ... 15-19, 15-20
- troubleshooting
  - ACL ... C-8
  - approaches ... C-4
  - browsing the configuration file ... C-50
  - console access problems ... C-5
  - diagnosing unusual network activity ... C-7
  - diagnostics tools ... C-45
  - fast-uplink ... C-19
  - ping and link tests ... C-45
  - restoring factory default configuration ... C-57
  - spanning tree ... C-19
  - switch software download ... A-21
  - switch won't reboot, shows => prompt ... C-58
  - unusual network activity ... C-7
  - using the event log ... C-27
    - web browser access problems ... C-5
- troubleshooting, SSH. ... C-20
- trunk
  - See* port trunk.

- TTL ... 8-3, 8-5, 8-6, 8-7
  - manual config priority ... 8-12
  - on primary VLAN ... 8-4
  - See also* Time-To-Live.
- TTL, IP ... 8-10
- TTL, LLDP ... 15-28
- Type-Length-Value ... 15-27
- types of alert log entries ... 5-21

## U

- unauthorized access ... 15-22
- undersize packets ... 14-34
- Universal Resource Locator
  - See* URL.
- Unix, Bootp ... 8-13
- unrestricted write access ... 15-12
- unusual network activity ... C-7
- up time ... B-6
- URL ... 15-4
  - browser interface online help location ... 5-13
  - management ... 5-13
  - management server ... 5-12, 5-13
  - Procurve ... 5-13, 15-4
  - support ... 5-12, 5-13
- user name, using for browser or console
  - access ... 5-8, 5-10
- users, SNMPv3
  - See* SNMPv3.
- using extended CLI ... 12-27
- using the passwords ... 5-10
- utilization, port ... 5-17

## V

- version, OS ... A-19
- version, switch software ... A-6, A-17
- view
  - duplex ... 10-8
  - Port speed ... 10-8
- VLAN ... 8-4, C-25
  - address ... 15-3
  - Bootp ... 8-13
  - configuring Bootp ... 8-13
  - device not seen ... C-24
  - event log entries ... C-27
  - ID ... 4-14
  - link blocked ... C-20

- MAC address ... D-2, D-5
- management and jumbo packets ... 14-32
- management VLAN, SNMP block ... 15-3
- monitoring ... B-3, B-23
- multinet ... 8-3
- multinetting ... 8-3, 8-8
- multiple ... 15-3
- multiple IP addresses ... 8-3, 8-8
- port configuration ... C-24
- primary ... 8-3
- reboot required ... 3-8
- same MAC, multiple VLANs ... D-6
- subnet ... 8-3, 8-8
- support enable/disable ... 3-8
- switch software download ... A-4
- tagging broadcast, multicast, and unicast traffic ... C-24
- VLAN ID
  - See* VLAN.
- VoIP ... 15-47
- VT-100 terminal ... 7-3

## W

- walkmib ... 15-31, D-5, D-6
- warranty ... 1-ii
- web agent enabled ... 5-2
- web agent,
  - advantages ... 2-5
- web browser access configuration ... 7-3
- web browser enable/disable ... 7-4
- web browser interface ... 2-5
  - access parameters ... 5-8
  - alert log ... 5-6, 5-20
  - alert log details ... 5-21
  - bandwidth adjustment ... 5-18
  - bar graph adjustment ... 5-18
  - disable access ... 5-2
  - enabling ... 5-4
  - error packets ... 5-17
  - fault detection policy ... 5-8, 5-24
  - fault detection window ... 5-24
  - features ... 2-5
  - first-time install ... 5-7
  - first-time tasks ... 5-7
  - main screen ... 5-16
  - online help ... 5-13
  - online help location specifying ... 5-13

- online help, inoperable ... 5-13
- overview ... 5-16
- Overview window ... 5-16
- password lost ... 5-10
- password, setting ... 5-9
- port status ... 5-19
- port utilization ... 5-17
- port utilization and status displays ... 5-17
- screen elements ... 5-16
- security ... 5-2, 5-8
- standalone ... 5-4
- status bar ... 5-22
- status indicators ... 5-23
- status overview screen ... 5-6
- system requirements ... 5-4
- troubleshooting access problems ... C-5
- URL default ... 5-13
- URL, management server ... 5-14
- URL, support ... 5-14
- web site, HP ... 15-4
- world wide web site, ProCurve
  - See* Procurve.
- write access ... 15-12
- write memory, effect on menu interface ... 3-13

## X

- Xmodem OS download ... A-16

*—This page is intentionally unused—*