
Index

Symbols

=> prompt ... C-44

Numerics

802.1x

LLDP blocked ... 13-31

802.1X effect, LLDP ... 13-49

802.3u auto negotiation standard ... 10-4

A

access

manager ... 13-13

operator ... 13-13

Actions line ... 3-9, 3-10, 3-11

location on screen ... 3-9

address table, port ... B-14

address, network manager ... 13-4, 13-5

alert log ... 5-19

alert types ... 5-20

disabling ... 5-24

setting the sensitivity level ... 5-23

sorting the entries ... 5-19

applicable products ... 1-ii

asterisk ... 3-10, 3-13

authentication trap ... 13-20, 13-23

See also SNMP.

authentication trap, configuring ... 13-23

authorized IP managers

SNMP, blocking ... 13-3

auto MDI/MDI-X configuration, display ... 10-15

auto MDI/MDI-X operation ... 10-15

auto MDI/MDI-X port mode, display ... 10-15

auto negotiation ... 10-4, 10-5

Auto-10 ... 12-5, 12-8

auto-discovery ... 13-5

B

bandwidth

displaying utilization ... 5-16

boot

effect on configuration ... 3-13

See also reboot.

boot ROM console ... A-3

boot ROM mode ... C-44

Bootp

Bootp table file ... 8-14

Bootptab file ... 8-14

effect of no reply ... C-8

operation ... 8-14

using with Unix systems ... 8-14

Bootp/DHCP, LLDP ... 13-40

broadcast limit ... 10-6, 10-11

broadcast storm ... 12-5, C-15

browser interface

See web browser interface.

C

CDP

configuration, viewing ... 13-52

data collection ... 13-51

default CDP operation ... 13-51

disabled ... 13-51

general operation ... 13-52

mappings to LLDP data fields ... 13-50

neighbor devices ... 13-51

neighbors table ... 13-53

on individual ports ... 13-54

read-only operation ... 13-50, 13-51

chassis over-temperature

See temperature

Class of Service

priority settings mapped to downstream

devices ... 10-29

Clear button ... 5-11

restoring factory default configuration ... C-43

CLI

context level ... 10-11

command line interface

See CLI.

communities, SNMP ... 13-14

viewing and configuring with the CLI ... 13-16

viewing and configuring with the menu ... 13-14

- configuration ... 3-7
 - Bootp ... 8-14
 - comparing startup to running ... 6-5
 - console ... 7-3
 - copying ... A-18
 - download ... A-3
 - factory default ... 6-8, 8-2
 - IP ... 8-3
 - network monitoring ... B-24
 - permanent ... 6-6
 - permanent change defined ... 6-4
 - port ... 10-1, 12-1
 - port trunk groups ... 10-1, 12-1
 - quick ... 3-8
 - reboot to activate ... 3-13
 - restoring factory defaults ... C-43
 - saving from menu interface ... 3-10
 - serial link ... 7-3
 - SNMP ... 13-4, 13-5, 13-12
 - SNMP communities ... 13-14, 13-16
 - startup ... 3-10
 - system ... 7-10
 - Telnet access configuration ... 7-3
 - transferring ... A-18
 - trap receivers ... 13-20
 - viewing ... 6-5
 - web browser access ... 7-3
- configuration file
 - browsing for troubleshooting ... C-39
- console ... C-8
 - configuring ... 7-3
 - ending a session ... 3-5
 - features ... 2-3
 - Main menu ... 3-7
 - navigation ... 3-9, 3-10
 - operation ... 3-10
 - starting a session ... 3-4
 - status and counters access ... 3-7
 - troubleshooting access problems ... C-6
- context level
 - global config ... 8-11
- copyright ... 1-ii
- CPU utilization ... B-6

D

- date format ... C-23
- date, configure ... 7-14

- debug command
 - "debug" severity and Syslog servers ... C-34
 - event ... C-28
 - event log ... C-33
 - syntax ... C-28
- debug logging
 - configuration, viewing ... C-32
 - general operation ... C-27
 - session, not current ... C-33
 - status, viewing ... C-32
 - Syslog configuration ... C-29
 - Syslog logging disabled ... C-29
 - Syslog server, view configuration ... C-32
 - Syslog, number of servers ... C-27
 - Telnet session ... C-27
- debug logging, LLDP ... 13-29
- default gateway ... 8-3
- default trunk type ... 12-11
- Device Passwords Window ... 5-8
- DHCP
 - address problems ... C-8
 - configuring DHCP relay ... 8-12
 - effect of no reply ... C-8
 - Option 82 ... 8-12
 - setting up a DHCP helper ... 8-12
- DHCP/Bootp
 - operation ... 8-12
 - process ... 8-13
- DHCP/Bootp, LLDP ... 13-40
- diagnostics tools ... C-34
 - browsing the configuration file ... C-39
 - ping and link tests ... C-35
- disclaimer ... 1-ii
- DNS name ... 5-4
- Domain Name Server ... 5-4
- download
 - switch-to-switch ... A-14
 - troubleshooting ... A-17
 - Xmodem ... A-11
- download OS ... A-14
- download, TFTP ... A-3, A-4
- downstream device (QoS)
 - effect of priority settings ... 10-29
- duplicate MAC address
 - See MAC address
- Dyn1
 - See LACP.

E

- ending a console session ... 3-5
- event log ... 3-7, C-23
 - navigation ... C-25
 - PoE messages ... 11-14
 - See also* debug logging.
 - severity level ... C-23
 - temperature messages ... C-5
 - use during troubleshooting ... C-23
 - with debug ... C-33
- excessive packets ... 10-24

F

- factory default configuration
 - restoring ... 6-8, C-43
- failure, OS download ... A-17
- fan failure ... C-5
- fault detection ... 5-8
 - policy ... 5-8
 - setting the policy ... 5-23
 - window ... 5-23
- fault detection policy ... 5-23
- fault-tolerance ... 12-5
- filter, source-port ... 10-23
- firmware version ... B-6
- flash memory ... 3-10, 6-2
- flow control ... 10-5
 - jumbo packets ... 10-18, 10-22
- flow control, status ... B-10
- flow control, terminal ... 7-3
- format, date ... C-23
- format, time ... C-23
- friendly port names
 - See* port names, friendly.

G

- gateway ... 8-3, 8-5
- gateway (IP) address ... 8-4, 8-6
- giant packets ... 10-24
- global config level, CLI ... 8-11

H

- Help ... 3-11, 5-13
 - location on menu screen ... 3-9
 - online inoperable ... 5-13

I

- IEEE 802.1AB-2005 ... 13-30
- IEEE 802.1d ... C-15
- IEEE 802.3ab ... 10-5
- IGMP
 - host not receiving ... C-9
 - not working ... C-9
 - statistics ... B-20
- inactivity timeout ... 7-4
- Inbound Telnet Enabled parameter ... C-7
- Inconsistent value ... 13-36
- invalid input ... 4-13
- IP
 - CLI access ... 8-7
 - configuration ... 8-3
 - DHCP/Bootp ... 8-3
 - duplicate address ... C-8
 - duplicate address, DHCP network ... C-8
 - effect when address not used ... 8-11
 - gateway ... 8-3
 - gateway (IP) address ... 8-4
 - menu access ... 8-5
 - multinetting ... 8-9
 - multiple addresses in VLAN ... 8-9
 - stacking ... 8-5
 - subnet ... 8-9
 - subnet mask ... 8-3, 8-6
 - subnetting ... 8-9
 - using for web browser interface ... 5-4
 - web access ... 8-11
- IP address
 - for SNMP management ... 13-3
 - multiple in a VLAN ... 8-9
 - removing or replacing ... 8-10
- IP preserve
 - DHCP server ... 8-16
 - overview ... 8-16
 - rules, operating ... 8-16
 - summary of effect ... 8-19
- IPX
 - network number ... B-7

J

- Java ... 5-4
- Java applets ... 5-5
- jumbo packets
 - configuration ... 10-19

- excessive inbound ... 10-23
- flow control ... 10-18, 10-22
- GVRP operation ... 10-18
- management VLAN ... 10-22
- maximum size ... 10-17
- MTU ... 10-17
- port adds and moves ... 10-18
- port speed ... 10-18
- security concerns ... 10-23
- standard MTU ... 10-18
- through non-jumbo ports ... 10-24
- traffic sources ... 10-18
- troubleshooting ... 10-24
- VLAN tag ... 10-17
- voice VLAN ... 10-22

K

- kill command ... 7-9

L

LACP

- 802.1x, not allowed ... 12-23
- active ... 12-16, 12-20
- CLI access ... 12-12
- default port operation ... 12-21
- described ... 12-7, 12-18
- Dyn1 ... 12-8
- dynamic ... 12-20
- enabling dynamic trunk ... 12-16
- full-duplex required ... 10-5, 12-5, 12-18
- IGMP ... 12-24
- no half-duplex ... 12-25
- operation not allowed ... C-10
- outbound traffic distribution ... 12-26
- overview ... 12-5
- passive ... 12-16, 12-20
- removing port from active trunk ... 12-17
- restrictions ... 12-23
- standby link ... 12-20
- status, terms ... 12-22
- STP ... 12-24
- VLANs ... 12-24
- with 802.1x ... 12-23
- with port security ... 12-23

- learning bridge ... 8-2
- limit, broadcast ... 10-11

- link speed, port trunk ... 12-3

- link test

- description ... C-35
 - for troubleshooting ... C-35

- link, serial ... 7-3

LLDP

- 802.1D-compliant switch ... 13-49
- 802.1x blocking ... 13-31
- 802.1X effect ... 13-49
- active port ... 13-26
- advertisement ... 13-26
- advertisement content ... 13-39
- advertisement data ... 13-41
- advertisement, mandatory data ... 13-39
- advertisement, optional data ... 13-40
- advertisements, delay interval ... 13-36
- CDP neighbor data
 - CDP
 - LLDP neighbor data ... 13-50

- chassis ID ... 13-39

- chassis type ... 13-39

- clear statistics counters ... 13-46

- comparison with CDP data fields ... 13-50

- configuration options ... 13-27

- data options ... 13-28

- data read options ... 13-30

- data unit ... 13-26

- debug logging ... 13-29

- default ... 13-51

- default configuration ... 13-32

- DHCP/Bootp operation ... 13-31

- disable, per-port ... 13-39

- display neighbor data ... 13-43

- enable/disable, global ... 13-34

- general operation ... 13-27

- global counters ... 13-46

- holdtime multiplier ... 13-35

- hub, packet-forwarding ... 13-27

- IEEE 802.1AB-2005 ... 13-26, 13-30

- Inconsistent value ... 13-36

- information options ... 13-28

- invalid frames ... 13-47

- IP address advertisement ... 13-31

- IP address subelement ... 13-39

- IP address, advertisement ... 13-49

- IP address, DHCP/Bootp ... 13-40

- IP address, options ... 13-39

- IP address, version advertised ... 13-39

- LLDP-aware ... 13-26
- LLDPDU ... 13-26
- MIB ... 13-27, 13-30
- neighbor ... 13-26
- neighbor data remaining ... 13-49
- neighbor data, displaying ... 13-43
- neighbor statistics ... 13-46
- neighbor, maximum ... 13-49
- operating rules ... 13-31
- optional data, configuring ... 13-41
- packet boundaries ... 13-27
- packet dropped ... 13-27
- packet time-to-live ... 13-29
- packet-forwarding ... 13-27
- packets not forwarded ... 13-26
- per-port counters ... 13-47
- port description ... 13-40
- port ID ... 13-39
- port trunks ... 13-31
- port type ... 13-39
- refresh interval ... 13-35
- reinitialization delay ... 13-37
- remote management address ... 13-29
- remote manager address ... 13-39
- reset counters ... 13-46
- rxonly ... 13-39
- setmib, delay interval ... 13-36
- setmib, reinit delay ... 13-37
- show advertisement data ... 13-41
- show commands ... 13-32, 13-33
- show outbound advertisement ... 13-42
- SNMP notification ... 13-28
- spanning-tree blocking ... 13-31
- standards compatibility ... 13-30
- statistics, displaying ... 13-46
- system capabilities ... 13-40
- system description ... 13-40
- system name ... 13-40
- terminology ... 13-26
- time-to-live ... 13-27, 13-35
- TLV ... 13-26
- transmission frequency ... 13-27
- transmission interval, change ... 13-35
- transmit/receive modes ... 13-28
- transmit/receive modes, per-port ... 13-39
- trap notice interval ... 13-38
- trap notification ... 13-37
- trap receiver, data change notice ... 13-37

- TTL ... 13-27, 13-29
- txonly ... 13-39
- VLAN, untagged ... 13-49
- walkmib ... 13-30

- LLDPDU ... 13-26

- load balancing

- See* port trunk.

- logical port ... 12-9

- loop, network ... 12-5

- lost password ... 5-11

M

- MAC address ... 8-14, B-6, D-2

- duplicate ... C-15, C-21

- learned ... B-13, B-14

- listing connected devices ... D-6

- port ... D-2, D-3

- switch ... D-2

- VLAN ... D-2

- management

- server URL ... 5-12, 5-13

- server URL default ... 5-13

- management VLAN

- See* VLAN.

- manager access ... 13-13

- manager password ... 5-8, 5-10

- MDI/MDI-X configuration, display ... 10-15

- MDI/MDI-X port mode, display ... 10-15

- media type, port trunk ... 12-3

- memory

- flash ... 3-10, 6-2

- startup configuration ... 3-10

- menu interface

- configuration changes, saving ... 3-10

- MIB ... 13-4

- MIB listing ... 13-4

- MIB, HP proprietary ... 13-4

- MIB, standard ... 13-4

- mirroring

- See* port monitoring.

- monitoring traffic ... B-24

- multinetting ... 8-9

- multinetting, limit ... 8-9

- multiple VLAN ... 13-3

- multi-port bridge ... 8-2

N

- navigation, console interface ... 3-9, 3-10
- navigation, event log ... C-25
- network management functions ... 13-5
- network manager address ... 13-4, 13-5
- network monitoring
 - traffic overload ... B-24
- Network Monitoring Port screen ... B-24
- network slow ... C-8
- Not Current One, debug session ... C-33
- notices ... 1-ii

O

- online help ... 5-13
- online help location ... 5-13
- operation not allowed, LACP ... C-10
- operator access ... 13-13
- operator password ... 5-8, 5-10
- OS
 - version ... A-5, A-12, A-15
- OS download
 - failure indication ... A-17
 - switch-to-switch download ... A-14
 - troubleshooting ... A-17
 - using TFTP ... A-3
- out-of-band ... 2-3
- over-temperature
 - See* temperature

P

- password ... 5-8, 5-10
 - creating ... 5-8
 - delete ... 3-7, 5-11
 - if you lose the password ... 5-11
 - lost ... 5-11
 - manager ... 5-8
 - operator ... 5-8
 - set ... 3-7
 - setting ... 5-9
 - using to access browser and console ... 5-10
- ping test
 - description ... C-35
 - for troubleshooting ... C-35
- PoE
 - CLI commands ... 11-7
 - configuring ... 11-7

- disabling a port ... 11-8
- event log messages ... 11-14
- operation on ProCurve switches ... 11-2
- planning and implementation ... 11-13
- port priority ... 11-5
- power supplies ... 11-3
- pre-802.3af-standard devices ... 11-9
- priority class ... 11-3
- viewing power status ... 11-10

port

- address table ... B-14
- auto negotiation ... 10-4, 10-5
- broadcast limit ... 10-11
- CLI access ... 10-7
- context level ... 10-11
- control configuration ... 10-1, 12-1
- counters ... B-10
- counters, reset ... B-10
- fiber-optic ... 10-5
- full-duplex, LACP ... 10-5
- MAC address ... D-3, D-4
- menu access ... 10-6
- queues
 - See* port-based priority.
- traffic patterns ... B-10
- trunk
 - See* port trunk.
- utilization ... 5-16
 - web browser interface ... 5-16
- web browser access ... 10-17

port names, friendly

- configuring ... 10-34
- displaying ... 10-36
- summary ... 10-33

port security

- port trunk restriction ... 12-4
- trunk restriction ... 12-9

port trunk ... 12-2

- caution ... 12-5, 12-10, 12-17
- CLI access ... 12-12
- default trunk type ... 12-11
- enabling dynamic LACP ... 12-16
- IGMP ... 12-9
- LACP ... 10-5
- LACP, full duplex required ... 12-5
- link requirements ... 12-3
- logical port ... 12-9
- media requirements ... 12-8

- media type ... 12-3
- menu access to static trunk ... 12-10
- monitor port restrictions ... 12-9
- nonconsecutive ports ... 12-2
- number of trunks ... 12-5
- port groups for Series 2800 ... 12-3, 12-4, 12-8
- port groups for Series 4100 10/100/1000
 - Module ... 12-9
- port security restriction ... 12-9
- removing port from static trunk ... 12-16
- requirements ... 12-8
- SA/DA ... 12-26
- See also* LACP.
- Series 2800 boundary ... 12-3, 12-4, 12-8
- Series 4100 10/100/1000 Module
 - boundary ... 12-9
- spanning tree protocol ... 12-9
- static trunk ... 12-8
- static trunk, overview ... 12-5
- STP ... 12-9
- STP operation ... 12-8
- traffic distribution ... 12-8
- Trk1 ... 12-8
- trunk (non-protocol) option ... 12-7
- trunk option described ... 12-25
- types ... 12-7
- VLAN ... 12-9
- VLAN operation ... 12-8
- web browser access ... 12-18
- port trunk group
 - interface access ... 10-1, 12-1
- port, active ... 13-26
- port-based access control
 - event log ... C-10
 - LACP not allowed ... 12-23
 - troubleshooting ... C-10
- port-based priority
 - 802.1q VLAN tagging ... 10-28
 - configuring ... 10-31
 - messages ... 10-32
 - outbound port queues ... 10-29
 - overview ... 10-28
 - priority/queue table ... 10-29
 - requirement for continuity ... 10-30
 - rules of operation ... 10-30
 - troubleshooting ... 10-32
 - viewing configuration ... 10-31
- power interruption, effect on event log ... C-23

- power over ethernet
 - See* PoE.
- ProCurve Networking
 - support URL ... 5-13
- prompt, => ... C-44
- public SNMP community ... 13-5
- publication data ... 1-ii

Q

- quick configuration ... 3-8
- quick start ... 1-6, 8-4

R

- reboot ... 3-8, 3-10, 3-12
- reboot, actions causing ... 6-3
- reboot, effect on configuration ... 3-13
- reconfigure ... 3-10
- remote session, terminate ... 7-9
- reset ... 3-12, 6-10
- Reset button
 - restoring factory default configuration ... C-43
- reset port counters ... B-10
- resetting the switch
 - factory default reset ... C-43
- restricted access ... 13-14
- restricted write access ... 13-13
- RFC
 - See* MIB.
- RFC 1493 ... 13-4
- RFC 1515 ... 13-4
- RFC 2922 ... 13-30
- RFC2737 ... 13-30
- RFC2863 ... 13-30
- RMON ... 13-4
- router
 - gateway ... 8-6
- RS-232 ... 2-3
- running-config, viewing ... 6-5
 - See also* configuration.

S

- SCP/SFTP
 - session limit ... A-10
- secure copy
 - See* SCP/SFTP.

- secure FTP
 - See* SCP/SFTP.
- security ... 5-11, 7-3
- Self Test LED
 - behavior during factory default reset ... C-43
- serial number ... B-6
- session
 - See* debug logging.
- setmib, delay interval ... 13-36
- setmib, reinit delay ... 13-37
- setting fault detection policy ... 5-23
- setup screen ... 1-6, 8-4
- severity code, event log ... C-23
- show tech ... C-40
- slow network ... C-8
- SNMP ... 13-3
 - CLI commands ... 13-13
 - communities ... 13-4, 13-5, 13-12, 13-13, 13-14
 - configure ... 13-4, 13-5
 - IP ... 13-3
 - notification, LLDP
 - SNMP notification ... 13-28
 - public community ... 13-5, 13-14
 - restricted access ... 13-14
 - thresholds ... 13-20
 - traps ... 13-4, 13-20
 - traps, well-known ... 13-20
- SNMP communities
 - configuring with the CLI ... 13-16
 - configuring with the menu ... 13-14
- SNMP trap, LLDP ... 13-37
- SNMPv3
 - "public" community access caution ... 13-6
 - access ... 13-5
 - assigning users to groups ... 13-8
 - communities ... 13-12
 - enable command ... 13-7
 - enabling ... 13-6
 - group access levels ... 13-11, 13-12
 - groups ... 13-10
 - network management problems with snmpv3
 - only ... 13-6
 - notification ... 13-18
 - restricted-access option ... 13-6
 - set up ... 13-5
 - traps ... 13-18
 - users ... 13-5
- SNTP ... 9-3
- broadcast mode ... 9-2, 9-9
- broadcast mode, requirement ... 9-3
- configuration ... 9-4
- disabling ... 9-11
- enabling and disabling ... 9-9
- event log messages ... 9-24
- menu interface operation ... 9-24
- operating modes ... 9-2
- poll interval ... 9-12
- See also* TimeP.
- selecting ... 9-3
- unicast mode ... 9-3, 9-10
- unicast time polling ... 9-21
- unicast, address priority ... 9-22
- unicast, deleting addresses ... 9-23
- unicast, replacing servers ... 9-23
- viewing ... 9-4, 9-8
- software version ... B-6
- sorting alert log entries ... 5-19
- source-port filter ... 10-23
- spanning tree
 - configuration ... 10-10
 - fast-uplink
 - troubleshooting ... C-15
 - global information ... B-18
 - information screen ... B-18
 - problems related to ... C-15
 - show tech, copy output ... C-40
 - statistics ... B-18
 - using with port trunking ... 12-9
 - viewing port operating statistics ... 10-10
- SSH
 - debug logging ... C-27
 - TACACS exclusion ... A-10
 - troubleshooting ... C-16
- standard MIB ... 13-4
- starting a console session ... 3-4
- startup-config, viewing ... 6-5
 - See also* configuration.
- statistics ... 3-7, B-4
- statistics, clear counters ... 3-12, 6-10
- status and counters
 - access from console ... 3-7
- status and counters menu ... B-5
- status overview screen ... 5-6
- subnet ... 8-9
- subnet mask ... 8-5, 8-6
 - See also* IP.

- subnetting ... 8-9
- support
 - changing default URL ... 5-13
 - URL ... 5-12
 - URL Window ... 5-12
- switch console
 - See* console.
- switch setup menu ... 3-8
- switch software
 - See* OS.
- switch-to-switch download ... A-14
- Syslog
 - facility, user ... C-34
 - See* debug logging.
 - severity, "debug" ... C-34
- system configuration screen ... 7-10
- System Name parameter ... 7-11

T

- TACACS
 - SSH exclusion ... A-10
- Telnet ... 3-4
 - terminate session, kill command ... 7-9
- Telnet, enable/disable ... 7-4
- Telnet, outbound ... 7-6
- Telnet, problem ... C-7
- temperature
 - fan failure ... C-5
 - messages ... C-5
- terminal access, lose connectivity ... 7-6
- terminal mode, changing dynamically ... 7-8
- terminal type ... 7-3
- terminate remote session ... 7-9
- TFTP
 - download ... A-4
 - OS download ... A-3
- threshold setting ... 13-5
- thresholds, SNMP ... 13-20
- time format ... C-23
- time protocol
 - selecting ... 9-3
- time server ... 8-3
- time, configure ... 7-14
- TimeP ... 8-4, 8-5
 - assignment methods ... 9-2
 - disabling ... 9-20
 - enabling and disabling ... 9-18

- poll interval ... 9-20
- selecting ... 9-3
- viewing and configuring, menu ... 9-15
- viewing, CLI ... 9-17
- timesync, disabling ... 9-20
- Time-To-Live ... 8-4, 8-5
- time-to-live, LLDP ... 13-27
- traffic monitoring ... 13-5, B-24
- traffic, port ... B-10
- transceiver, fiber-optic ... 10-5
- trap ... 5-24
 - authentication ... 13-20
 - authentication trap ... 13-23
 - CLI access ... 13-20
 - event levels ... 13-22
 - limit ... 13-20
 - receiver ... 13-20
 - SNMP ... 13-20
- trap notification ... 13-37
- trap receiver ... 13-4, 13-5
 - configuring ... 13-20, 13-22
- troubleshooting
 - approaches ... C-3
 - browsing the configuration file ... C-39
 - console access problems ... C-6
 - diagnosing unusual network activity ... C-8
 - diagnostics tools ... C-34
 - fast-uplink ... C-15
 - OS download ... A-17
 - ping and link tests ... C-35
 - restoring factory default configuration ... C-43
 - spanning tree ... C-15
 - SSH ... C-16
 - switch won't reboot, shows => prompt ... C-44
 - unusual network activity ... C-8
 - using the event log ... C-23
 - web browser access problems ... C-6
- trunk
 - See* port trunk.
- TTL ... 8-4, 8-5
- TTL, LLDP ... 13-27
- types of alert log entries ... 5-20

U

- unauthorized access ... 13-23
- undersize packets ... 10-24
- Unix, Bootp ... 8-14

- unrestricted write access ... 13-13
- unusual network activity ... C-8
- up time ... B-6
- URL
 - browser interface online help location ... 5-13
 - management ... 5-13
 - management server ... 5-12, 5-13
 - ProCurve Networking ... 5-13
 - support ... 5-12, 5-13
- user name, using for browser or console
 - access ... 5-8, 5-10
- users, SNMPv3
 - See* SNMPv3.
- using the passwords ... 5-10
- utilization, port ... 5-16

V

- version, OS ... A-5, A-12, A-15
- VLAN ... 8-4, C-21, D-2
 - address ... 13-3
 - Bootp ... 8-14
 - configuring Bootp ... 8-14
 - device not seen ... C-20
 - event log entries ... C-23
 - link blocked ... C-15
 - management and jumbo packets ... 10-22
 - management VLAN, SNMP block ... 13-3
 - monitoring ... B-3
 - multinetting ... 8-9
 - multiple ... 13-3
 - multiple IP addresses ... 8-9
 - OS download ... A-3
 - port configuration ... C-20
 - primary ... 8-4
 - reboot required ... 3-8
 - subnet ... 8-9
 - support enable/disable ... 3-8
 - tagging broadcast, multicast, and unicast
 - traffic ... C-20
- VLAN ID ... 4-15
 - See also* VLAN.
- VT-100 terminal ... 7-3

W

- walkmib ... 13-30
- warranty ... 1-ii

- web agent
 - advantages ... 2-5
 - enabled ... 5-2
- web browser access configuration ... 7-3
- web browser enable/disable ... 7-4
- web browser interface
 - access parameters ... 5-8
 - alert log ... 5-6, 5-19
 - alert log details ... 5-20
 - bandwidth adjustment ... 5-17
 - bar graph adjustment ... 5-17
 - disable access ... 5-2
 - enabling ... 5-4
 - error packets ... 5-16
 - fault detection policy ... 5-8, 5-23
 - fault detection window ... 5-23
 - features ... 2-5
 - first-time install ... 5-7
 - first-time tasks ... 5-7
 - main screen ... 5-15
 - online help ... 5-13
 - online help location specifying ... 5-13
 - online help, inoperable ... 5-13
 - overview ... 5-15
 - Overview window ... 5-15
 - password lost ... 5-11
 - password, setting ... 5-9
 - port status ... 5-18
 - port utilization ... 5-16
 - port utilization and status displays ... 5-16
 - screen elements ... 5-15
 - security ... 5-2, 5-8
 - standalone ... 5-4
 - status bar ... 5-22
 - status indicators ... 5-22
 - status overview screen ... 5-6
 - system requirements ... 5-4
 - troubleshooting access problems ... C-6
 - URL default ... 5-13
 - URL, management server ... 5-14
 - URL, support ... 5-14
- web site, ProCurve Networking ... 13-4
- write access ... 13-13
- write memory, effect on menu interface ... 3-13

X

- Xmodem OS download ... A-11